

Quick no meter Quick test.

Individually Select 2A, 4A, 6A, 8A, 12A, 16A, 18A, 22A, 25A and complete the steps below:

1. Select Channel and make sure not in use.
2. Press [Set/Mode] button on to display "FSK"
3. Press [THRU/TUNE] button and make sure display indicates "TUNE". (Signal Strength bar should indicate one bar while tuning)
4. Press PTT on Microphone
5. Signal Strength should be 8 signal strength bars if antenna system is tuning properly.

Note: While in a marina frequently the 2A and 4A may have less bars as a result of the signal bouncing back off other boats. Re check out of the marina if that occurs. If you are missing bars, re-test with a SWR meter in line using the same process as above.

