SUSHITECH AUTOMATIC TRANSDUCER PRIVATE LIMITED

PUNYABOOMI LAYOUT ,1st CROSS BIDHARHALLI ,VIRGONAGAR POST,BANGALORE ,560049.

ABOUT SAFE LOAD INDICATOR

- Today with the increasing demand for Saftey in all types of crane SLI is very important for crane.
- This safety load indicator will alert the overload situation and protect from any accident.
- A safe load indicator has the capability of detecting the angle, weight of load lifted, and ground radius of any lifting device.
- It controls the lifting equipment to the level that it tries to keep the machinery functioning as per the manufacturer's suggested safety charts.

WELCOME TO OUR COMPANY



Keeping in mind simple and reliable with cost effective sushitech research technologies manufactures safe load indicator for all types of cranes

COMPANY PROFILE

<u>HISTORY</u>

OUR COMPANY WAS ESTABLISHED IN 2013.

COMPANY EXPERIENCE

- I. WE has more than 7 years of experience in field of Safe load indicator .
- II. We has full knowledge of installation , maintenance , manufacturing and software coding of any types of sli for any types of crane.
- III. No Doubt Our company is new in market of SLI, But We are not new in this field.

PRODUCT

CRANE APPLICATIONS

1. CRAWLER CRANE

The Indicators suitable for CRAWLER CRANE crane for sushitech's range are st 1000 SMART, Safe Load Indicator / Load Moment Indicator System. The load sensing is done by Load sensor . Sushitech's SLI also provides overload protection , A2B and angle cutoff protection with better accuracy


TENSIOMETER

LIMIT SWITCH

AI QUAD CAMERA



DISPLAY

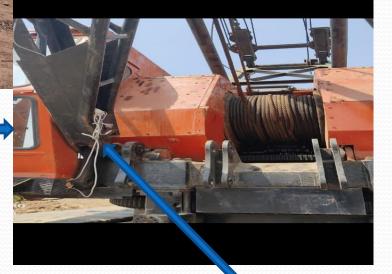

ANGLE SENSOR

*** ESCORT F-15 CRANE**

The Indicators suitable for Mobile crane for sushitech's range are st1003, Safe Load Indicator / Load Moment Indicator / Total Load Moment Indicator System with angle and a2b cutoff system. In this type of system operator can set the boom length manually also



TENSIOMETER



DISPLAY



CUT-OFF





LIMIT SWITCH



CABLE REELING DRUM

• 2. TRUCK MOUNTED MOBILE CRANE.

The Indicators suitable for telescopic Boom Mobile crane for sushitech's range are st1003, Safe Load Indicator / Load Moment Indicator / Total Load Moment Indicator System with angle and a2b cutoff system. In this type of system operator can set the boom length manually also.











• 3. BOOMLIFT

Boom lifts are used to lift people and materials up into the air.
Depending on the boom type – straight or articulating –
it can also be used to maneuver obstacles and round corners.
A boom lift is mainly used to reach out and over opposed to a scissor lift which is mainly used to lift up.



us injury


bo and of i be tru

-

AZARD

PLATE FITTING



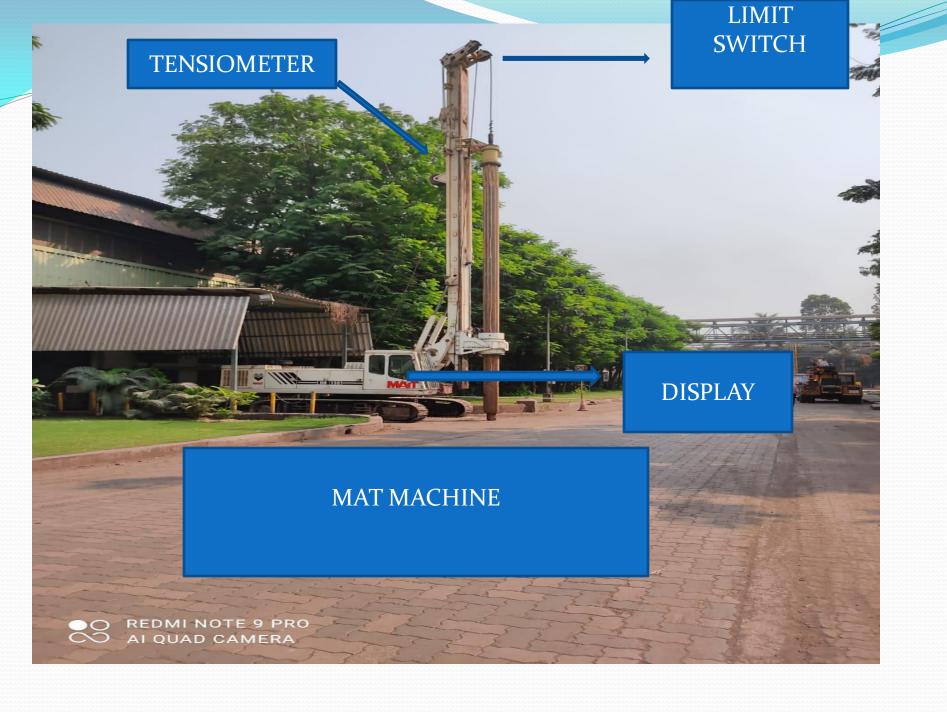


COMPANY MANUFACTURING & PRODUCTION.

-


SAFE LOAD INDICATOR LOAD TESTING WORK ON SITE.

SALES GRAPH

SALES AVERAGE

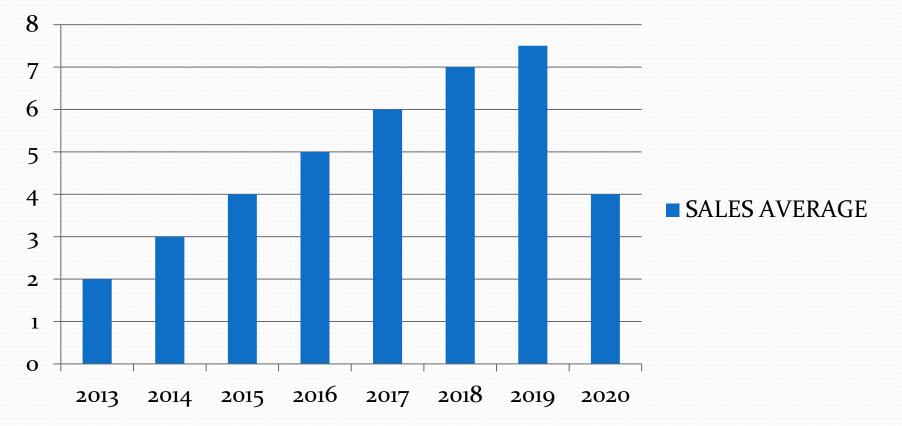

HOW OUR COMPANY WORKS

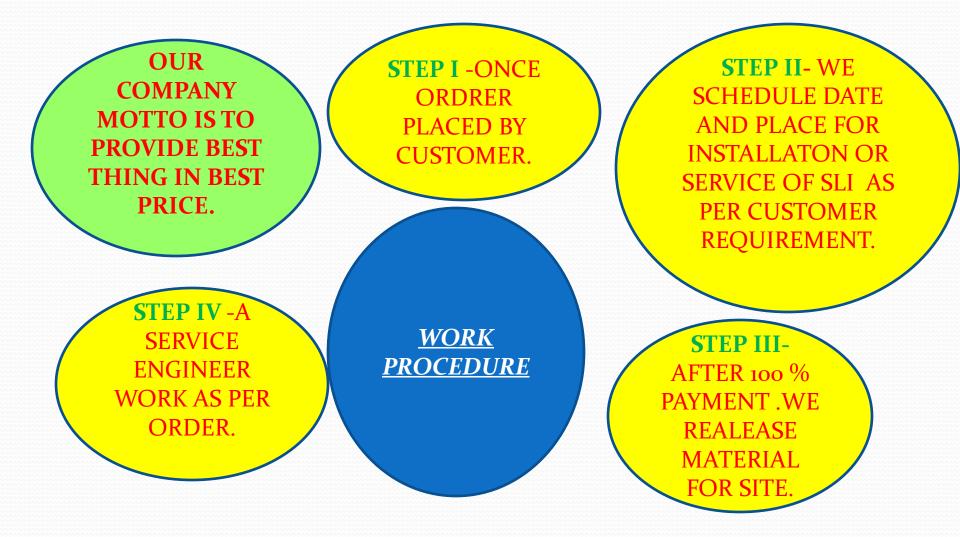


SERVICE AFTER SALES

 Warranty for 12 months , during warranty parts & Service are free. Only Traveling , fooding & lodging will be charged.

- WE PROVIDE ASSURANCE TO CONSUMER THAT THEY CAN ENJOY LONG , RELIABLE SERVICE AND PROTECTION FROM HARM.
- Dear Customers Replace Your Old SLI With New One with One year Warranty with only 20 to 25 Thousand depend on system for better Accuracy.

RELATIONSHIP WITH CUSTOMER

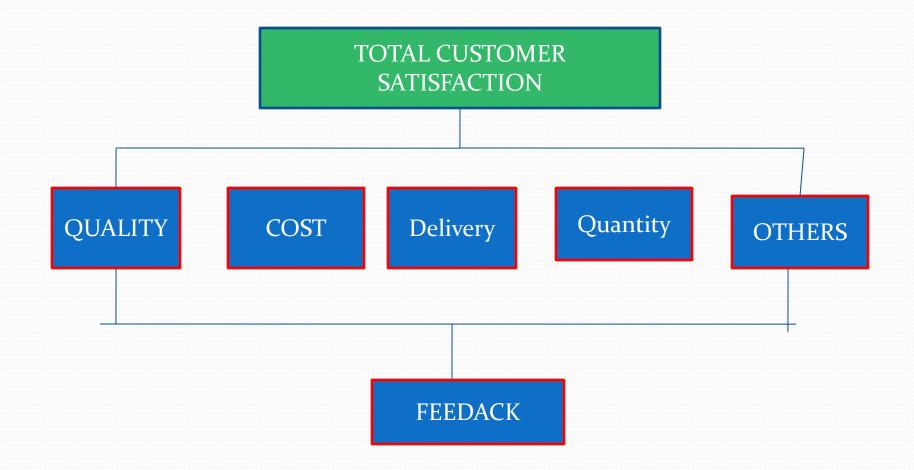

GET IN TOUCH WITH US



- sushitechindia@gmail.com
- sushitech45111@gmail.com
- cptiwari2sushitechsli@gmail.com



PROPRIETOR MR. OMPRAKASH TIWARI – 9737745111.

HEAD OF MARKETING DEPARTMENT <u>MR.CHANDRAPRAKASH TIWARI - 8722545111</u>. OFFICE OPERATOR NO.- 8698345111.

OUR BRANCH IN INDIA.

HEAD OFFICE

ADDRESS-B/O8, RAM BALRAM APT ,AMBAVADI , NALLASOPARA (E). BRANCH IN BANGALORE . ADDRESS -NO.30,PUNYABHOOMI LAYOUT 1 ,BIDDARHALLI, BANGALORE. BRANCH IN AHMEDABAD ADDRESS - H/ 17 Shreya Exotica Vastral Ahmedabad

THANK YOU

