

Maine Printer Supply (207) 810-2300 (207) 510-7048
183 US Route 1 STE D Scarborough, ME 04074



Resetting the DR 630 DRUM Instructions

HOW TO RESET BROTHER DR630 DRUM FOR BROTHER DCP/MFC SERIES PRINTER

[MFCL2707DW](#) [MFC-L2720](#) [MFC-L2740DW](#)

- 1 - Open the front toner compartment door
- 2 - Press and hold the "OK" button for a couple of seconds
- 3 - After about 2 seconds, the message "Replace Drum?" will appear
- 4 - For DCP models, press the arrows to reset the drum counter
- 5 - For MFC models, you will press "1" to reset the counter
- 6 - Close the toner compartment door

HOW TO RESET BROTHER DR630 DRUM ONLY FOR THE FOLLOWING BROTHER PRINTERS,

[HL-L2300D](#) [HL-L2320D](#) [HL-L2321D](#)

- 1 - Open the front compartment
- 2 - Press and hold the "GO" button until all the LEDs light up
- 3 - Once all four LEDs light up, press "GO"
- 4 - Close the front compartment door"
- 5 - And make sure your Drum light is off

HOW TO RESET DR630 DRUM FOR ALL OTHER BROTHER HL PRINTERS

[HL-L2305W](#) [HL-L2315DW](#) [HL-L2340DW](#) [HL-L2360DN](#) [HL-L2360DW](#) [HL-L2380DW](#) [HL-L2340DW](#)
[HL-L2380DW](#)

- 1 - Open the front compartment door
- 2 - Press and hold the "OK" button for about 2 seconds
- 3 - When "Drum Unit" appears on the display, press "OK"
- 4 - Press the arrow button until the display reads "Reset"
- 5 - Reset the counter to zero
- 6 - Close the front compartment door