Page 14



Standard are the Obvious Con-Serv Qualities: Table of contents

Saving Our World's Water User Friendly = Quality Construction = Performance = Low Cost to Operate = Inexpensive to Purchase

CON-SERV MFG Reverse Osmosis Membrane Replacement Instructions

- 1. Turn off the system (if isolation valve is available, close it)
- 2. Disconnect the hoses or tubing from the end cap of the pressure vessels. (some models may not require this to remove end cap)
- 3. Remove retaining pins or clamps from the pressure vessels
- 4. Push the old membrane out of the vessel in the direction of the feed flow
- 5. Record the serial numbers of the new membranes
- 6. Lightly lubricate the brine seals of the new membranes with clean water.
- 7. Install the new membranes in the direction of flow with the brine seal end going in last
- 8. Lightly lubricate the end cap internal and external o-rings with glycerin
- 9. Install the endcaps and secure them with the retaining hardware
- 10. Reconnect any hoses and fittings insuring proper threading and tightness
- 11. Verify retaining hardware in place correctly

