



P.O. Box 99
300 Robertson Dr.
Elizabethton, TN 37644/37643
Phone: (423) 543-5210
Mobile: (423) 483-0293
Fax: (423) 543-8500
Email: sales@colonialmachinerysales.com
sales@theoakleyco.com
Web: www.colonialmachinerysales.com

NEW, USED, RECONDITIONED WOODWORKING MACHINERY, PARTS, TOOLING AND RELATED EQUIPMENT

Attached is an illustrated list of new parts we manufacture and have in inventory for immediate shipment. These are wear parts that have to be replaced periodically.

We are parting out various machines for used parts and casting as follows:

 
- BELL MACHINES: 24, 424, & 424A
- MORTISERS: 80, 180, & 112
- DOVETAILER: 200
- GLUE & DOWEL: 108, 109, & 408
- GREENLEE TENON: 542 & 545
- JENKINS TENON: 145
- CHALLONER: 720
- ONSROUD PROFILERS: LINEAR, ROTARY, & ROUND
- WHITNEY PLANERS: 33, 290, 97, & 970
- OLIVER STRAITOPLANE: 170-E, 170, & 2170
- MATTISON MOULDERS: 226, 229, & 276
- MATTISON: MOST PARTS FOR LATHES & RIPSAWS
(SURPLUS OF LATHE CUTTER COMPONENTS)
- DIEHL: D8 & D12
- OAKLEY: ALL PARTS FOR MOST MACHINES

CONTACT US FOR CURRENT PRICES



**COLONIAL MACHINERY
SALES, INC.**

P.O. Box 99
300 Robertson Dr.
Elizabethton, TN 37644/37643
Phone: (423) 543-5210
Mobile: (423) 483-0293
Fax: (423) 543-8500
Email: sales@colonialmachinerysales.com
sales@theoakleyco.com
Web: www.colonialmachinerysales.com

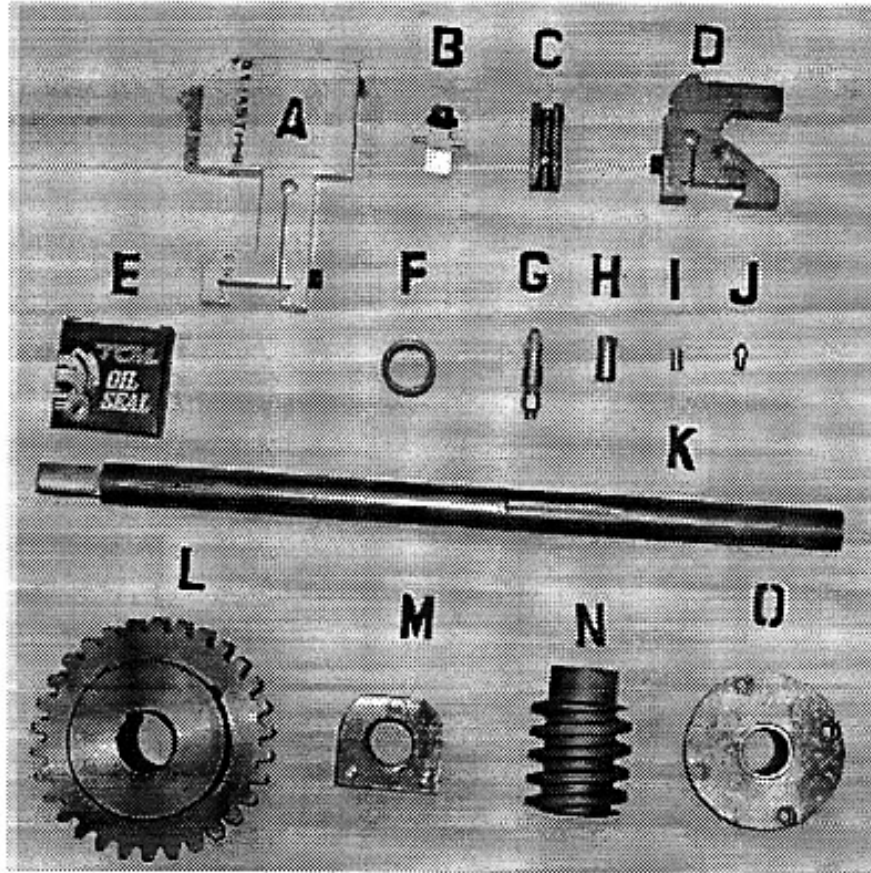


PARTS FOR BELL 24 & 424

DESCRIPTION	PART #
A- BELL 424 ONLY ESCAPEMENT BLOCKS (ALUMINUM)	42
B- DOWEL PUSHER BLOCKS (DRIVERS)	05
C- DOWEL ADAPTER STEEL(DOWEL SIZE REQ'D)	03
D- BELL 424 ONLY INJECTOR NOZZLE BRACKET	02
E- BELL 24 & 424 SEAL	12
F- BUSHING BRASS BELL 24 & 424	11
G- COMPLETE GLUE TIP ASSEMBLY 424 ONLY	01
H- GLUE INJECTOR BODY	1-A
I- GLUE INJECTOR INSERT	1-B
J- GLUE INJECTOR TIPS	04
K- TRAVERSE WORM SHAFT	79
L- BELL 24 & 424 TRAVERSE WORM GEAR	09
M- TRAVERSE NUT (PEDESTAL) 2" THICK SPECIFY LEFT OR RIGHT & THREAD PER INCH	
N- BELL 24 & 424 TRAVERSE WORM	10
O- FRONT TRAVERSE DRIVE SHAFT SUPPORT BUSHING	40
P- TRAVERSE SCREWS (LEFT OR RIGHT) NOT SHOWN	



**COLONIAL MACHINERY
SALES, INC.**

 P.O. Box 99
300 Robertson Dr.
Elizabethton, TN 37644/37643
Phone: (423) 543-5210
Mobile: (423) 483-0293
Fax: (423) 543-8500
Email: sales@colonialmachinerysales.com
sales@theoakleyco.com
Web: www.colonialmachinerysales.com

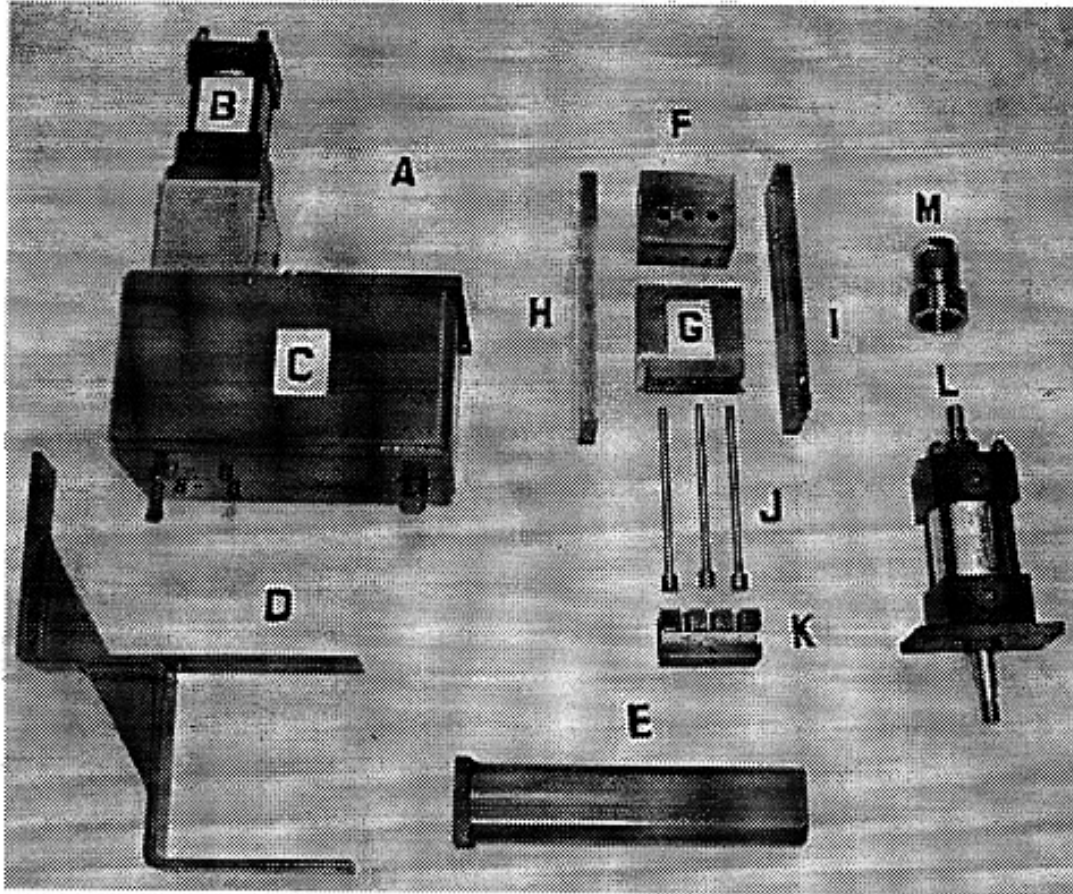


BELL 424 GLUE PUMP PARTS & ASSEMBLY

DESCRIPTION	PART #
A - COMPLETE GLUE PUMP	BGPA-0
B - SINGLE ROD AIR CYLINDER	BGPA-15
C - GLUE TANK	BGPA-3
D - MOUNTING BRACKET	BGPA-2
E - MOUNTING BEAM	BGPA-1
F - GLUE INJECTOR PUMP BODY	BGPA-8
G - ADJUSTABLE STOP	BGPA-9
H - LEFT HAND PUMP SIDE PLATE	BGPA-6
I - RIGHT HAND PUMP SIDE PLATE	BGPA-7
J - PISTON-3 REQUIRED	BGPA-1
K - PISTON CONNECTOR	BGPA-10
L - DOUBLE ROD AIR CYLINDER	BGPA-16
M - GLUE PUMP METERING UNIT FOR DOUBLE ROD CYLINDER	BGPA-17



**COLONIAL MACHINERY
SALES, INC.**

 P.O. Box 99
300 Robertson Dr.
Elizabethton, TN 37644/37643
Phone: (423) 543-5210
Mobile: (423) 483-0293
Fax: (423) 543-8500
Email: sales@colonialmachinerysales.com
sales@theoakleyco.com
Web: www.colonialmachinerysales.com

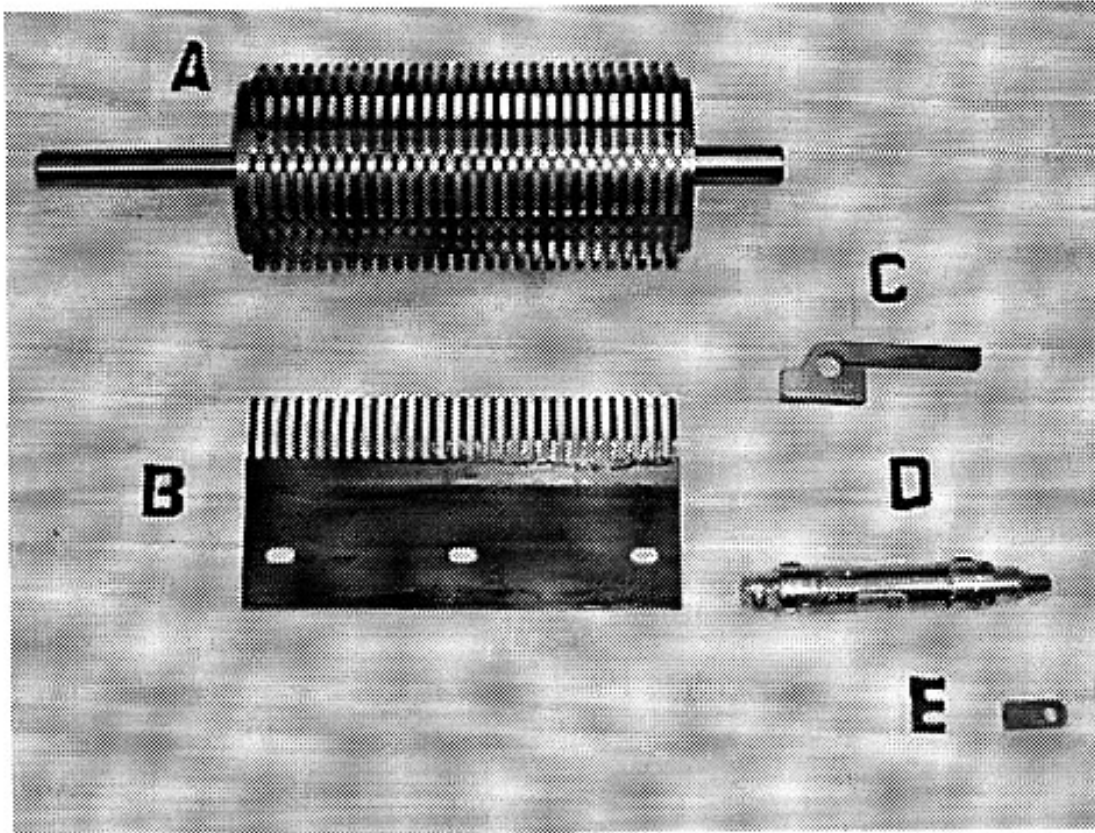


BELL 424 DOWEL HOPPER PARTS

DESCRIPTION	PART #
A - PADDLE WHEEL (ROTOR)-(UNIVERSAL)	BDHA-6
B - PADDLE WHEEL RAKE	BDHA-8
C - DOWEL RELEASE LEVER ARM	BDHA-22
D - AIR CYLINDER	BDHA-20
E - HOPPER CYLINDER ROD EYE MOUNTING ADAPTER	BDHA-21



**COLONIAL MACHINERY
SALES, INC.**

 P.O. Box 99
300 Robertson Dr.
Elizabethton, TN 37644/37643
Phone: (423) 543-5210
Mobile: (423) 483-0293
Fax: (423) 543-8500
Email: sales@colonialmachinerysales.com
sales@theoakleyco.com
Web: www.colonialmachinerysales.com

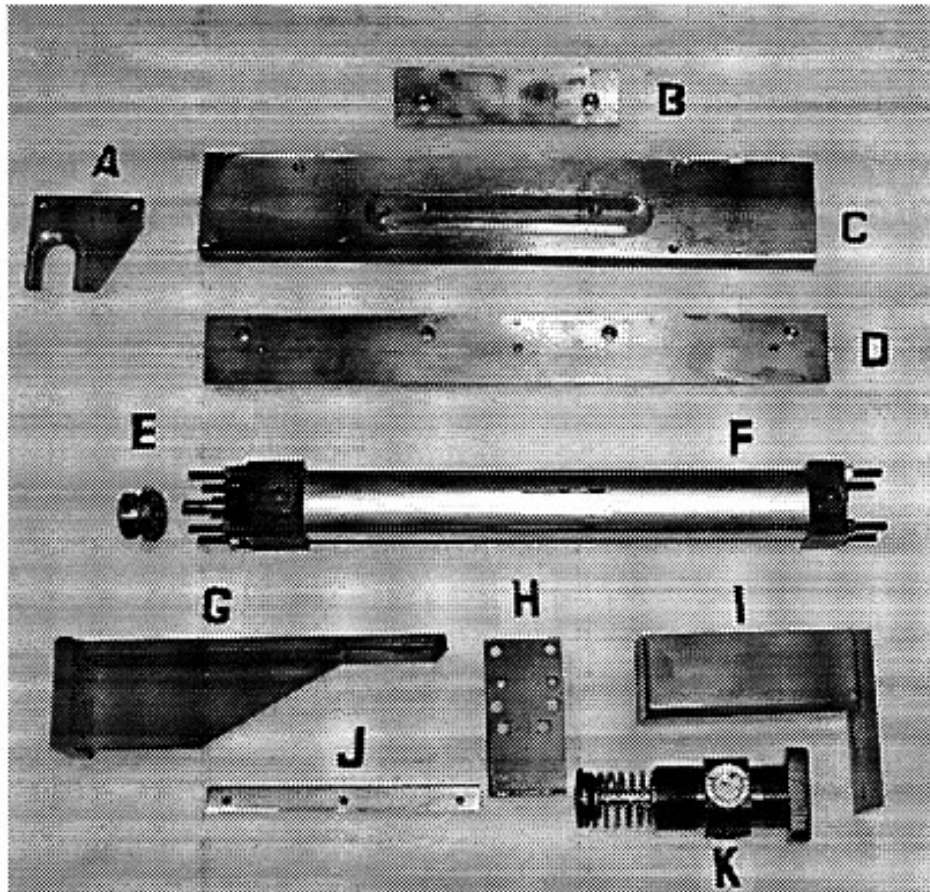


424 SHUTTLE PARTS

DESCRIPTION	PART#
A - SHUTTLE CYLINDER ROD ADAPTER YOKE SPECIFY RIGHT OR LEFT	BSCA 10-B
B - INJECTOR NOZZLE DOVETAIL MOUNTING BAR	BSCA 15
C - SHUTTLE INJECTOR CARRIAGE SPECIFY RIGHT OR LEFT	BSCA 4-B
D - SHUTTLE TABLE SLIDE	BSCA 3
E - CYLINDER ROD NUT CLEVIS	BSCA 7
F - CYLINDER-AIR	BSCA 6
G - REAR SHUTTLE SHOCK ABSORBER BRACKET SPECIFY RIGHT OR LEFT	BSCA 14
H - CYLINDER ADAPTER PLATE	
I - FRONT SHUTTLE SHOCK ABSORBER BRACKET	BSCA 12
J - SHUTTLE INJECTOR SLIDE GIB	BSCA 5
K - SHOCK ABSORBER	BSCA 39



**COLONIAL MACHINERY
SALES, INC.**

 P.O. Box 99
300 Robertson Dr.
Elizabethton, TN 37644/37643
Phone: (423) 543-5210
Mobile: (423) 483-0293
Fax: (423) 543-8500
Email: sales@colonialmachinerysales.com
sales@theoakleyco.com
Web: www.colonialmachinerysales.com

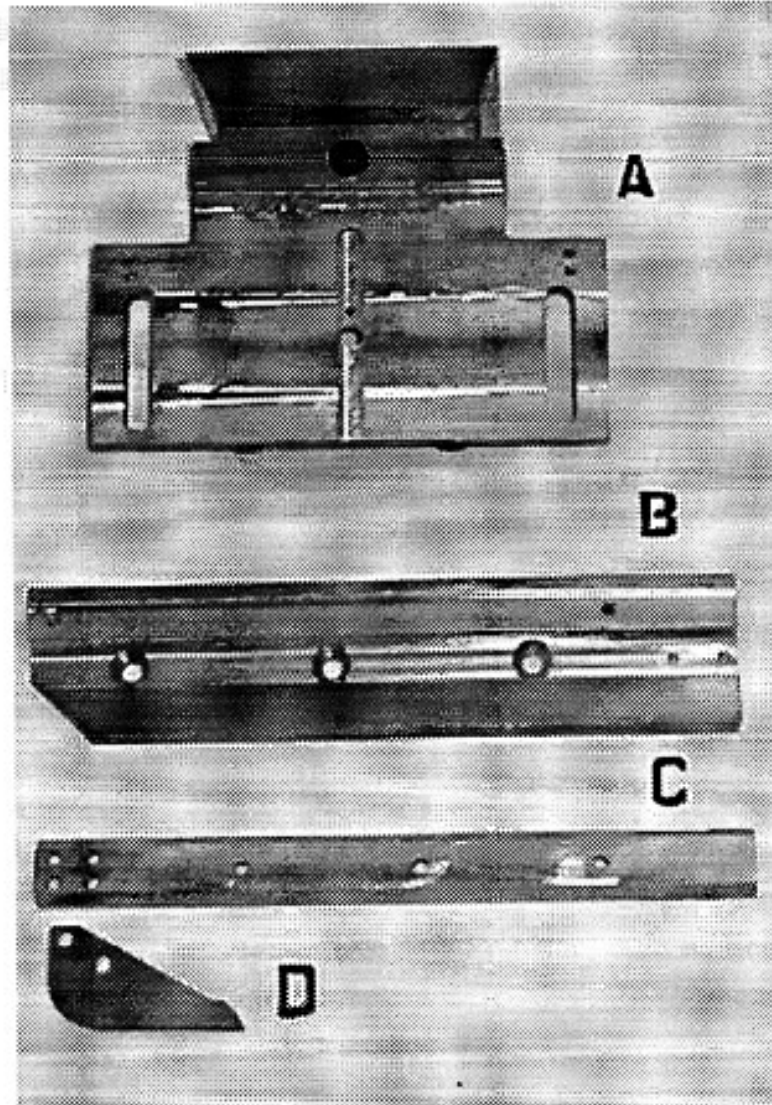


BELL 24 & 424 WORK TABLE PARTS

DESCRIPTION	PART #
A - WORK TABLE SLIDE SUPPORT BRACKET	BWTA-1
B - SPECIFY LEFT OR RIGHT WORK TABLE TOP	BWTA-8-A
C - WORK STOP DOVETAIL SLIDE BAR	BWTA-9
D - WORK STOP-	BWTA-10
E - SCALE NOT SHOWN	BWTA-11



**COLONIAL MACHINERY
SALES, INC.**

 P.O. Box 99
300 Robertson Dr.
Elizabethton, TN 37644/37643
Phone: (423) 543-5210
Mobile: (423) 483-0293
Fax: (423) 543-8500
Email: sales@colonialmachinerysales.com
sales@theoakleyco.com
Web: www.colonialmachinerysales.com

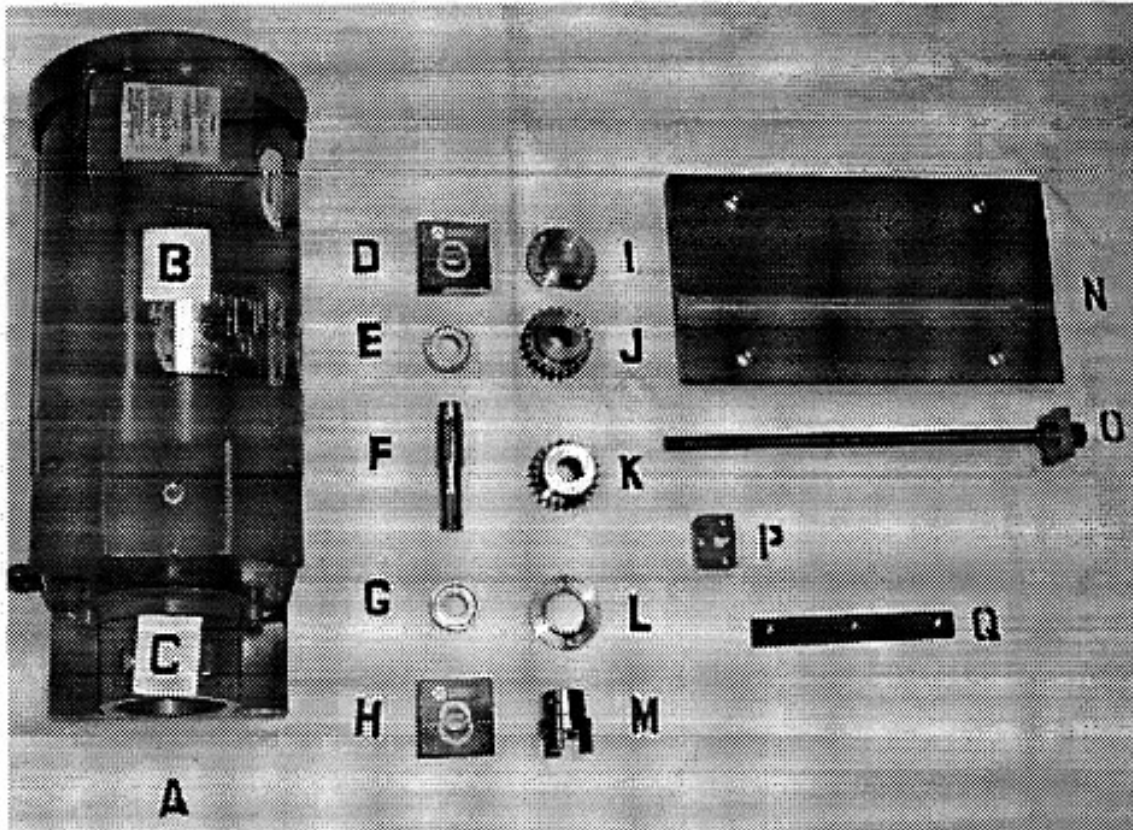


BELL 24 & 424 BORING UNIT & PARTS

DESCRIPTION	PART#
A- COMPLETE BELL BORING UNIT	BRBU-0
B- MOTOR	BRBU-8
C- GEAR BOX HOUSING	BRBU-1
D- SEAL	BRBU-6
E- BEARING	BRBU-5
F- OFF SET-OUT PUT SHAFT	BRBU-4
G- BEARING	BRBU-5
H- SEAL	BRBU-7
I- REAR BEARING RETAINER	BRBU-11
J- PRIMARY GEAR 5/8" BORE	BRBU-2
K- SECONDARY GEAR 3/4" BORE	BRBU-3
L- FRONT BEARING RETAINER & SEAL BORE	BRBU-12
M- FLEXABLE COUPLING 5/8" BORE	BRBU-9
N- DOVETAIL MOUNTING PLATE	BRBU-16
O- LATERAL ADJUSTMENT SCREW	BRBU-17
P- BRASS ADJUSTMENT SCREW NUT	BRBU-14
Q- DOVETAIL SLIDE GIB	BRBU-15



**COLONIAL MACHINERY
SALES, INC.**

 P.O. Box 99
300 Robertson Dr.
Elizabethton, TN 37644/37643
Phone: (423) 543-5210
Mobile: (423) 483-0293
Fax: (423) 543-8500
Email: sales@colonialmachinerysales.com
sales@theoakleyco.com
Web: www.colonialmachinerysales.com

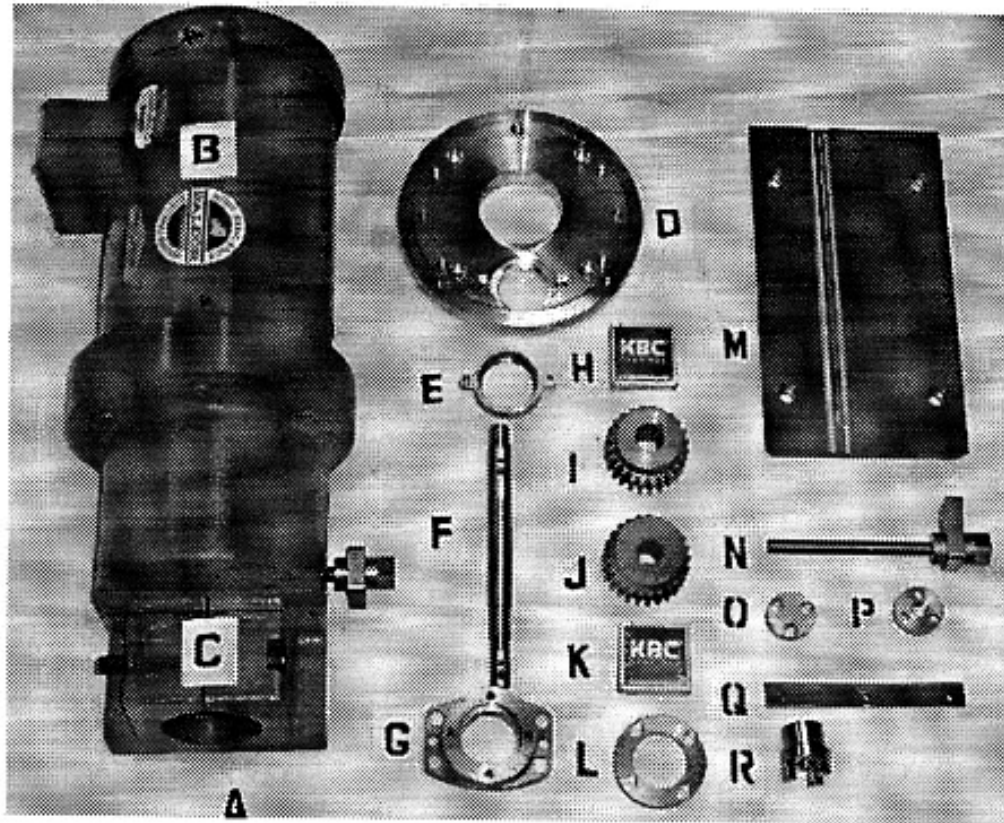

CMSI BELL CONVERSION BORING UNIT

DESCRIPTION


PART #

A - CMSI BELL CONVERSION BORING UNIT	CBUA-0-A
B - 3-HP DRIVE MOTOR	CBU-21
C - GEARBOX HOUSING CASTING	CBU-1
D - ALUMINUM MOTOR MOUNT PLATE	CBU-2
E - REAR BEARING INSERT HOUSING	CBU-5
F - OFFSET OUTPUT SHAFT	CBU-6
G - FRONT BEARING INSERT HOUSING	CBU-3
H - OUTPUT SHAFT BEARING	CBU-18
I - STEEL GEAR	CBU-17
J - PHENOLIC GEAR	CBU-16
K - OUTPUT SHAFT BEARING	CBU-18
L - FRONT BEARING RETAINING RING	CBU-4
M - DOVETAIL SLIDE MOUNTING PLATE	CBU-20
N - LATERAL ADJUSTMENT SCREW	CBU-9
O - BRASS BLANK ADJUSTMENT INSERT	CBU-8
P - BRASS THREADED ADJUSTMENT INSERT	CBU-7
Q - DOVETAIL GIB	CBU-14
R - FLEXIBLE COUPLING HALF	CBU-19



**COLONIAL MACHINERY
SALES, INC.**

 P.O. Box 99
300 Robertson Dr.
Elizabethton, TN 37644/37643
Phone: (423) 543-5210
Mobile: (423) 483-0293
Fax: (423) 543-8500
Email: sales@colonialmachinerysales.com
sales@theoakleyco.com
Web: www.colonialmachinerysales.com

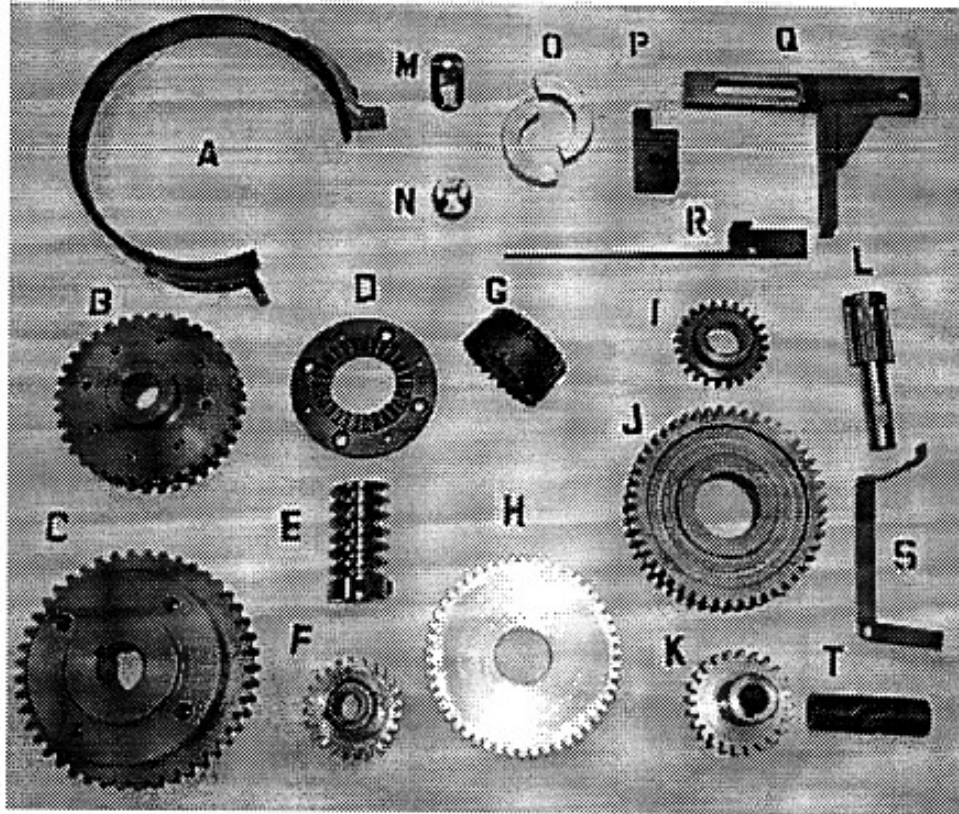


MATTISON LATHE PARTS

DESCRIPTION	PART #
A - BRAKE SHOE	66-3
B - STOCK DRIVE WORM GEAR	55-C-0
C - WORM GEAR 57-D	57-D
D - STOCK DRIVE CLUTCH GEAR PLATE	55-C-2
E - STOCK DRIVE WORM	55-C-1
F - STOCK DRIVE SPUR GEAR	55-C-5
G - STOCK DRIVE CLUTCH PLATE	55-C-3
H - STOCK DRIVE INTERMEDIATE GEAR	55-C-4
I - TAILSTOCK SPINDLE DRIVE PINION	55-C-8
J - TAILSTOCK INTERMEDIATE GEAR	55-C-7
K - TAILSTOCK PRIMARY DRIVE GEAR	
L - TAILSTOCK SPINDLE SLEEVE PINION	55-C-10
M - BRAKE CAM BOTTOM	66-2
N - BRAKE CAM TOP	66-1
L - BRONZE CAM CLUTCH YOKE	55-C-23
P - STOCK BLOCK	66-4
Q - STOCK BLOCK ARM	66-5
R - STOCK FEELER ARM	66-6
S - STOCK HOLD BACK ARM	66-7
T - UNIVERSAL JOINT	66-8



**COLONIAL MACHINERY
SALES, INC.**

 P.O. Box 99
300 Robertson Dr.
Elizabethton, TN 37644/37643
Phone: (423) 543-5210
Mobile: (423) 483-0293
Fax: (423) 543-8500
Email: sales@colonialmachinerysales.com
sales@theoakleyco.com
Web: www.colonialmachinerysales.com

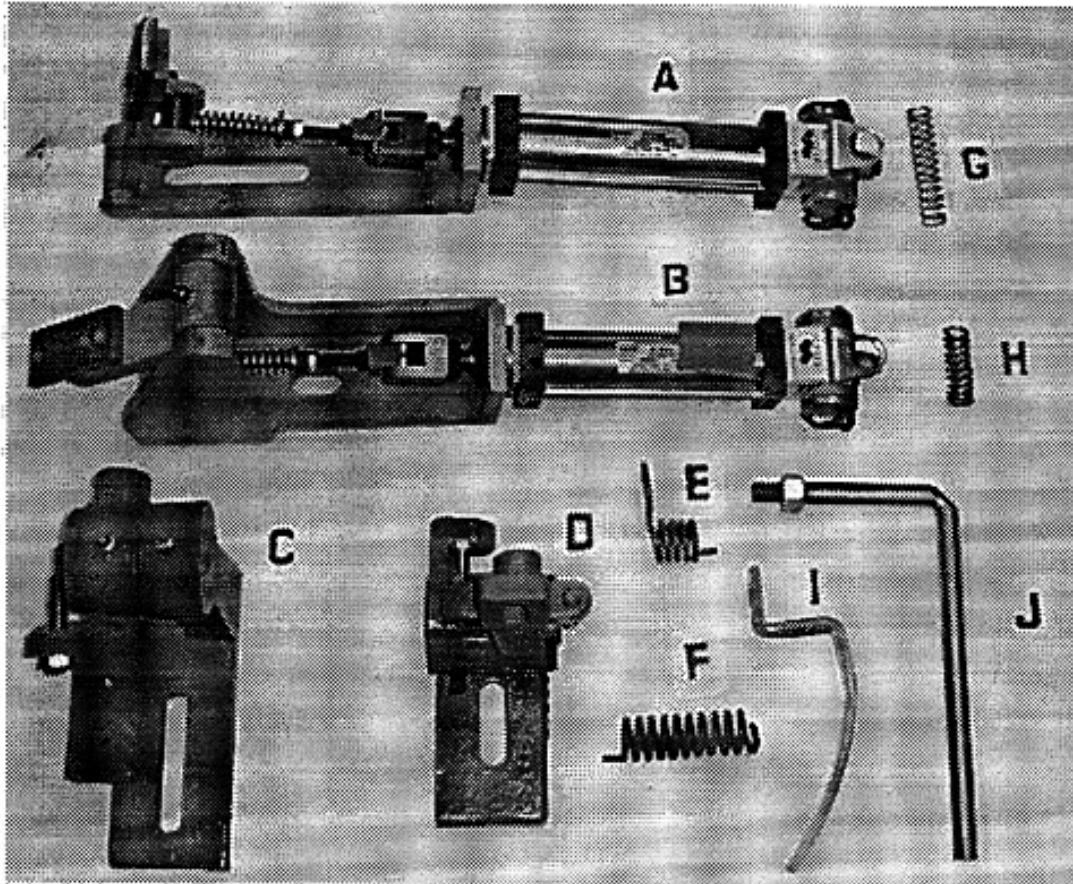


MATTISON STEADY-REST PARTS

DESCRIPTION	PART #
A - MATTISON AUTOMATIC STEADY REST VERTICAL	ML101
B - MATTISON AUTOMATIC STEADY REST HORIZONTAL	ML101-A
C - MATTISON MANUAL STEADY REST HORIZONTAL	ML103
D - MATTISON MANUAL STEADY REST VERTICAL	ML103-A
E - TORSION SPRING	ML10
F - TORSION SPRING	ML11
G - COMPRESSION SPRING	ML12
H - COMPRESSION SPRING	ML13
I - TRIP ARMS	ML14
J - TRIP ARMS	ML15



**COLONIAL MACHINERY
SALES, INC.**

 P.O. Box 99
300 Robertson Dr.
Elizabethton, TN 37644/37643
Phone: (423) 543-5210
Mobile: (423) 483-0293
Fax: (423) 543-8500
Email: sales@colonialmachinerysales.com
sales@theoakleyco.com
Web: www.colonialmachinerysales.com

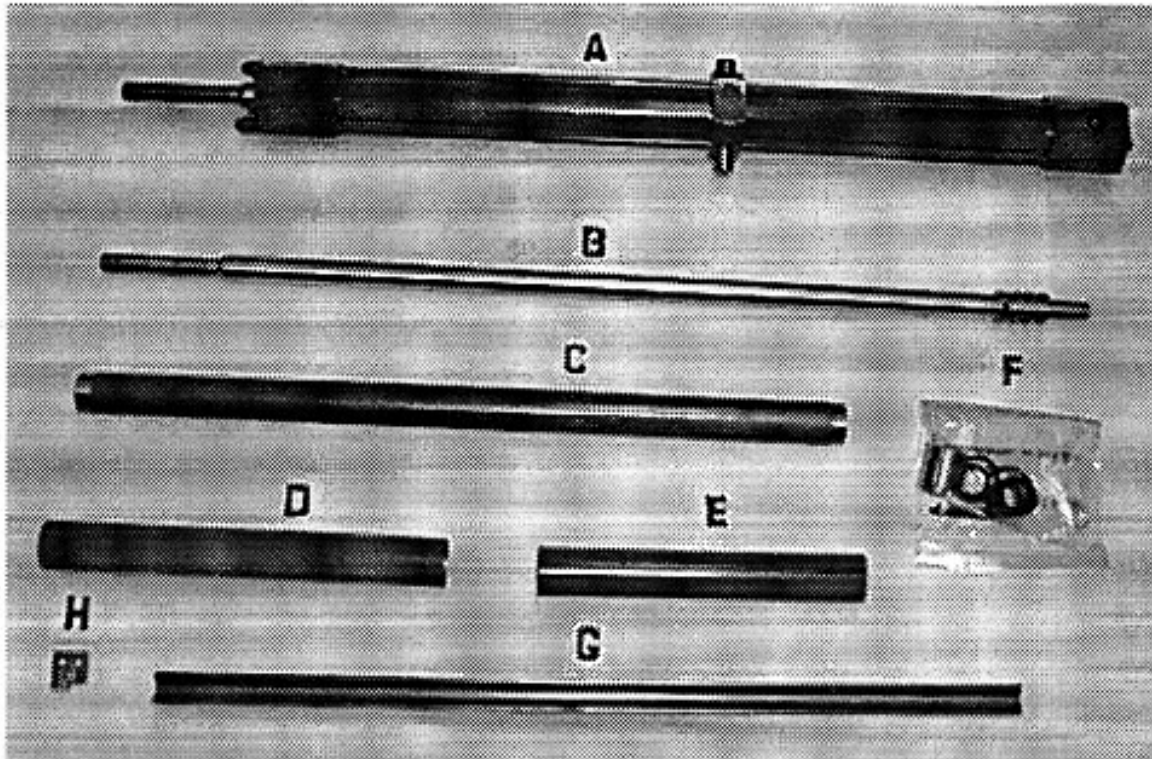


PORTER HYDRO CUT SAW PARTS

DESCRIPTION	PART #
A - HYDRAULIC REPLACEMENT CYLINDER	G6088
B - PISTON ROD	G6088-2
C - BARREL	G6088-1C
D - LONG SPACER TUBE	G6088-1M1
E - SHORT SPACER TUBE	G6088-1M2
F - SEAL KIT (FOR G6088 CYLINDER)	G6088-10
G - BALL RAILS (4 REQUIRED)	PBR-01
H - END STOP (8 REQUIRED)	PBR-02



**COLONIAL MACHINERY
SALES, INC.**

 P.O. Box 99
300 Robertson Dr.
Elizabethton, TN 37644/37643
Phone: (423) 543-5210
Mobile: (423) 483-0293
Fax: (423) 543-8500
Email: sales@colonialmachinerysales.com
sales@theoakleyco.com
Web: www.colonialmachinerysales.com

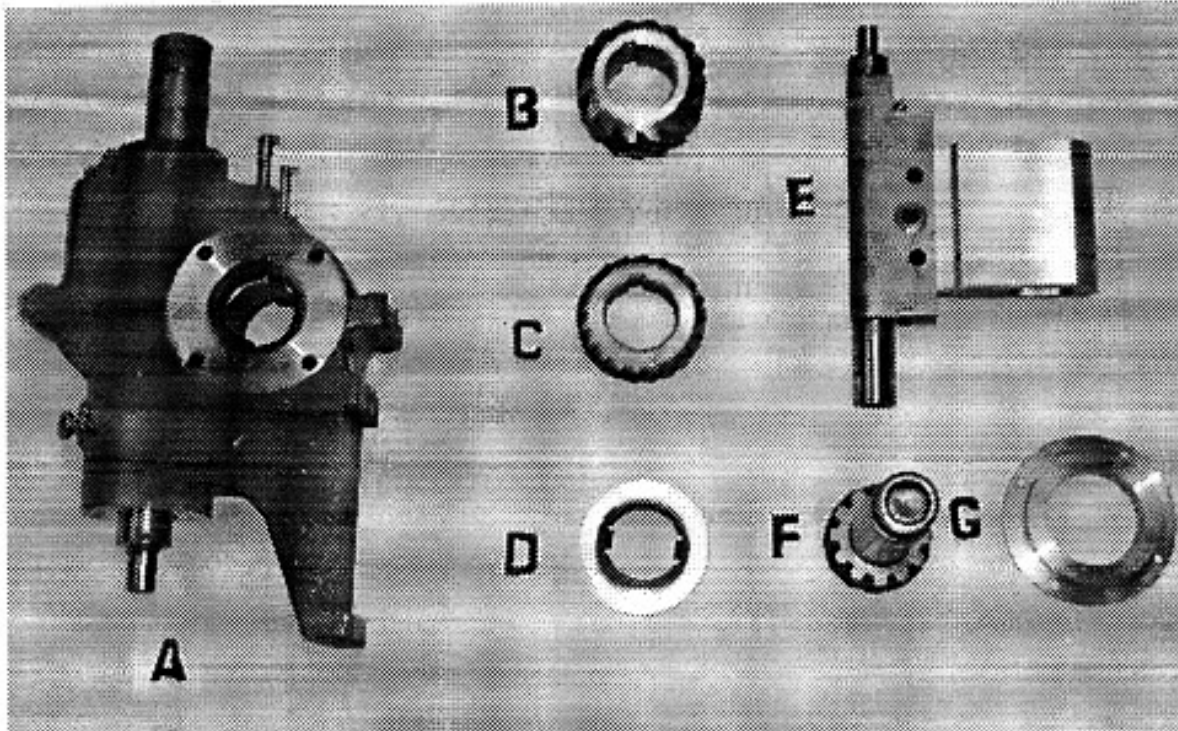


ROOT VERTICAL BORING MACHINE PARTS

DESCRIPTION	PART #
A - RECONDITIONED C-2 STYLE GEARBOX	RC2G-0
B - LARGE GEAR C-2	RC2G-1
C - SMALL GEAR C-1	RC1G-2
D - SEAL RING	RC2G-3
E - BORING SPINDLE FOR ROOT VERTICAL	RVBS-4
F - DRIVEN GEAR NEW	RC2G-5
DRIVEN GEAR USED	
G - BRONZE BUSHING	RC2G-6



**COLONIAL MACHINERY
SALES, INC.**

 P.O. Box 99
300 Robertson Dr.
Elizabethton, TN 37644/37643
Phone: (423) 543-5210
Mobile: (423) 483-0293
Fax: (423) 543-8500
Email: sales@colonialmachinerysales.com
sales@theoakleyco.com
Web: www.colonialmachinerysales.com

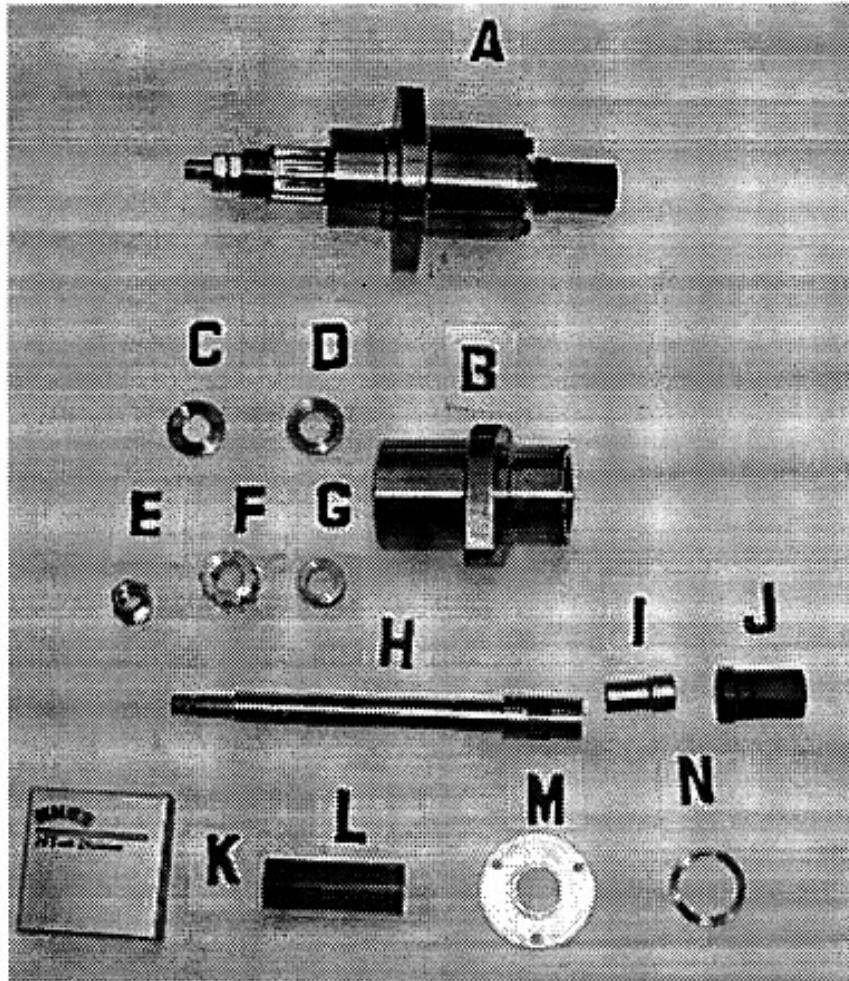

TYLER SPINDLE AND PARTS

DESCRIPTION	PART #
A - SPINDLE REPLACEMENT UNIT	TRS-26
B - SPINDLE HOUSING	TRS-11
C - UPPER PULLEY FLANGE	TRS-15
D - LOWER PULLEY FLANGE	TRS-17
E - 1/2-20 HEX JAM NUTS	TRS-22
F - PULLEY	TRS-16
G - PULLEY SPACER	TRS-18
H - SPINDLE SHAFT	TRS-13
I - 1/2" BIT COLLET	TRS-20
J - COLLET NUT	TRS-19
K - PRECISION SPINDLE BEARING	TRS-24
L - BEARING SPACER	TRS-14
M - HOUSING CAP	TRS-12
N - WAVE SPRING WASHER	TRS-25