

Display Manual



Product model


Intelligent LCD display of E-bike; model: KD718.

Specifications


- 24V/36V/48V Power Supply
- Rated working current :10mA
- The maximum working current: 30mA
- Off leakage current: <1uA
- The supply controller working current 50mA
- Operating temperature: -20°C~ 60°C
- Storage temperature: -30°C~ 70°C

Appearance and Size

Display appearance and dimension drawing (unit: mm)

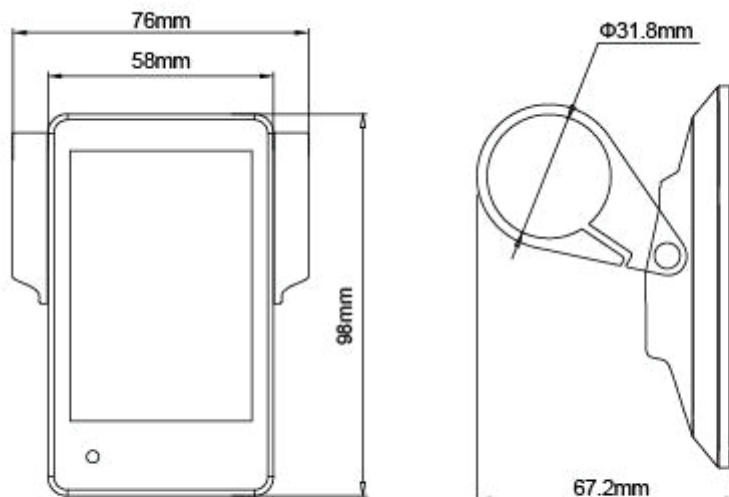

Remote appearance and dimension drawing (unit: mm)

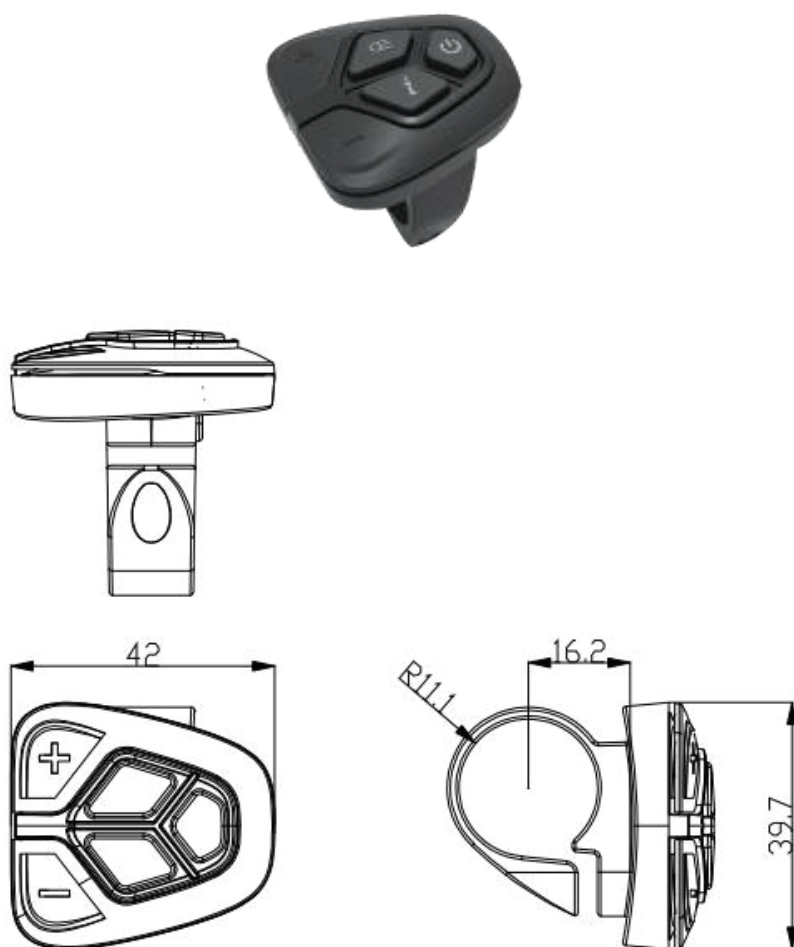

Function Summary

KD718 can provide a lot of functions to fit the Users needs. The indicating contents are as below:

- Battery and battery percentage indication
- Motor Power indication
- Assistance-level indication
- Speed indication (incl. running speed, Max. speed and Ave. speed)
- Odometer and trip distance
- The push-assistance function
- Trip time indication
- Backlight On/Off
- Error code indication
- Pedaling frequency indication(optional)
- USB connection indicator (optional)
- The remaining range indication(optional)
- Various Parameters Settings (e.g., wheel size, speed-limited, battery level bar, assistance level, controller limited current, password enable, etc.)
- Recover Default Settings

General Operation

◆ Switching the E-bike System On/Off

Briefly press the power button to switch on the E-bike system, and provides the power supply for the controller. To hold the power button for 2s, the E-bike system will be switched off. The E-bike system no longer use the battery power.

When switching off the E-bike system the leakage current is less than 1 uA.

■ When parking the E-bike for more than 10 minutes, the E-bike system switches off automatically.

◆ Display Interface

After switching on the E-bike system, the display will show Speed and Trip Distance. Pressing the “i” button will show more riding data as below:

Trip Distance (Km) → Total Distance (Km) → Max. Speed (Km/h) → Ave. Speed (Km/h) → Ride Time (Min.) .




Switching display interface

◆ Switching Push-assistance Mode On/Off

To activate the push-assistance function, hold the “-” button always. After 2s, The E-bike’s drive is activated at a uniform speed of 6 Km/h. While the screen displays “”.

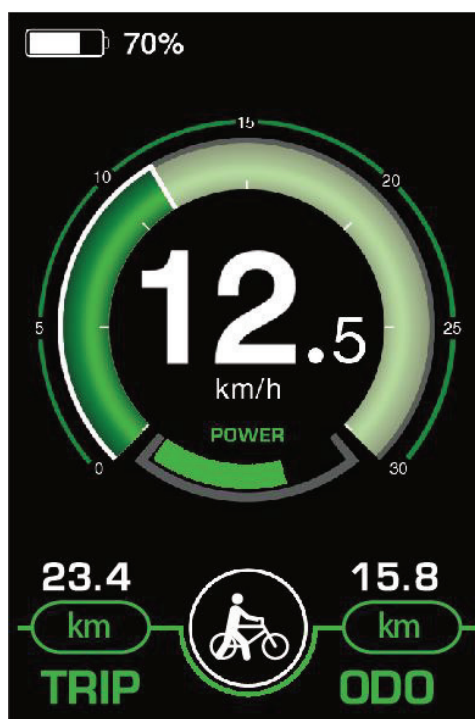

The push-assistance function is switched off as soon as you release the “-” button on the operating unit. The E-bike system stop the power output immediately.




Push-assistance Mode

■ Push-assistance function may only be used when pushing the E-bike. Danger of injury when the wheels of the E-bike do not have ground contact while use the push-assistance function.

◆ Switching the Lighting On/Off


To switch on the headlight, hold the “” button for 2s. The backlight brightness is automatically reduced. In the same way to press the “” button for 2s, the lighting can be switched off.

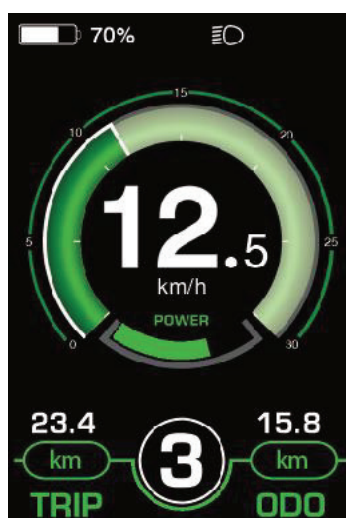

Switching the Lighting Mode On/Off Interface

◆ **Assistance Level Selection**


Briefly press "+" or "-" button to switch the E-bike system assistance level, change the motor output power, The default assistance level ranges from level “0” to level “5”, The output power is zero on Level “0” . Level “1” is the minimum power. Level “5” is the maximum power. When you reach “5” , press the "+" button again, the interface still shows “5” , and blinks at “5” to indicate the power highest. After the power downshift reaches “0” , press the "-" button again, the interface still shows “0” and blinks at “0” to indicate the power minimum. The default value is level “1” .

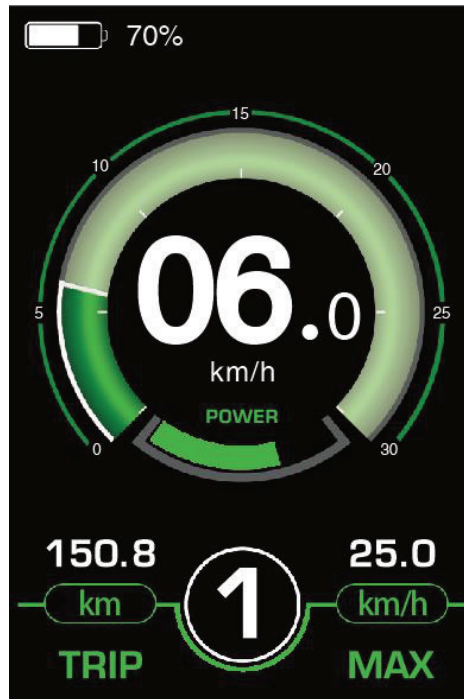

Assistance Level Conversion Interface

◆ **Battery Indicator**


The 0-100% represent the capacity of the battery. The 100% bright when the battery is in high voltage. When the battery is in low voltage, battery frame will flash at the frequency of 1HZ to notice that the battery needs to be recharged immediately.

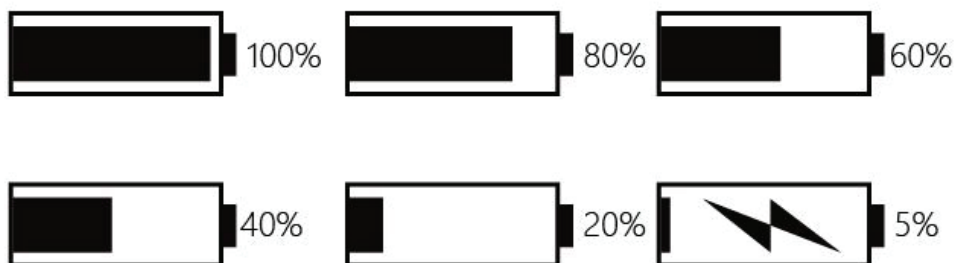

Battery Indicator

◆ **Motor Power Indicator**


The power of the motor can be read via the interface.

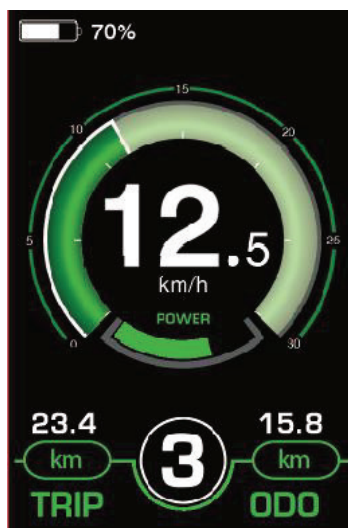

Motor Power Indication Interface

◆ **USB connection indication (optional)**

When the display is inserted into a USB external device, the display interface will show as below.

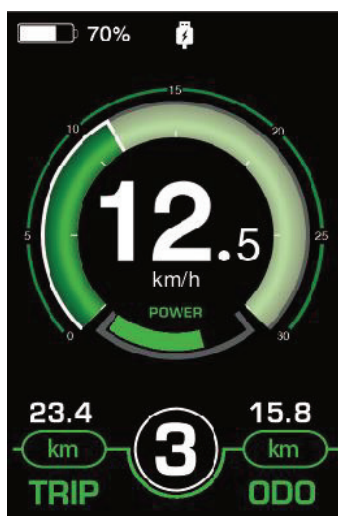


USB Connection Indication Interface

◆ **Error Code Indication**

The components of the E-bike system are continuously and automatically monitored. When an error is detected, the respective error code is indicated in text indication area.

Here is the detail message of the error code in Attached list 1.

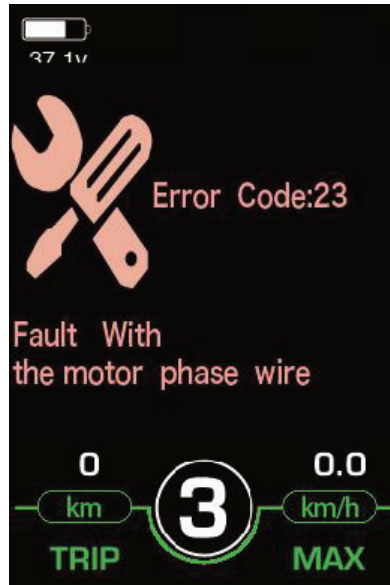


Error Code Indication

■ Make the display repaired when error code appears. E-bike will not be able to drive normally.

General Settings

Press the power button to turn on the display, to access general settings menu, hold both the “+” button and the “-” button for 2s.

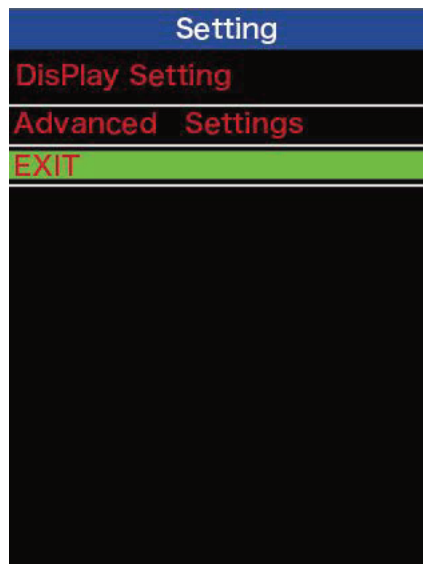

General parameter setting item selection interface

■ All the Settings are operated in the case of parking the E-bike.

◆ Trip Distance Clearance

Clear Trip represents trip distance clearance setting.

To clear trip distance, press the “+” button or the “-” button to select the Yes or No. Yes represents clearing a single ride distance. No represents not clearing a single ride

distance.

To store a changed setting, press the “i” button and then access General Settings interface.

DisPlay Setting		DisPlay Setting	
Toggle Unit	Imperial	Toggle Unit	Imperial
LCD Luminance	100%	LCD Luminance	100%
Dormancy	5Min	Dormancy	5Min
SOC View	Percent	SOC View	Percent
TRIP Reset	Cleared.	TRIP Reset	NO
AL Sensitivity	3	AL Sensitivity	3
Password	>	Password	>
BACK		BACK	

Trip Distance Clearance Settings Interface

◆Unit km/mile Conversion

Set Unit represents unit settings.

To convert unit, press the “+” button or the “-” button to choose the desired setting item, and then press the “i” button to confirm.

To store a changed setting, press the “i” button and then exit general settings.

The default value is “Metric(km)”.

DisPlay Setting		DisPlay Setting	
Toggle Unit	Metric	Toggle Unit	Imperial
LCD Luminance	100%	LCD Luminance	100%
Dormancy	5Min	Dormancy	5Min
SOC View	Voltage	SOC View	Percent
TRIP Reset	NO	TRIP Reset	NO
AL Sensitivity	3	AL Sensitivity	3
Password	>	Password	>
BACK		BACK	

Mile and Kilometer Conversion Settings Interface

◆Wheel Diameter Settings

Wheel Diameter represents wheel diameter settings. To change basic settings, press the “+” or the “-” button to increase or decrease until the desired value is displayed. The default value is 26 inch. To store a changed setting, press the “i” button to confirm, display

"OK" words prompt operation is completed. Then access the General Settings interface.

Advanced Settings	
Wheel	30Inch
Speed Limit	22 mph
Current Limit	18A
Speed Sensor	06
Assistant Num	12
Set Voltage	36-3
Power Set	1-3
Slow Start	-2-
BACK	

Wheel Diameter Settings Interface

◆ **Speed-limit Settings**

The default value is 25Km/h.

Speed Limit represents the limit speed settings. When the current speed is faster than speed limit, the E-bike system will switch off automatically. Speed limit range is 12Km/h to 40Km/h.

To change basic settings, press the "+" or the "-" button to increase or decrease until the desired value is displayed. Press the "i" button to confirm, display "OK" words prompt operation is completed.

To store a changed setting and exit General Parameter Settings, hold the "i" button for 2s

Advanced Settings	
Wheel	30Inch
Speed Limit	22 mph
Current Limit	18A
Speed Sensor	06
Assistant Num	12
Set Voltage	36-3
Power Set	1-3
Slow Start	-2-
BACK	


Limit Speed Settings Interface

Backlight contrast settings

LCD Luminance represents backlight contrast settings. Level “0” is the low brightness, Level “100%” is high brightness. The default level is “100%”.

To modify the backlight brightness, press the “+” button or the “-” button to choose the desired setting item.

To store a changed setting, press the “i” button and then access the General settings interface.

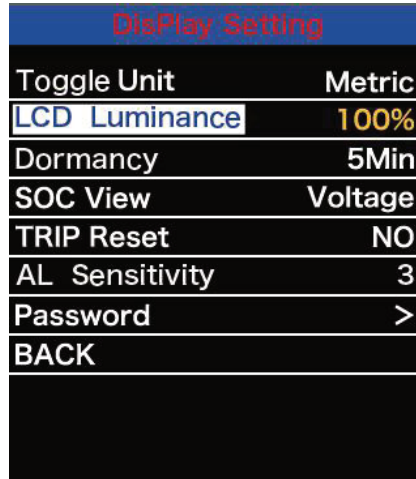


Backlight Brightness Settings Interface

◆Power-on Password Settings

Password Settings on the screen means power-on password settings. The default password is 1212.

To access the power-on password settings, press the “+” or the “-” button to modify the value and then press the “i” button to confirm digit one by one until the correct 4-digit password is completed, and then press the “i” button to access power-on password enable settings interface, otherwise stay on the password input state.

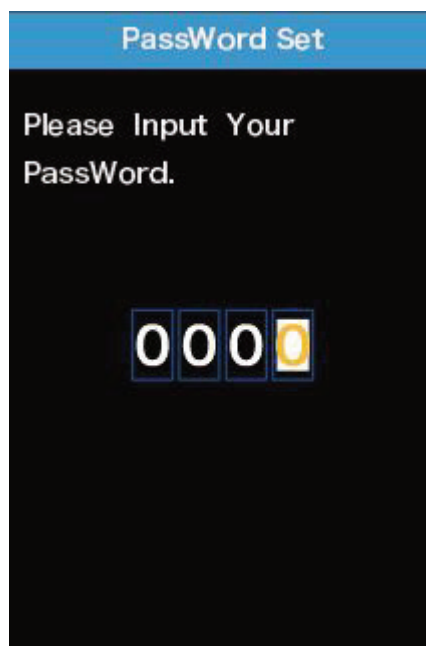


Enter Password Interface

◆Power-on Password Disable/Enable/Change

To change power-on password enable/disable settings, press the “+” or the “-” button to select. Disable means not require a power-on password. Enable means a power-on password is required.

If select Enable, press the “i” button and then access power-on password modify interface, otherwise exit the power-on password settings interface.

The default value is Enable Password.

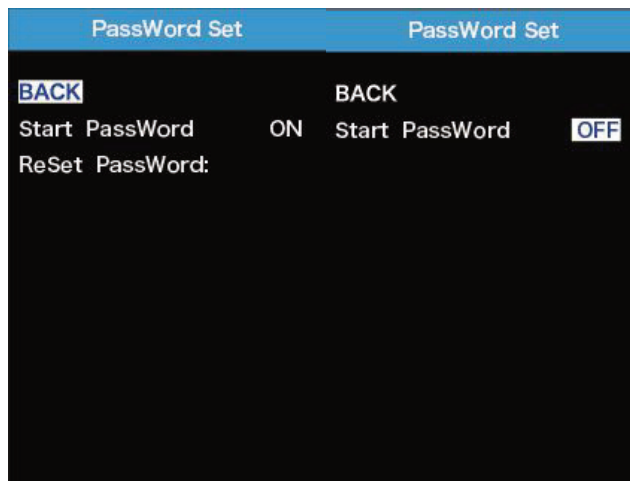

Set Password Interface

◆Power-on Password Modify

When the display shows Password Set, Enter Password 0000, to set new power-on password, press the “+” or the “-” button to modify the value and then press the “i” button to confirm digit one by one until the new 4-digit password is completed.

To store the new power-on password, hold the “i” button for 2s and then exit settings.

When switching the E-bike system on next time, the display will show PassWord interface, please input the new password to power on.

