TIP ADJUSTMENT

Terminal Display	Your Action
Idle Prompt	Press [ENTER]
Transaction Menu	Select Tip Adjustment
Search Menu/TIP ADJ	Select All to review any untipped qualified transactions or desired retrieval reference for a specific transaction.
Retrieval Method	(All not selected)Select retrieval method
Enter Reference Value	(All not selected) Type reference value and press [ENTER]
{Transaction Details}	Choose Select to confirm transaction. F2/F3 can be used to scroll additional transaction if All select as reference.
Enter Tip Amount	Type Tip Amount and press [ENTER]
Confirmation Screen	Select Accept capture (add tip) or Change (edit tip amount)
Captured	(Adjustment Only)
Adjust Another?	(Adjustment Only) Select YES or NO

GIFT ACTIVATION

Terminal Display	Your Action
Idle Prompt	Press [ENTER]
Transaction Menu	Scroll Menu and Select Gift
Gift Transaction Menu	Select Activation
Enter Clerk ID	Type Clerk (or Server) (or Server) ID and press [ENTER]
Enter Amount	Type amount and press [ENTER]
Swipe/Key Card	Swipe or Key account number
Connecting	Terminal will go out for card balance
Customer Copy?	Select YES or NO to printing a customer receipt.

GIFT OTHER TRANSCTIONS

Terminal Display	Your Action
Idle Prompt	Press [ENTER]
Transaction Menu	Scroll Menu and Select Gift
Gift Transaction Menu	Select transaction type
Enter Clerk ID	Type Clerk (or Server) (or Server) ID and press [ENTER]
Enter Amount	(Not applicable to Close) Type amount and press [ENTER]
Swipe/Key Card	Swipe or Key account number
Connecting	Terminal connects to host
Customer Copy?	Select YES or NO to printing a customer receipt.

TRANSACTION ADJUSTMENT/REPRINT

Terminal Display	Your Action
Idle Prompt	Press [ENTER]
Transaction Menu	Select Other
Other Menu	Select Transaction Adjustment or Reprint
Reprint Options	(Reprint only) Select reprint option
Reprint Pre-Auth	(Reprint only) Select YES for PRE-AUTH or NO for other
Retrieval Method	Select retrieval method
Enter Reference Value	Input reference value and press [ENTER]
{Transaction Details}	Select Adjust or Reprint Note: F2/F3 can be used to scroll
Captured	(Adjustment Only)
Adjust Another?	(Adjustment Only) Select YES to adjust another No

GIFT PURCHASE

Terminal Display

Idle Prompt	Press [ENTER]
Transaction Menu	Scroll Menu and Select Gift
Gift Transaction Menu	Select Purchase
Enter Clerk ID	Type Clerk (or Server) (or Server) ID and press [ENTER]
Enter Amount	Type amount and press [ENTER]
Swipe/Key Card	Swipe or Key account number
Connecting	Terminal connects to host
Customer Copy?	Select YES or NO to printing a customer receipt.
App Amt: \$XX.XX Bal Due: \$XX.XX Press [ENTER]	(If enabled – Amount of Sale exceeds balance on Pre-Paid card) Terminal displays the Approved Amount and Balance Due (amount owed by customer). ACCEPT ANOTHER FORM OF PAYMENT FOR THE BALANCE DUE. Initiate void to cancel transaction and return the approved amount to card.

GIFT BALANCE INQUIRY

Terminal Display	Your Action
Idle Prompt	Press [ENTER]
Transaction Menu	Scroll Menu and Select Gift
Gift Transaction Menu	Select Balance Inquiry
Enter Clerk ID	Type Clerk (or Server) (or Server) ID and press [ENTER]
Swipe/Key Card	Swipe or Key account number
Connecting	Terminal will go out for card balance

REPORTS/BATCH INQUIRY

Terminal Display	Your Action
Idle Prompt	Press [.,#*]
Admin Menu	Select Reports
Reports Menu	Select desired report or Batch Inquiry
Reports Sub Menu	(Reports) Select desired report
Connecting	(Batch Inquiry Only) Terminal connects to host
Printing	(Batch Inquiry Only)

GIFT BATCH INQUIRY

Terminal Display	Your Action
Idle Prompt	Press [ENTER]
Transaction Menu	Scroll Menu and Select Gift
Gift Transaction Menu	Select Batch Inquiry
Connecting	Terminal will go out for Batch Inquiry

CHECK SALE

Terminal Display	Your Action
Idle Prompt	Press [ENTER]
Transaction Menu	Select Sale
Sale Menu	Select Check
Check Menu	Select Check Type
Conversion Menu	(Conversion Only) Select transaction type
Enter Clerk ID	(If enabled) Type Clerk (or Server) ID and press [ENTER]
Insert Check or press Enter to Key	Insert check into reader/imager or press [EN- TER] to manually key check information
Enter Sale Amount	Type sale amount and press [ENTER]
Enter Tip Amount	(If enabled) Type tip amount and press [ENTER]
Conformation	(If tip added) Select Confirm or Cancel
Swipe/Enter Driver's Lic #	(If enabled) Type driver's license number and press [ENTER]
Connecting	Terminal connects to host
Customer Copy?	Select YES or NO to printing a customer receipt.

CHECK VOID

Terminal Display	Your Action
Idle Prompt	Press [ENTER]
Transaction Menu	Select Sale
Sale Menu	Select Check
Check Menu	Select Conversion
Conversion Menu	Select Void
Retrieval Menu	Select Last or Search
Search Menu	(Search Option) Select desire search reference
Search Reference	(Search Option) Type search value and press [ENTER]
{Transaction Details}	Select Void or use F2 and F3 to scroll batch
Conformation Screen	Confirm Void
Connecting	Terminal connects to host

Ingenico

Quick Reference Guide



Voice Authorization Phone Numbers
Visa®/MasterCard®_____
American Express® _____
Discover® Network _____
Gift Card____

vantiv. smarter/faster/easier/payments...

Note: Chip cards transactions can require customers to make decisions to complete a transaction. Prompts requiring a customer decision are noted as a Customer Action Screen.

VTR011 04.16 © 2016 Vantiv, LLC. All rights reserved.

SALE - CREDIT/DEBIT/EBT

Transaction Menu Sale Menu S	Press [ENTER] Select Sale Select Transaction Type
Sale Menu	
	Select Transaction Type
	(If enabled) Type Clerk (or Server) ID and press [ENTER] Note: Conformation required for addition of new Clerk or Server
Enter Sale Amount	Type sale amount and press [ENTER]
Confirm Amount	Select Yes to confirm amount
	(If enabled) Select YES or NO to addition of Tip.
TIP Amount	(Tip Yes) Type Tip amount and press [ENTER]
SWIDE/Insert/Jan/KeV	Insert, Tap, Swipe or Key card number Note: Prompts for Exp. Date on keyed entries.
Enter CVC	(If enabled – manual only) Type 3 or 4 digit code on back of card after account number press [ENTER] or Press [ENTER] if unknown
	(If no CVC Code) Select Unreadable or Not Present
	(If enabled – manual only) Type billing address of cardholder and press [ENTER]
	(If enabled – manual only) Type billing Zip Code of cardholder and press [ENTER]
Cash Back?	(If enabled) Select YES or NO for Cash Back
	(Cash YES) Type cash amount and press [ENTER]
Accept / Change	(If Cash/Tip Added) Select ACCEPT to confirm or CHANGE confirm or Change to [ENTER] a different amount
	(If required) Instruct customer to type PIN and press [ENTER]
Connecting	Terminal connects to host
App Amt: \$XX.XX Bal Due: \$XX.XX Press [ENTER]	(If enabled – Amount of Sale exceeds balance on Pre-Paid card) Terminal displays the Approved Amount and Balance Due (amount owed by customer). ACCEPT ANOTHER FORM OF PAYMENT FOR THE BALANCE DUE. Initiate void to cancel transaction and return the approved amount to card.
REMOVE CARD	(EMV Contact) Instruct customer to remove cards Note: Customer Action Screen
(listomer P() Nillmher	(Purchase Card Only)Type Customer PO Number and press [ENTER]
Enter lax Amount	(Purchase Card Only) Type Tax amount and press [ENTER]
Tax Status	(If no tax amount) Select Tax Status
Customer Copy?	Select YES or NO to printing a customer receipt.

EMV NOTES

Check card for a chip.
When prompted for card entry, insert card with chip facing in and upward.
Once inserted, the EMV card must remain in the terminal until the transaction is complete. Do not remove the card until prompted.
Follow screen prompts, the terminal will take you through the transaction step by step.
Receipts are printed after the card is removed.

SETTLEMENT

Your Action
Press [ENTER]
Scroll Menu and select Settlement
(If enabled) Type password and press Enter
Select Settlement option
Select Yes to confirm settlement or No to Reject it.
(If Enabled) Select Accept to reverse stale (expired) pre- authorizations. Select Cancel to exit settlement process. If reversals are accepted the terminal will print a Pre- Authorization reversal report.
(If Enabled) Select Yes to print an Unadjusted Tips Report. Press No continue without printing a report.
(If Enabled) Select Yes to continue settlement with untipped transactions. Select No to cancel settlement
Terminal prints specified settlement report.

RETURN – CREDIT/DEBIT/EBT

Terminal Display	Your Action
Idle Prompt	Press [ENTER]
Transaction Menu	Select Return
Return Menu	Select Transaction Type
EBT Return	Select FoodStamp or Voucher
Enter Clerk ID	(If enabled) Type Clerk (or Server) ID and press [ENTER]
Enter Sale Amount	Type sale amount and press [ENTER]
Swipe/Insert/Tap/Key	Insert, Tap, Swipe or Key card number Note: Prompts for Exp. Date on keyed entries.
Enter PIN	(If Prompted) Instruct customer to type PIN and press [ENTER]
Connecting	Terminal connects to host
Customer Copy?	Select YES or NO to printing a customer receipt

VOID

Terminal Display	Your Action
Idle Prompt	Press [ENTER]
Transaction Menu	Select Void
Void PRE-AUTH	Select Yes or No to Voiding a Pre-Auth
Void Pre-Auth	(Pre-Auth Void) Select Void All or One
Retrieval Options	Select All or specific reference
Retrieval Reference	(Reference retrieval) Type retrieval reference value and press[ENTER]
{Transaction Details}	Select transaction or use F2 and F3 to scroll available transactions
Confirm Void	Select Yes to confirm or No to cancel
Confirm Void	(Pre-Auth Void) Select Accept to Void Total Amount or Change for a partial reversal
Enter New Void Amount	(Partial reversal) Input new amount and press [ENTER]
Connecting	Terminal connects to host
CUSTOMER RECEIPT?	Select YES or NO to printing a second Receipt.

BALANCE INQUIRY

Terminal Display	Your Action
Idle Prompt	Press [ENTER]
Transaction Menu	Select Balance Inquiry
Enter Password	(If enabled) Type password and press [ENTER]
Balance Inquiry	Select Card type
Enter Clerk ID	(If enabled) Type Clerk (or Server) ID and press [ENTER]
Swipe/Insert/Tap/Key	Insert, Tap, Swipe or Key card number Will be prompted for exp. date on manual entries.
Enter PIN	(If required) Instruct customer to type PIN and press [ENTER]
Connecting	Terminal connects to host

PRE-AUTHORIZATION (AUTH ONLY)

PRE-AUTHO	RIZATION (AOTH ONLY)
Terminal Display	Your Action
Idle Prompt	Press [ENTER]
Transaction Menu	Select Other
Other Menu	Select Pre-Auth
Enter Clerk ID	(If Enabled) Type Clerk (or Server) ID and press [ENTER]
Enter Sale Amount	Type Sale amount and press [ENTER]
Swipe/Insert/Tap/Key	Insert, Tap, Swipe or Key card number Note: Prompts for Exp. Date on keyed entries.
Enter CVC	(If Enabled – Manual Entry) Type 3 or 4 digit code from back of the card and press [ENTER] or Press [ENTER] to bypass
1 – Unreadable 2 – Not Present	(If no CVC Code) Select Unreadable or Not Present
Enter Address	(If enabled – manual only) Type billing address of cardholder and press [ENTER]
Enter Postal Code	(If enabled – manual only) Type billing Zip Code of cardholder and press [ENTER]
Connecting	Terminal connects to host
REMOVE CARD	(EMV Contact) Instruct customer to remove cards Note: Customer Action Screen
CUSTOMER RECEIPT?	Select YES or NO to printing a second Receipt.

FORCE/EBT VOUCHER/ PRE-AUTH COMPLETION

FRE-AUTH C	OWIFLETION
Terminal Display	Your Action
ldle Prompt	Press [ENTER]
Transaction Menu	Select Force
Force Menu	Select transaction type
Enter Clerk ID	(If enabled – Non-Pre Auth) Type Clerk (or Server) ID and press [ENTER]
Search Menu	(Pre-Auth Comp) Select All or specific reference
Retrieval Reference	(Pre-Auth Comp) Type retrieval reference value and press[ENTER]
{Transaction Details}	(Pre-Auth Comp) Select Accept to complete or Change to edit transaction amount prior t completion. Use F2 and F3 to scroll available transactions
Enter Sale Amount	(Force/Pre Auth Change/EBT Voucher) Type new sale amount and press [ENTER]
Swipe/Insert/Tap/Key	Insert, Tap, Swipe or Key card number Note: Prompts for Exp. Date on keyed entrie
Enter CVC	(If enabled – Force manual only) Type 3 or 4 digit code on back of card after account number press [ENTER] or Press [ENTER] if unknown
1 – Unreadable 2 – Not Present	(If no CVC Code) Select Unreadable or Not Present
Enter Address	(If enabled – Force manual only) Type billing address of cardholder and press [ENTER]
Enter Postal Code	(If enabled – Force manual only) Type billing Zip Code of cardholder and press [ENTER]
Enter Voucher #	(EBT Voucher)Type Voucher # and press [ENTER]
Enter Approval Code	(Force/EBT Voucher)Type approval code and press [ENTER]
Connecting	Terminal connects to host
CUSTOMER RECEIPT?	Select YES or NO to printing a second Receipt.