

# NBC 9-3-2 Digital Fast Charger


## Instructions

### CAUTION: ALKALINE BATTERIES MUST NOT BE CHARGED

1. Plug the 18 volt D.C. power supply into the receptacle on the back of the charger.
2. Be sure the M-216 transmitter and PR-216 receiver are turned OFF, and that rechargeable Ni-MH batteries are installed.
3. Insert the M-216 and PR-216 upside down in charging bays with the unit's clip side facing out, making certain charging plugs are inserted completely.  
**NOTE:** Charger bay LEDs should be OFF before inserting units.
4. Allow up to four hours for a complete charge. Batteries not fully discharged before charging will automatically receive a shorter "top-off" charge.

### Multi-function LED Indicator

- a. Steady red: Normal charging
- b. Steady green: Charging cycle is complete
- c. Blinking red: Over-voltage shut off has occurred indicating a defective or inappropriate battery
- d. Blinking green: Safety timer shut off has occurred indicating an incomplete charge — unit may be removed and reinserted after ten seconds for another charge cycle

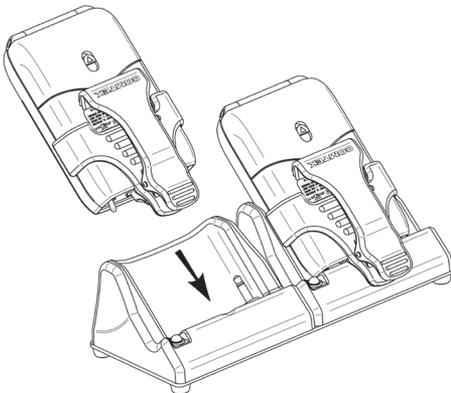

**Note:** The NBC 9-3-2 Digital Fast Charger will maintain batteries in a fully charged state, and the M-216 and PR-216 can be stored in charging bays indefinitely while the steady green LED is on. Periodically open the battery compartment on stored COMTEK units to check for battery leakage. If a Ni-MH battery is leaking, it must be discarded.

**COMTEK**<sup>®</sup>  
First Quality In Wireless Sound

P: 800-496-3463

[www.comtek.com](http://www.comtek.com)