



USER INSTRUCTIONS

No-Fuss Flush®

#517C

WASTE HOLDING TANK FLUSHING SYSTEM

1. Connect sewer hose.
2. Open dump valve; let tank empty.
3. Attach garden hose* to water inlet labeled "Sewer Valve Must Be Open When Using This Inlet". With faucet at full pressure, flush for about 2 minutes or until water runs clear from discharge hose.
4. Disconnect garden hose from faucet and lay on ground to allow water to drain from the system before detaching from water inlet.

DO NOT ALTER THIS SYSTEM IN ANY WAY, SUCH AS BY ADDING CHECK VALVES, ETC.

* Some DOs and DON'Ts for using the No-Fuss Flush® Wasteholding Tank Flushing System:

DON'T USE the same hose to fill your potable (fresh) water tank that is used for the No-Fuss Flush®.

DO USE the same procedures used at most campground dump stations.

CAUTION

Dump valve must be open any time there is a hose (water supply) connected to this system.

DO NOT LEAVE ANY HOSE (WATER SUPPLY) connected to this system when not in use.

(SEE OTHER SIDE FOR DRAWING)

For Parts or Assistance, please call the manufacturer:

LAKEVIEW RV SUPPLY, INC.

Phone: (512) 261-8000

Fax (512) 261-7722

tabbdye@lakeviewrvsupply.com

See Other Side
For Installation
Instructions



Made in USA

**INSTALLER INSTRUCTIONS FOR FACTORY INSTALLATION
OF
NO-FUSS FLUSH® WASTEHOLDING TANK FLUSHING SYSTEM PART # 517C
(TEI Listing No. 16910)**

1. Drill 1" hole on side or end of wasteholding tank, no more than 2" from the top near center.
2. Insert No-Fuss Flush® in hole in "top" position as stamped on flusher and drill 1/8" lead holes in tank.
3. Apply clear silicone sealer (**do not substitute**) completely covering inside of flange (about 3/16" thick). Fasten with #8 - 1/2" stainless steel screws supplied. Let silicone cure, following manufacturers' instructions on tube, before testing.
4. Install vacuum breaker and check valve a minimum of 6" above the highest flood level rim of any fixture connected to the wasteholding tank (see drawing). Install check valve horizontally immediately on the discharge side of the vacuum breaker (put vacuum breaker and check valve together with pipe dope or teflon tape). BOTH VALVES ARE DIRECTIONAL. DO NOT CONNECT any other valves (other than enclosed) to this system. DO NOT USE A WATER INLET WITH CHECK VALVE.
5. Test Flusher system for leaks with a minimum water pressure of 40 PSI.
6. Attach enclosed *Caution* sticker on or near the water inlet to this system.

NOTE: If it is necessary to add any parts to this system, the parts shall be the equivalent of and installed in accordance with IAPMO TSC 27.

Manufactured by
LAKEVIEW RV SUPPLY, INC.
(512) 261-8000
tabbdye@lakeviewrvsupply.com

NO-FUSS-FLUSH®

#517C


WASTEHOLDING TANK
FLUSHING SYSTEM

PART#

		PART#
①	FILL INLET	
②	CHECK VALVE	#2500
③	ELBOW	
④	VACUUM BREAKER	#288A
⑤	1/2" IPS (LISTED PIPING)	
⑥	"NO-FUSS FLUSH"®	#336

PACKAGE INCLUDES:

#2, #4, #6 plus 3 stainless steel screws, caution sticker, user and installer instructions.

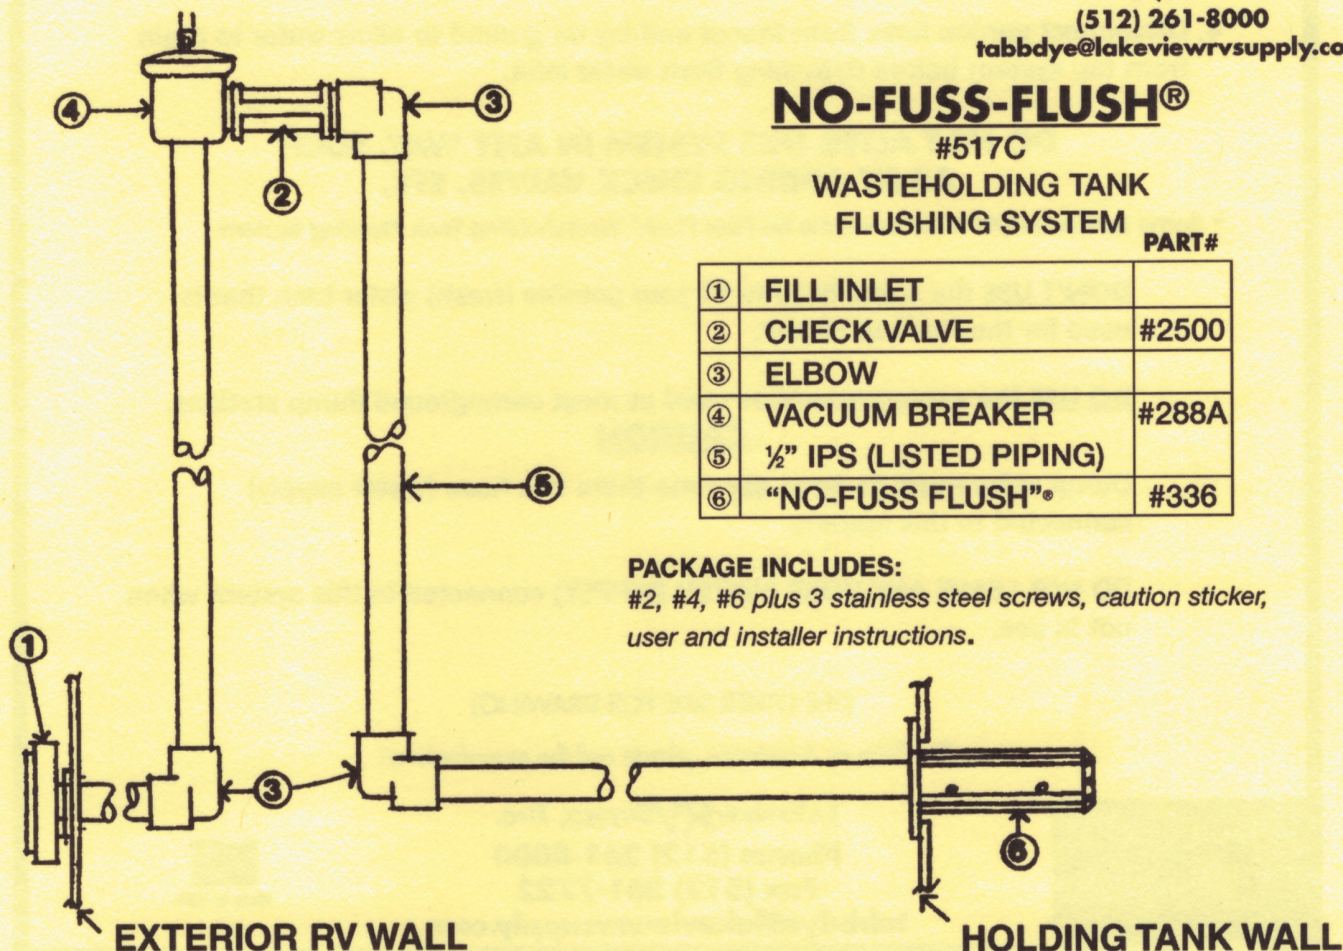

EXTERIOR RV WALL

HOLDING TANK WALL