

# RADIUS ROD SUPPORT KIT

745-128

Step One: Remove rear drag link (strut rod) cap screw nut & bolt from rear wheel outer bearing carrier and discard.

Reassemble drag link (strut rod) to outer bearing carrier, with new cap screw nuts & bolts placing horse shoe shaped retainer ring into the assembly as shown in the figure below.

Note: Due to the shape of the retainer ring, it must be stripped over the axle and bearing carrier out under the drop center of the wheel.

Repeat procedures on the opposite wheel.

