

Assistive Devices for Dressing

Button Hook

- With a widened handle and a large hook, this device allows an individual to button their shirts and zipper their jackets independently



Shoe Horn

- Allows an individual to easily slip on shoes while seated or standing without the need to bend over.



Elastic Shoe Laces

- Decreases required fine motor skills and increases an individual's independence with putting on and securing shoes



Sock Aide

- Great for an individual who has difficulty putting their own socks on because they either can't reach down to the floor, can't bring their foot to their laps, or have decreased balance while sitting.



Magnetic Clothing

- There are clothing options available that have velcro or magnetic closures instead of buttons. These can be found on Amazon as well as clothing stores such as Kohls and JC Penny.

Please visit [Amazon.com](https://www.amazon.com) to view these specific devices as well as many other options.