


16180 Yokomo Ball Bearing Steering Kit

Temporarily install the template with the new holes facing rearward. Drill the new holes with a 3mm or 1/8" drill. Remove the template and screws. Countersink the new holes.

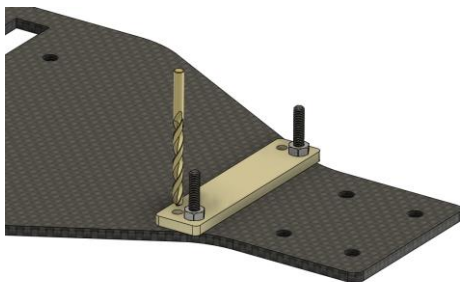

Install the 3x20mm screws into the new holes. Install a plain nut and then the post. Do not overtighten. Install a bearing, the steering arm, and another bearing for each side. Install a washer and 3mm locknut on each, again do not overtighten. Install the steering drag link to the arms with a shim on each side of the ball joint as shown. You will be relocating your steering servo 90°. Attach the linkage as needed for your fitment.

If you need to adjust the bump steer, you can add washers under the post. You want the steering tie rods parallel with the lower suspension arms.

