

| Part Number | | | | |
|-------------------|----------------|---------------------------|-----------|-------------|
| PTR1000-4B-60 | | Oil Pressure Sender | 0-160 psi | 1/4 19 bsp |
| PTR1005-16 | Aston Martin | Oil Pressure Sender | 0-160 psi | M10X1 |
| PTR1000-14-10 | Caterham | Oil Pressure Sender | 0-100 psi | M14x1.5 |
| PTR1004-10-10 | Caterham | Oil Pressure Sender | 0-100 psi | M10x1 |
| PTR1004-14-10 | Caterham | Oil Pressure Sender | 0-100 psi | M14x1.5 |
| PTR1005-M12-10 | Caterham | Oil Pressure Sender | 0-100 psi | M12X1.5 |
| PTR1005-M12-10B | Caterham | Oil Pressure Sender | 0-10 bar | M12X1.5 |
| PTTR2300-16-4NKIT | Caterham | Oil Pressure Transducer | 0-10 bar | 1/4x27 nptf |
| PTR1002-06 | Classic | Oil Pressure Sender | 0-60 psi | 1/2 20 unf |
| PTR1009-10 | Classic | Oil Pressure Sender | 0-100 psi | 1/8 bsp |
| PTR1020-6-10 | Classic | Oil Pressure Sender | | |
| PTR1801-06 | Classic | Oil Pressure Sender | 0-60 psi | 1/4 19 bsp |
| PTR1801-10 | Classic | Oil Pressure Sender | 0-100 psi | 1/4 19 bsp |
| PTR1810-1-10 | Classic | Oil Pressure Sender | 0-100 psi | 1/8x27 nptf |
| PTR1810-1-10/P | Classic | Oil Pressure Sender | 0-100 psi | 1/8x27 nptf |
| PTR1810-1-10P | Classic | Oil Pressure Sender | 0-100 psi | 1/8x27 nptf |
| PTR1811-06 | Classic | Oil Pressure Sender | 0-60 psi | 1/4 19 bsp |
| PTR1811-10 | Classic | Oil Pressure Sender | 0-100 psi | 1/4 19 bsp |
| PTR1812-06 | Classic | Oil Pressure Sender | 0-60 psi | 1/2 20 unf |
| PTTR2300-03-8N | Classic | Boost Pressure Transducer | -2+1 bar | 1/8x27 nptf |
| PTTR2300-03-8NKIT | Classic | Boost Pressure Transducer | -2+1 bar | 1/8x27 nptf |
| PTTR2301-10-8NKIT | Classic | Oil Pressure Transducer | 0-100 psi | 1/8x27 nptf |
| PTR1000-2U-10 | Cobra | Oil Pressure Sender | 0-100 psi | 1/2 20 unf |
| PTR1000-6-10 | Cobra | Oil Pressure Sender | 0-100 psi | 1/8x27 nptf |
| PTTR2300-03-4NKIT | Cobra & Flight | Boost Pressure Transducer | -2+1 bar | 1/4 bsp |
| PTTR2300-10-4NKIT | Cobra & Flight | Oil Pressure Transducer | 0-100 psi | 1/4x27 nptf |
| PTTR2300-10-8BKIT | Cobra & Flight | Oil Pressure Transducer | 0-7 bar | 1/8 bsp |
| PTTR2300-10-8NKIT | Cobra & Flight | Oil Pressure Transducer | 0-100 psi | 1/8x27 nptf |
| PTTR2300-16-8NKIT | Ginetta | Oil Pressure Transducer | 0-10 bar | 1/8x27 nptf |
| PTR1000-10-10B | Industrial | Oil Pressure Sender | 0-100 psi | M10x1 |
| PTR1000-12-16 | Industrial | Oil Pressure Sender | 0-160 psi | M12X1.5 |
| PTR1000-14-10B | Industrial | Oil Pressure Sender | 0-100 psi | M14x1.5 |
| PTR1000-14-16 | Industrial | Oil Pressure Sender | 0-160 psi | M14x1.5 |
| PTR1000-6-16 | Industrial | Oil Pressure Sender | 0-160 psi | 1/8x27 nptf |
| PTR1000-8N-10 | Industrial | Oil Pressure Sender | 0-100 psi | 1/8x27 nptf |
| PTR1000-8N-16 | Industrial | Oil Pressure Sender | 0-160 psi | 1/8x27 nptf |
| PTR1013-10 | Industrial | Oil Pressure Sender | 0-100 psi | 1/4x27 nptf |
| PTR1014-10 | Industrial | Oil Pressure Sender | 0-100 psi | 1/8 BSP |
| PTR1200-8N-16B | Industrial | Oil Pressure Sender | 0-160 psi | 1/8x27 nptf |
| PTR2000-6-10 | Industrial | Oil Pressure Sender | 0-100 psi | 1/8x27 nptf |
| PTR2000-7-16 | Industrial | Oil Pressure Sender | 0-160 psi | 1/4 bsp |
| PTR2000-80-10 | Industrial | Oil Pressure Sender | 0-100 psi | 1/8x27 nptf |
| PTR2005-14-10B | Industrial | Oil Pressure Sender | 0-100 psi | |
| PTR2200-8N-10B | Industrial | Oil Pressure Sender | 0-100 psi | 1/8x27 nptf |
| PTR2200-8N-16B | Industrial | Oil Pressure Sender | 0-160 psi | 1/8x27 nptf |
| PTR1001-06 | International | Oil Pressure Sender | 0-60 psi | 1/4 19 bsp |
| PTR1001-06SPR | International | Oil Pressure Sender | 0-60 psi | 1/4 19 bsp |
| PTR3000-4N-14 | International | Oil Pressure Sender | 0-10 bar | 1/4x27 nptf |
| PTR3000-8N-10 | International | Oil Pressure Sender | 0-7 bar | 1/8x27 nptf |
| PTR3000-8N-14 | International | Oil Pressure Sender | 0-10 bar | 1/8x27 nptf |
| PTR3000-M10-10 | International | Oil Pressure Sender | 0-100 psi | M10x1 |
| PTR4000-8N-16 | International | Oil Pressure Sender | 0-10 bar | 1/8x27 nptf |
| PTR1001-08 | Jaguar | Oil Pressure Sender | 0-80 psi | 1/4 19 bsp |
| PTR1001-10EC | Jaguar | Oil Pressure Sender | 0-100 psi | 1/4 19 bsp |
| PTR1015-06 | Jaguar | Oil Pressure Sender | 0-60 psi | 1/4 19 bsp |
| PTR1002-10EC | Landrover | Oil Pressure Sender | 0-100 psi | 1/2 20 unf |
| PTR1005-10 | Landrover | Oil Pressure Sender | 0-100 psi | M10X1 |
| PTR1012-06 | Landrover | Oil Pressure Sender | 0-60 psi | 1/2 20 unf |

| Description |
|---|
| Smiths Oil Pressure Sender 0-160 psi 1/4 19 bsp |
| Smiths Aston Martin Oil Pressure Sender 0-160 psi M10X1 |
| Smiths Caterham Oil Pressure Sender 0-100 psi M14x1.5 |
| Smiths Caterham Oil Pressure Sender 0-100 psi M10x1 |
| Smiths Caterham Oil Pressure Sender 0-100 psi M14x1.5 |
| Smiths Caterham Oil Pressure Sender 0-100 psi M12X1.5 |
| Smiths Caterham Oil Pressure Sender 0-10 bar M12X1.5 Shrouded |
| Smiths Caterham Oil Pressure Transducer 0-10 bar 1/4x27 nptf 0-5volt |
| Smiths Classic Oil Pressure Sender 0-60 psi 1/2 20 unf |
| Smiths Classic Oil Pressure Sender 0-100 psi 1/8 bsp |
| Smiths Classic Oil Pressure Sender |
| Smiths Classic Oil Pressure Sender 0-60 psi 1/4 19 bsp |
| Smiths Classic Oil Pressure Sender 0-100 psi 1/4 19 bsp |
| Smiths Classic Oil Pressure Sender 0-100 psi 1/8x27 nptf |
| Smiths Classic Oil Pressure Sender 0-100 psi 1/8x27 nptf Straight Thread |
| Smiths Classic Oil Pressure Sender 0-100 psi 1/8x27 nptf Straight Thread |
| Smiths Classic Oil Pressure Sender 0-60 psi 1/4 19 bsp |
| Smiths Classic Oil Pressure Sender 0-100 psi 1/4 19 bsp |
| Smiths Classic Oil Pressure Sender 0-60 psi 1/2 20 unf |
| Smiths Classic Boost Pressure Transducer -2+1 bar 1/8x27 nptf 0-5volt |
| Smiths Classic Boost Pressure Transducer -2+1 bar 1/8x27 nptf 0-5volt |
| Smiths Classic Oil Pressure Transducer 0-100 psi 1/8x27 nptf 0-5volt |
| Smiths Cobra Oil Pressure Sender 0-100 psi 1/2 20 unf |
| Smiths Cobra Oil Pressure Sender 0-100 psi 1/8x27 nptf 300-10 ohms |
| Smiths Cobra & Flight Boost Pressure Transducer -2+1 bar 1/4 bsp 0-5volt |
| Smiths Cobra & Flight Oil Pressure Transducer 0-100 psi 1/4x27 nptf 0-5volt |
| Smiths Cobra & Flight Oil Pressure Transducer 0-7 bar 1/8 bsp 0-5volt |
| Smiths Cobra & Flight Oil Pressure Transducer 0-100 psi 1/8x27 nptf 0-5volt |
| Smiths Ginetta Oil Pressure Transducer 0-10 bar 1/8x27 nptf 0-5volt |
| Smiths Industrial Oil Pressure Sender 0-100 psi M10x1 Shrouded |
| Smiths Industrial Oil Pressure Sender 0-160 psi M12X1.5 |
| Smiths Industrial Oil Pressure Sender 0-100 psi M14x1.5 Shrouded |
| Smiths Industrial Oil Pressure Sender 0-160 psi M14x1.5 |
| Smiths Industrial Oil Pressure Sender 0-160 psi 1/8x27 nptf |
| Smiths Industrial Oil Pressure Sender 0-100 psi 1/8x27 nptf |
| Smiths Industrial Oil Pressure Sender 0-160 psi 1/8x27 nptf |
| Smiths Industrial Oil Pressure Sender 0-100 psi 1/4x27 nptf 225-20 ohms |
| Smiths Industrial Oil Pressure Sender 0-100 psi 1/8 BSP |
| Smiths Industrial Oil Pressure Sender 0-160 psi 1/8x27 nptf 320-10ohms Shrouded |
| Smiths Industrial Oil Pressure Sender 0-100 psi 1/8x27 nptf |
| Smiths Industrial Oil Pressure Sender 0-160 psi 1/4 bsp |
| Smiths Industrial Oil Pressure Sender 0-100 psi 1/8x27 nptf |
| Smiths Industrial Oil Pressure Sender 0-100 psi Shrouded |
| Smiths Industrial Oil Pressure Sender 0-100 psi 1/8x27 nptf 320-10ohms Shrouded |
| Smiths Industrial Oil Pressure Sender 0-160 psi 1/8x27 nptf 320-10ohms Shrouded |
| Smiths International Oil Pressure Sender 0-60 psi 1/4 19 bsp 10-180 ohm |
| Smiths International Oil Pressure Sender 0-60 psi 1/4 19 bsp 10-180 ohm |
| Smiths International Oil Pressure Sender 0-10 bar 1/4x27 nptf 10-180 ohm |
| Smiths International Oil Pressure Sender 0-7 bar 1/8x27 nptf 10-180 ohm |
| Smiths International Oil Pressure Sender 0-10 bar 1/8x27 nptf 10-180 ohm |
| Smiths International Oil Pressure Sender 0-100 psi M10x1 10-180 ohm |
| Smiths International Oil Pressure Sender 0-10 bar 1/8x27 nptf 10-180 ohm insulated return |
| Smiths Jaguar Oil Pressure Sender 0-80 psi 1/4 19 bsp 10-180 ohm |
| Smiths Jaguar Oil Pressure Sender 0-100 psi 1/4 19 bsp |
| Smiths Jaguar Oil Pressure Sender 0-60 psi 1/4 19 bsp 10-180 ohm |
| Smiths Landrover Oil Pressure Sender 0-100 psi 1/2 20 unf |
| Smiths Landrover Oil Pressure Sender 0-100 psi M10X1 |
| Smiths Landrover Oil Pressure Sender 0-60 psi 1/2 20 unf |

