

Aurora Geyser Fogger 3 in 1 RGB USER MANUAL

DMX Channel and Display Sheet

| CH6 | FUNCTION |
|-----|-------------------------------|
| CH1 | LED dimmer and fog jet adjust |
| CH2 | LED strobe |
| CH3 | The 7 color choose |
| CH4 | Blue LED |
| CH5 | Red LED |
| CH6 | Green LED |

Note: please turn on at least one dip switch if you would like the machine by DMX512.

| Number | Display | Function Description |
|--------|---------|--|
| 1 | d001 | DMX control mode |
| 2 | CC00 | 7 colors auto mode 1 + channel 1 fog |
| 3 | CP00 | 7 colors auto mode 2 + channel 1 fog |
| 4 | DE00 | 7 colors auto mode 3 + channel 1 fog |
| 5 | BEBE | 7 colors auto mode 3 + sound control + channel 1 fog |
| 6 | r000 | LED no bright + channel 1 fog |
| 7 | G000 | LED no bright + channel 1 fog |

