

# Cherokee Landing Lights

Gerry Coon

Are you flying the Cherokee and are unsure how to operate the new wing tip lights? Then read on as it is really straight forward once it is explained.

1. The first item to be aware of is there is no relation between the original landing light located on the nose of the airplane and the wing tip lights. The original landing light is either On or Off based on the Landing Light rocker switch (see switch A on the attached photo).
2. The wing tip lights can be operated in one of two modes, either continuously or flashing – how this works is a bit tricky:
  - **Wing Tip lights continuously on** – the wing tip lights will be on and illuminate continuously whenever Switch B in the attached photo is turned on.
  - **Wing Tip lights flashing** – the wing tip lights will flash whenever Switch C in the attached photo is turned on; except that when Switch B is selected it will override the Switch C setting and the lights will be continuous, the following table best explains these switch settings:

Consider using the flashing option at night, during low visibility situations or while operating in or near the pattern of an airport.

Switch B Off	Switch C Off	No wing lights
Switch B Off	Switch C On	Wing lights flash
Switch B On	Switch C Off	Wing lights continuously on
Switch B On	Switch C On	Wing lights continuously on

Switch C – wing tip light flasher

Switch B – wing tip lights

Switch A – original landing light

