


# LRC™ Totalizer for the Loaded Round Counter™

By UniqueTek, Inc.

Item#: T1555-T

This Totalizer is designed to use with the UniqueTek Loaded Round Counter™. It counts the total number of press cycles. The Totalizer count helps you keep track of when it is time to perform press maintenance.

The Totalizer is to be wired in parallel with the original Counter of Loaded Round Counter™. Since both are triggered by the same Sensor mounted on the crimp die, the Totalizer will not count press cycles when there is no cartridge at the crimp station. However, the Totalizer count will still be close enough for the purpose of monitoring press maintenance intervals.

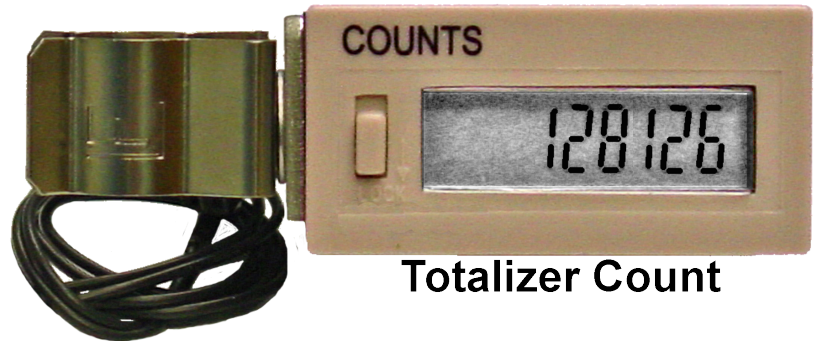

## Installation

- 1) Determine where you will mount the Totalizer. We recommend mounting the Totalizer above the Counter on the Magazine Shield tube. You can mount it elsewhere, but you must take into account the available length of the wires.
- 2) Disconnect the wires between the Counter and the Sensor on the crimp die, then detach the Counter from the Magazine Shield tube.
- 3) Remove the L-bracket from the Counter to gain access to the terminal screws.
- 4) Connect the two wires from the Totalizer to the two terminals of Counter that have wires already attached. Polarity or wire color is not relevant.

Note: First remove the blue tape from the ends of the wires. The tape prevents the wires from shorting together during shipping.

- 5) Reattach the L-bracket to the Counter. Do not overtighten.
- 6) Attach the Totalizer and Counter to the Magazine Shield tube.
- 7) Reconnect the wire between the Counter and the Sensor.
- 8) Slide the button on the left front of the Totalizer up to unlock it and then press the button to zero the count. Slide the button down to lock it ... ensuring that the count can't be zeroed if accidentally pressed.
- 9) Cycle the press with a cartridge in the crimp die to confirm that both Counter and Totalizer are counting. You can also test by manually lifting the rod in the Sensor Module.



Disclaimer: UniqueTek, Inc. is not liable for damages or personal injury that may be incurred as a result of using this product in an improper way or on a reloading press that has been improperly maintained or operated. It is your responsibility to ensure that your reloading equipment is properly assembled, is maintained in proper working condition, and is used according to the manufacturer's instructions and safe reloading practices.

Loaded Round Counter and the LRC logo are trademarks of UniqueTek, Inc.

Rev. 1 10/23

UniqueTek, Inc.  
Gilbert, AZ

UniqueTek.com  
Products for Shooting, Reloading & Competitive Marksmen



Phone: 480-507-0866  
Web: [www.uniquetek.com](http://www.uniquetek.com)  
Email: [lee@uniquetek.com](mailto:lee@uniquetek.com)