# EPIC event rental

# **Slushy Drink Machine**

#### Before you begin:

- The unit must be plugged directly into a wall outlet (no extension cords)
- If using machine outdoors, make sure unit is not in direct sunlight
- Make sure bowls are secure and in place before using, failure to do so will cause drink mix to leak out of the bowl
- Caution: Unit may not freeze fully if placed outside during really warm weather

### **Operating Machine:**

- Pour Frusheez mix in bowl
- Add 2 gallons of water to bowl (if using alcohol please see tips below)
- Plug machine into wall outlet
- Turn on machine (switch looks like a lightening rod)
- Turn on blades (switch looks like a curved arrow)
- Turn on cooler (to make a frozen drink flip switch to the snowflake, to make a cold drink flip switch to the rain drop)
- If renting a double bowl machine, make sure to turn on the blades and cooler for both sides
- Attach drip trays to front of unit (there are little cutouts on front of machine where they hang)

#### Tips:

- If using alcohol please use 2 gallons of water and alcohol combined. Subtract from the water the amount of alcohol you use. Doing this helps prevent the unit from being over filled. (Most people use the 750 ML bottles of Tequila or Rum per bowl)
- Using liquor with the mix causes freeze time to increase. Please allow machine at least 2-3 hours to freeze. Time to freeze without alcohol is about 1-2 hours. It is recommended to have machine plugged in plenty early before your event.

## Cleaning:

- Please turn off cooler
- Empty all mix out of bowl
- Flush bowl with water (water will freeze if cooler isn't turned off and will cause damage to machine)
- Wipe out bowls to get any juice left on bowl. Wash drop trays, place in bowl when clean.

