 


# Operation & Care

For VHS-Camcorder:  
Catalog No. 855-8462/  
855-8520  
Model No. 686-6062

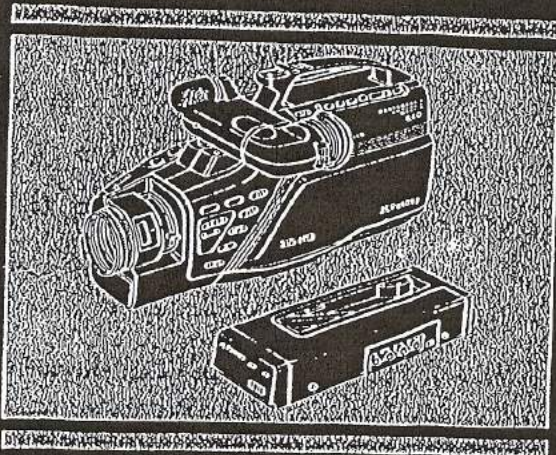

Please read these instructions completely,  
prior to any attempt at connecting,  
operating or adjusting this product.

JCPenney

## Features

- High Speed Shutter
- Power Zoom and Macro Function
- Self Timer Recording
- Time Lapse Recording
- Record A TV Program
- Video Playback
- Auto Tracking
- Auto Playback
- VHS Index Search System
- Rec End Search
- Automatic/Manual Focusing
- Record Review
- Automatic White Balance
- Auto Rechargeable Timer Back-up Battery\*
- CCD Image Sensor
- HQ (High Quality) System
- 3 Ways to Supply Power

---

120 SERIES  
MEDIUM FORMAT CAMERAS  
OPERATION INSTRUCTIONS

MODEL 120N, 120GN  
STANDARD CAMERA WITHOUT BUILT-IN FLASH


MODEL 120FN, 120GFN  
CAMERA WITH BUILT-IN FLASH

MODEL 120CFN, 120GCFN  
CAMERA WITH BUILT-IN FLASH  
&  
COLOR FILTER FUNCTION FOR BUILT-IN FLASH

# INSTANT FILM HOLDER FOR HOLGA120

Instructions for the instant film holder for HOLGA120 series


This is an instant film holder for HOLGA120 series that can accommodate film format 8.5x10.8cm (however, you cannot take full frame image).

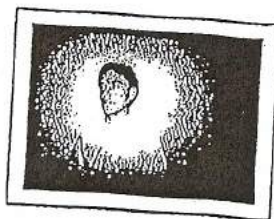



8.5 x 10.8cm Format  
(Image Area: 7.3 x 9.5cm)

FP-100C, FP-100B, FP-400B,  
FP-3000B


## 1. Before taking a photograph using the Instant Film

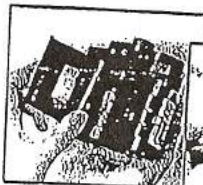


Replace the frame already fixed to the camera with the 6x6 frame included with the holder. Fix to inside of camera.

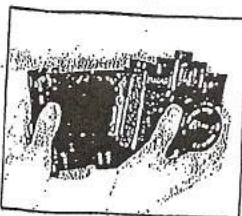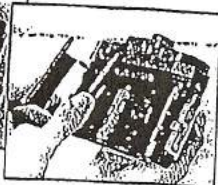


Replace the back cover of the camera with the instant film holder.

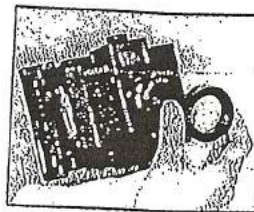


Always cover the lens of the camera with the attached correcting lens.

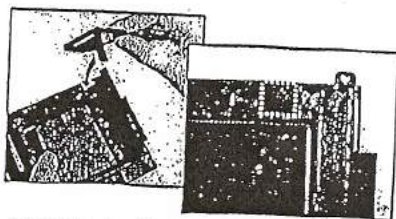

Attach the viewfinder before mounting the film holder on HOLGA120. (Peel off the seal and paste on the dotted line area.)

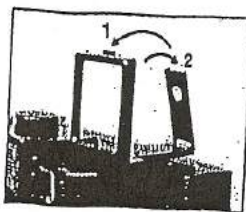


Set up the viewfinder.

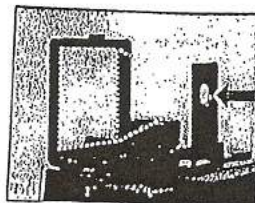

View through the circle then the image area would be within the square.

**Notice: The viewfinder is not exactly the same as what you shoot.**

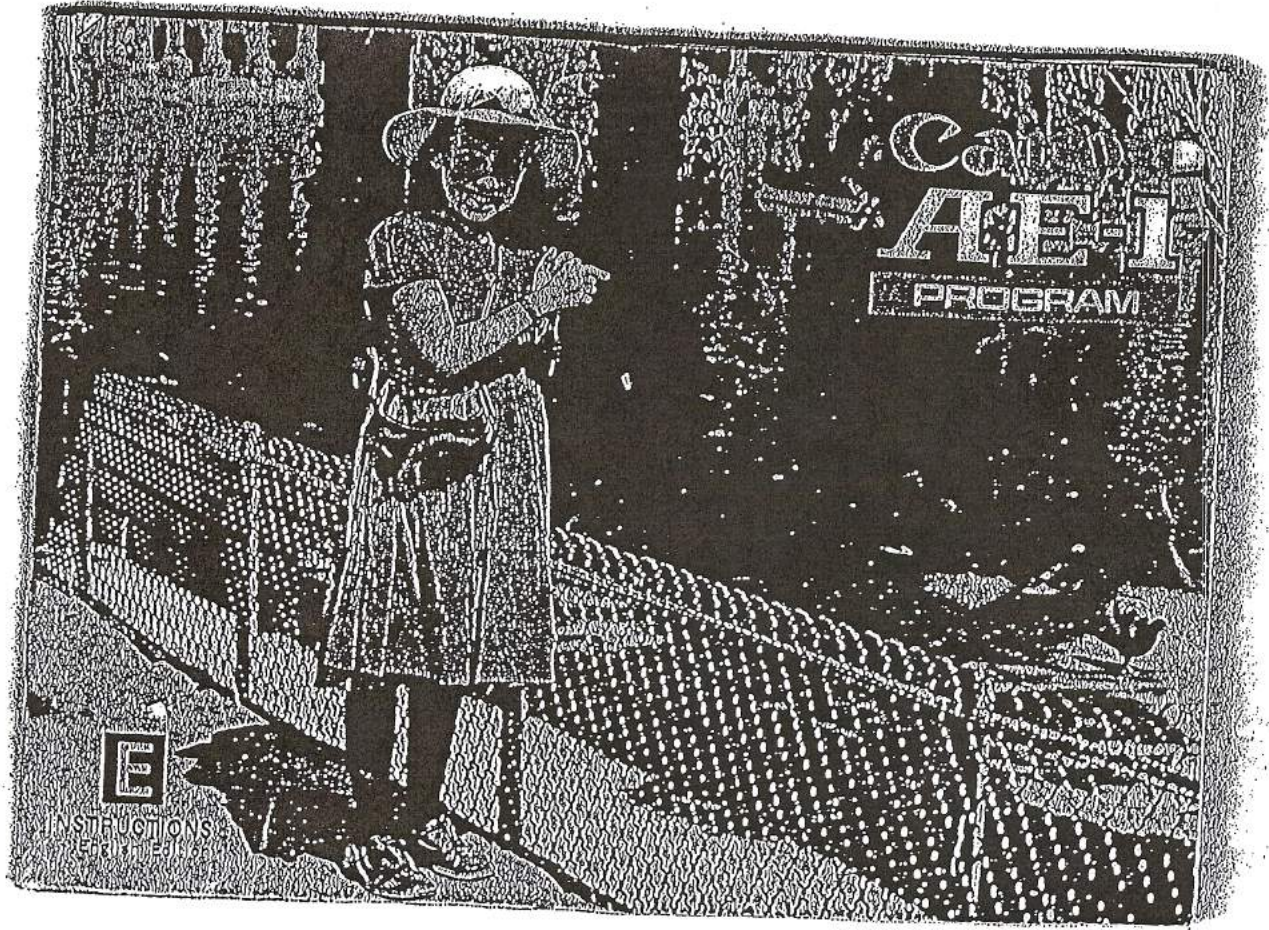


C...  
A...  
PROGRAM


E  
INSTRUCTIONS

# POLAROID SX-70 LAND CAMERA


## Opening and closing

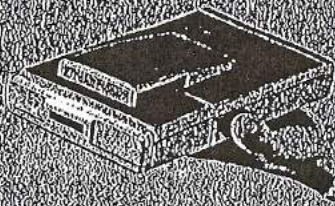


1. Hold in palm for left hand

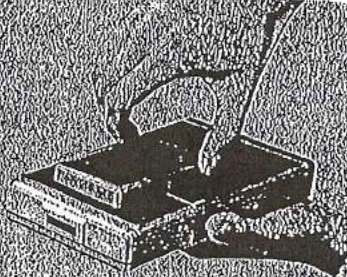


2. Lift small end of viewfinder cap

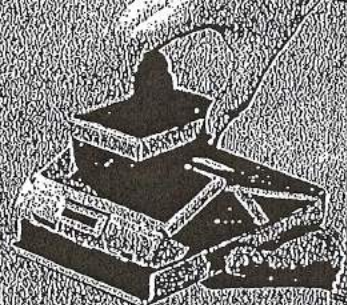


3. Pull straight up

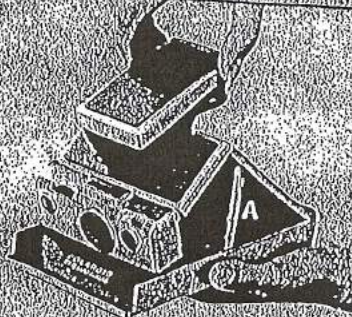

4. Until cover support (A) locks

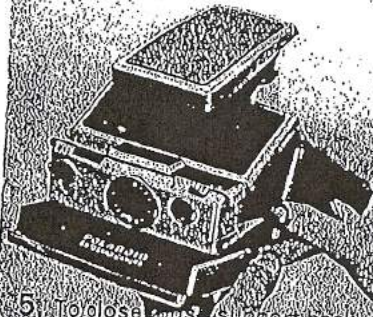

5. To close, push support back

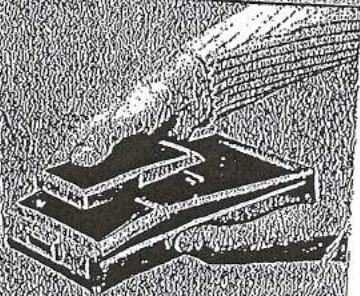

6. Push down on viewfinder cap

EOS

Canon

REBEL G / REBEL G QD



**E**  
English Edition  
INSTRUCTIONS


---

---

# Camera KIEV-60 TTL

 ---

INSTRUCTIONS FOR USE

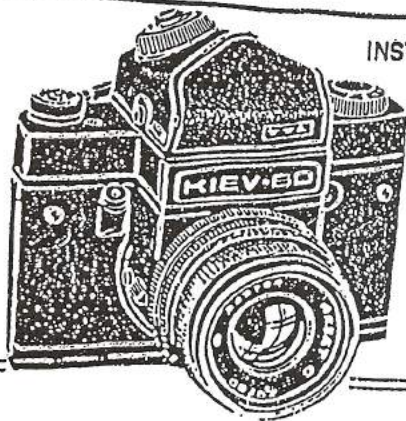


## 101 IMPOSSIBLE LESSONS

### LESSON #1 SHIELD YOUR IMPOSSIBLE IMAGES

The basics: Impossible images are sensitive to light during the first seconds outside of the camera.  
Your task: Shield them the moment they eject from the camera and during the first 4 minutes of development.

 For detailed shielding techniques visit  
[www.the-impossible-project.com/lesson1](http://www.the-impossible-project.com/lesson1)

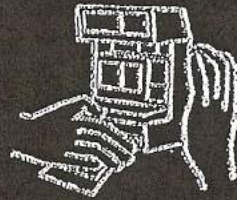



---

IMPOSSIBLE

FLASH BAR  
BY MINT

