






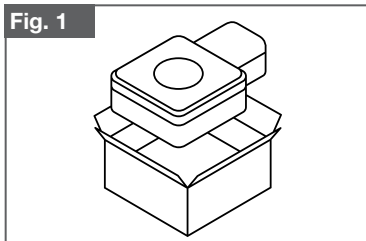
SAFETY WARNINGS IMPORTANT SAFETY INFORMATION

-  **Before you begin.**
Read these instructions completely & carefully.
-  **WARNING** Risk of electrical shock. Disconnect power before servicing or installing controller.
-  **WARNING** Risk of injury or damage. Controller will fall if not installed properly. Follow installation instructions, NEC and local codes and best trade knowledge.
-  **WARNING** Risk of injury. Wear safety glasses and gloves during installation and servicing.

 **WARNING** Risk of injury or damage. Mount only to a mechanically sound surface; All fixtures must be connected to a grounded, three-wire supply; All electrical connections must be capped with UL listed wire connectors rated 600V or higher; If supply wires are located within three inches of the LED driver, use wire rated for at least 90°C; Consult qualified electrician before installing.

Follow information on label & instructions regarding installation near combustible materials, insulation, and building materials & in Dry or Wet locations. Do not install in areas exposed to combustible vapors or gases. **This product must be installed by a person familiar with construction and operation of the product and the hazards involved, in accordance with the applicable installation. Be sure to ground the host luminaire or junction box to avoid potential electrical shock or other potential hazard.** Use of accessory equipment not recommended by the manufacturer or installed inconsistent with instructions may cause an unsafe condition. Do not allow other items to come into contact with the product, as this may cause an unsafe condition. **WARNING:** This product may contain chemicals known to the State of California to cause cancer, birth defects and/or other reproductive harm. Thoroughly wash your hands after installing, servicing, handling, cleaning, or otherwise touching this product. This device complies with FCC CFR Title 47 Part 15, Class A requirements for EMI/RFI.

INSTALLATION



Step 1: Unpack & Inspect


Carefully remove sensor from packaging. Inspect for any defects in the housing, lens and conductors before proceeding. Confirm the product includes a gasket and locknut. Confirm product ordered matches the product received.

Note: part number FMS-DLC001 is equivalent to BT-FMS-A




Step 2: Mount Sensor

- Use a 1/2 inch knockout on a clean, smooth vertical surface
- Optional for luminaires having less than 1/2 inch overhang: Remove spacer and break away the threaded chase nipple extension if desired (see cut sheet for detail).
- Install gasket between sensor body (or spacer) and outside wall of fixture enclosure
- Install locknut and tighten securely

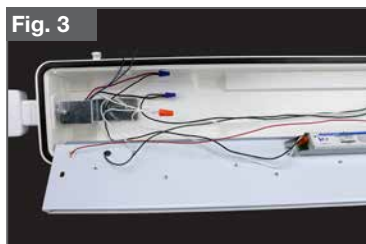

Step 3: Power Wiring

- Connect Black wire from sensor to incoming Line lead
- Connect White wire from sensor to the incoming Neutral lead, and to the white lead(s) of all LED drivers
- Connect Red wire from sensor to the black leads of all LED drivers
- Use suitably sized wire connectors rated 600VAC or higher, and conductors rated 60°C or higher

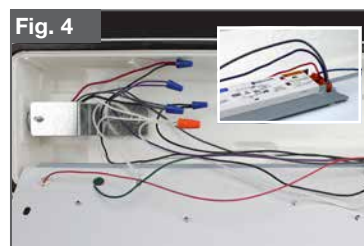

Step 4: Dimming Wires

- Connect Pink** wire from sensor to the gray or Dim(-) connections of all LED drivers
- Connect the Violet wire from sensor to the violet or Dim(+) connections of all LED drivers
- Use suitably sized wire connectors rated 600VAC or higher, and conductors rated 60°C or higher
- Close wiring compartment per manufacturer's instructions



Default Operation, No Programming Needed

For programming options see below

- Standalone fixture control
- Bi-Level control:
 - Occupancy: Maximum intensity available from luminaire
 - Vacancy: Minimum available intensity
- Timeout Delay: 20 minutes
- Daylighting control: Disabled



Programmed Operation

Programmable with an iOS Smartphone and app. Please refer to the BT-FMS-A Installation Manual for details

- Options:
- Group control (with neighboring luminaires)
 - Max & Min levels for bi-level control
 - On/Off control (as opposed to bi-level)
 - Timeout delay 15 sec to 90 min
 - Daylight enable/disable and daylight setpoint

APPLICATION ADVICE

- Once installed, device will provide basic operation (see Fig. 5 above).
- Obtain and thoroughly read **BT-FMS-A Installation Manual** if alternative operation is needed. (see Fig. 6 above)