

## JDM-150 MODEM FLOWCHART

The purpose of this guide is to inform dealers on the process of the JDM-150 goes through in the latest firmware. This version can be checked on the Remote Admin tool at http://admin.prairieprecision.com/

Current Firmware: 1.21.10309

## **MODEM PROCESS – REGULAR BOOT UP**

- 2. Power light comes on and is solid (may blink to update firmware)
- Mode Light comes on followed by JD.
   Both should be solid.
- 3. Cell/Wifi comes on solid with cell connection.

  Blinks with PPN Connection

## **MODEM PROCESS – CELL SIGNAL LOSS**

Cell/Wifi light will CONTINUE After 5 minutes the modem After 30 seconds of signal to blink (verify cell signal on % will restart (manual restart loss, data stops streaming to data rcvd on RTK page) will speed up this process) modem. After another 2-4 minutes the Once cell light starts blinking Cell light will come back on Power light comes on solid again full RTK mode will (this is dependent on network (may blink as it restarts) resume speed)