RE-PLACING YOUR FILM SHEETS (REPEAT ORDER)



When replacing acetate, remove the top two caps and insert one stud in each hole.



After removing the final two caps, you can then remove acrylic and acetate from display.



Place acrylic over acetate.



Remove the bottom two caps while holding acrylic and acetate to wall with one hand.



Place new acetate over the two studs in the top two holes.



Replace the caps in bottom two holes.



Remove the two studs at top and replace with the caps. NOTE: Use only acrylic cleaning solution