

# SIGNETMARINE Rotor Replacement Instructions

---

1. To remove the rotor, insert a small screwdriver between the rotor and the sensor ear after soaking it in hot water to soften the plastic.
2. Twist the screwdriver blade to "ex the sensor ear outward enough to remove one end of the rotor/shaft assembly. DO NOT "ex the ear any more than necessary! If it breaks, the sensor cannot be repaired.
3. Install the new rotor and shaft assembly by inserting one end into the hole in the sensor ear, then "ex the opposite sensor ear back enough to slip new rotor and shaft into place.

