

THANK YOU FOR PURCHASING THE TOUGHEST REVERSE LIGHT ON THE MARKET!

THE SWITCH ON YOUR LIGHT RUNS FROM THE RUNNING LIGHT CIRCUIT ON YOUR VEHICLE. TURN VEHICLE HEADLIGHTS/RUNNING LIGHTS ON FOR THIS MODE TO WORK PROPERLY.

FREQUENTLY ASKED QUESTIONS

HOW COME MY LIGHT IS NOT ACTIVATING WHEN MY VEHICLE IS PLACED IN REVERSE?

THE LIGHT IS ACTIVATED BY THE REVERSE LIGHT CIRCUIT ON YOUR VEHICLE'S TRAILER HARNESS. IF THE LIGHT IS NOT ACTIVATING PLEASE TEST THE PRONG ASSOCIATED WITH REVERSE LIGHTS ON YOUR TRAILER HARNESS PLUG TO ENSURE IT IS RECEIVING POWER. ADDITIONALLY, YOUR VEHICLE WILL HAVE A FUSE DEDICATED TO TRAILER REVERSE LIGHTS. PLEASE CHECK YOUR VEHICLE'S MANUAL AND ENSURE THAT THIS FUSE IS IN GOOD WORKING ORDER. ALL LIGHTS ARE TESTED TO BE FUNCTIONING PROPERLY BEFORE BEING SHIPPED! A BLOWN FUSE OF COTPODED WIFE IS ALMOST ALWAYS THE CULPTIT OF THE LIGHT NOT FUNCTIONING PROPERLY.

HOW COME MY LIGHT IS NOT ACTIVATING WHEN THE SWITCH IS TURNED ON?

THE SWITCH IS ACTIVATED BY THE RUNNING LIGHT CIRCUIT ON YOUR TRAILER PLUG. HEADLIGHTS/RUNNING LIGHTS MUST BE TURNED ON FOR SWITCH TO WORK. IF THE LIGHT IS NOT ACTIVATING WHEN THE SWITCH IS ON, CHECK YOUR VEHICLE'S MANUAL AND ENSURE THAT THE TRAILER RUNNING LIGHT FUSE IS IN GOOD WORKING ORDER.

STILL HAVE QUESTIONS?
SUPPORT@REVERSE-PRO.COM