



INSTALLATION, OPERATION & MAINTENANCE

IOM 1264-4

FEBRUARY 2024

NAVIGATOR® WWV/TWV

WATER-COOLED SCREW CHILLERS



- MODEL WWV/TWV
- 150 TO 300 TONS
- R-134a & R-513A REFRIGERANT

Introduction	3	Leaving Water Temp (LWT) Target	35
Hazard Identification	3	Unit Capacity Limits	36
General Description	4	RapidRestore Option	36
Installation	5	Circuit Functions	37
Nameplates	5	Circuit Status	38
Inspection	5	Compressor Control	38
Unit Placement	5	Evaporator EXV Control	39
Lifting Guidance	6	Circuit Capacity Overrides	40
Transit and Temporary Storage	7	Alarms	40
Long Term Storage	7	Clearing Alarms/Faults	41
Heat Exchanger Water Piping	8	Unit Alarms	42
Relief Valves	11	Circuit Alarms	44
Retrofit Knockdown	13	Events	48
Templifier	18	Unit Controller Operation	50
Source Water Piping	18	Maintenance	52
Electrical	20	Pre-Startup	52
Control Circuit	20	Flow Switch Installation and Calibration	52
Use with On-Site Generators	20	Mounting	52
Physical Data	23	Startup	56
Operation	25	Temporary Shutdown	56
Control System Architecture	25	Startup After Temporary Shutdown	56
Operator Responsibilities	25	Extended (Seasonal) Shutdown	56
Operator Schools	25	Startup After Extended (Seasonal) Shutdown	56
MicroTech Unit Controller Inputs/Outputs	26	General Maintenance	56
Set Points	27	Vibration Monitoring (Optional)	57
Circuit Level Set Points	30	Lubrication	57
Unit Function	30	Electrical Terminals	58
Unit Enable	31	Liquid Line Sight Glass	58
Unit Mode Selection	31	Appendix	60
Unit Status	32	Limited Product Warranty	60
Evaporator Pump Control	32	Pre-Start Checklist	61
Condenser Pump Control	33		
Cooling Tower Control	34		

©2024 Daikin Applied, Minneapolis, MN. All rights reserved throughout the world. This document contains the most current product information as of this printing. Daikin Applied Americas Inc. has the right to change the information, design, and construction of the product represented within the document without prior notice. For the most up-to-date product information, please go to www.DaikinApplied.com.

™ MicroTech, Navigator, SiteLine, VVR, and Daikin Applied are trademarks or registered trademarks of Daikin Applied Americas Inc. The following are trademarks or registered trademarks of their respective companies: BACnet from American Society of Heating, Refrigerating and Air-Conditioning Engineers, Inc.; Echelon, LonWorks, LonMark, and LonTalk from Echelon Corporation; Modbus from Schneider Electric; and Windows from Microsoft Corporation.

Introduction

This manual provides installation, operation, and maintenance information for Daikin Applied NAVIGATOR WWV/TWV with a MicroTech® unit controller.

NOTE: Installation and maintenance are to be performed only by licensed, if required by local codes and regulations, or qualified personnel who are familiar with local codes and regulations and are experienced with this type of equipment.

DANGER

LOCKOUT/TAGOUT all power sources prior to service, pressurizing, de-pressuring, or powering down the unit. Failure to follow this warning exactly can result in serious injury or death. Disconnect electrical power before servicing the equipment. More than one disconnect may be required to deenergize the unit. Be sure to read and understand the installation, operation, and service instructions within this manual.

WARNING

Electric shock hazard. Improper handling of this equipment can cause personal injury or equipment damage. This equipment must be properly grounded. Connections to and service of the MicroTech control panel must be performed only by personnel that are knowledgeable in the operation of the equipment being controlled.

WARNING

Polyolester Oil, commonly known as POE oil is a synthetic oil used in many refrigeration systems, and may be present in this Daikin Applied product. POE oil, if ever in contact with PVC/CPVC, will coat the inside wall of PVC/CPVC pipe causing environmental stress fractures. Although there is no PVC/CPVC piping in this product, please keep this in mind when selecting piping materials for your application, as system failure and property damage could result. Refer to the pipe manufacturer's recommendations to determine suitable applications of the pipe.

CAUTION

Static sensitive components. A static discharge while handling electronic circuit boards can cause damage to the components. Discharge any static electrical charge by touching the bare metal inside the control panel before performing any service work. Never unplug any cables, circuit board terminal blocks, or power plugs while power is applied to the panel.

Hazard Identification

DANGER

Danger indicates a hazardous situation, which will result in death or serious injury if not avoided.

WARNING

Warning indicates a potentially hazardous situations, which can result in property damage, personal injury, or death if not avoided.

CAUTION

Caution indicates a potentially hazardous situations, which can result in minor injury or equipment damage if not avoided.

NOTICE

Notice indicates practices not related to physical injury.

NOTE: Indicates important details or clarifying statements for information presented.

General Description

Daikin Applied Navigator® model WWV chillers are complete, self-contained, automatically controlled, liquid-chilling units featuring variable speed screw compressors. All model WWV chillers are equipped with a single cooling circuit and single compressor.

Navigator chillers are designed for indoor installation only. The chillers use refrigerant R-134a or R-513A, with no ozone depletion level.

NOTICE

Indoor installations must be in a structure with a permanent floor and roof. The unit must be enclosed by walls for protection from weather conditions.

The WWV is made up of a high efficiency, new variable volume ratio (VVR®) series single screw compressor, flooded shell and tube evaporator, and a shell and tube condenser. The compressor is designed to operate in a very wide operating range and ensure the best possible efficiency in each working condition. In this regard, a sophisticated device dynamically manages the VVR. This system ensures the optimum position of the discharge ports as a function of the operating compression ratio, choosing one among the four available positions.

All the described components are managed by an innovative microprocessor control system that optimizes operations by monitoring all the machine operating parameters. A diagnostic system helps the operator in identifying alarm and fault causes.

Only normal field connections such as water piping, electric power, and control interlocks are required, thereby simplifying installation and increasing reliability. Necessary equipment protection and operating controls are included.


All Daikin Applied screw chillers must be commissioned by a Daikin Applied service technician or an authorized service provider. Failure to follow this startup procedure can affect the equipment warranty.

The standard limited warranty on this equipment covers parts that prove defective in material or workmanship. Specific details of this warranty can be found in the warranty statement at the back of this manual.

Templifier models

Templifier® units are designed to operate over a large range of temperatures so as to have wide application possibilities. In addition to the standard cooling mode, Templifier models have a heating mode to control the condenser leaving water temperature and a higher max condenser leaving water temperature. See page 18 for more information.

Nomenclature

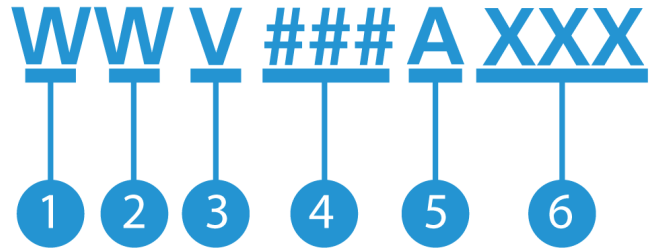

No.	Description
1	W = Water-cooled T = Templifier
2	W = World
3	V = Variable Speed Chiller
4	Compressor Size
5	Design Vintage
6	Circuit Configuration

Installation

Operating Limits

Table 1: WWV Operating/Standby Limits

Operating/Standby Limit	Temperature
Maximum mechanical room ambient temperature during chiller operation	113°F (45°C)
Maximum mechanical room ambient temperature during chiller storage - with maximum non-condensable relative humidity of 95%	122°F (50°C)
Evaporator outlet fluid temperature setpoint range - Cool Mode	25.0°F (-3.9°C) to 77°F (25°C)
Evaporator outlet fluid temperature requiring glycol	< 40°F (4.4°C)
Maximum fluid temperature in evaporator for startup	109.4°F (43°C)
Range of evaporator and condenser fluid temperature change across vessels	Condenser Single Pass and Evaporator 2 Pass: 7.2°F (-13.8°C) to 14.4°F (-9.8°C) Condenser 2 Pass: 10°F (-12.2°C) to 40°F (4.4°C)
NOTE:	
Contact a Daikin Applied representative for performance at specific operating conditions, as some limits depend on unit configuration	

Nameplates

The unit nameplate is located on the exterior of the Unit Power Panel. Both the Model No. and Serial No. are located on the unit nameplate; the Serial No. is unique to the unit. These numbers should be used to identify the unit for service, parts, or warranty questions. This plate also has the unit refrigerant charge and electrical ratings. Evaporator data plate is under insulation and contains the serial number. Compressor nameplate is located on each compressor and gives pertinent electrical information.

WARNING

Installation is to be performed by qualified personnel who are familiar with local codes and regulations.

CAUTION

When around sharp edges, wear appropriate Personal Protective Equipment (PPE), such as gloves, protective clothing, foot wear, eye protection etc. to prevent personal injury.

Inspection

Check all items carefully against the bill of lading. Inspect all units for damage upon arrival. Report shipping damage and file a claim with the carrier. Check the unit nameplate before unloading, making certain it agrees with the power supply available. Daikin Applied is not responsible for physical damage after the unit

leaves the factory.

Unit Placement

NOTICE

Navigator chillers are designed for indoor installation only. Indoor installations must be in a structure with a permanent floor and roof. The unit must be enclosed by walls for protection from weather conditions.

The unit must be mounted on a level cement or steel base, suitable to support the overall weight of the complete machine in operation, and must be positioned so as to provide space for maintenance at one end of the unit, to allow the cleaning and/or the removal of the evaporator and the condenser tubes. The condenser and evaporator tubes are expanded inside the tube sheets to allow replacement, if necessary.

The machine position should be designed to ensure access to all the safety and control devices. Never cover the safety devices (safety valves, pressure switches). The safety valves must be connected externally.

These units include the installation of safety valves for each exchanger, installed on an exchange tap, which always maintains an active valve. Thus, safety valves must be connected outside of the equipment room.

Mounting Hole Access

After positioning, the shipping rails should be removed and the machine must be firmly anchored to the ground or foreseen metal structure to support the machine. In this regard, 0.87 in (22 mm) diameter holes are included on the unit supports for securing mounting bolts, etc. Mounting location dimensions are given in Dimensional Drawings beginning on page 22. When mounted, the base of the unit must be level to within ± ½ inch (12.7 mm) across the length and width of the unit.

Service Access

The control panels are located on the front of the chiller and require a minimum of four feet of clearance in front of the panels.

DANGER

Disconnect, lockout and tag all electrical power to the unit before servicing compressors and/or recovering refrigerant. Failure to do so can cause bodily injury or death.

Clearance Requirements

The unit must be placed in an area that allows for adequate clearance around the unit. Doors and removable wall sections can be utilized to meet these clearance requirements. There must be a minimum of 3 to 4-foot clearance above the top of the chiller. The U.S. National Electric Code (NEC) or local codes can require more clearance in and around electrical components and must be checked for compliance.

Lifting Guidance

Daikin Applied equipment is designed to withstand the loads of the lifting and rigging process resulting from ASME Standard P30.1 - Planning for Load Handling Activities or equivalent. Lifting guidance is intended for installations of newly delivered equipment. If moving previously installed equipment for re-location or disposal, consideration should be given to unit condition. Equipment should also be drained as unit weight and center of gravity values do not reflect the addition of water for lifting.

⚠ DANGER

Improper rigging, lifting, or moving of a unit can result in unit damage, property damage, severe personal injury, or death. See the as-designed, certified dimensioned drawings included in the job submittal for the weights and center of gravity of the unit. If the drawings are not available, consult the local Daikin Applied sales office for assistance.

Installation is to be performed only by qualified personnel who are familiar with local codes and regulations, and experienced with this type of equipment. Lifting equipment and mechanisms must be determined by the Lifting Director per the current version of ASME Standard P30.1 or equivalent and must be suited for the load capacity. Daikin Applied is not a licensed nor certified rigging specialist. Therefore it is the customer's responsibility to consult a certified rigging contractor to rig, lift, and move components and subcomponents properly and safely as needed.

⚠ CAUTION

Forklifts may not be used to lift or move Navigator units as the method may result in unit damage.

⚠ CAUTION

When around sharp edges, wear appropriate Personal Protective Equipment (PPE), such as gloves, protective clothing, foot wear, eye protection, etc. to prevent personal injury.

Lifting Brackets

Lifting bracket designs vary from product to product. Rules of engagement with the lifting brackets are the same regardless of the bracket type. For Navigator units, a typical lifting bracket with 2" (51 mm) diameter holes found on the sides of the unit base are illustrated in Figure 1. See the as-designed certified drawings for specific lifting points on this product model.

Engagement with each bracket is to be as close to vertical as possible. The maximum allowable lift angle from the vertical is 30° as shown in Figure 2. If the lift angle shifts beyond 30° from vertical on any of the lift points, the lift shall not proceed until a plan and rigging can be secured that will correct the angle of lift.

⚠ WARNING

The lifting angle must not go beyond 30 degrees from vertical or the unit can become unstable which may result in unit damage, property damage, severe personal injury, or death.

Figure 1: Illustration of Lifting Bracket and Allowed Angle for Lifting

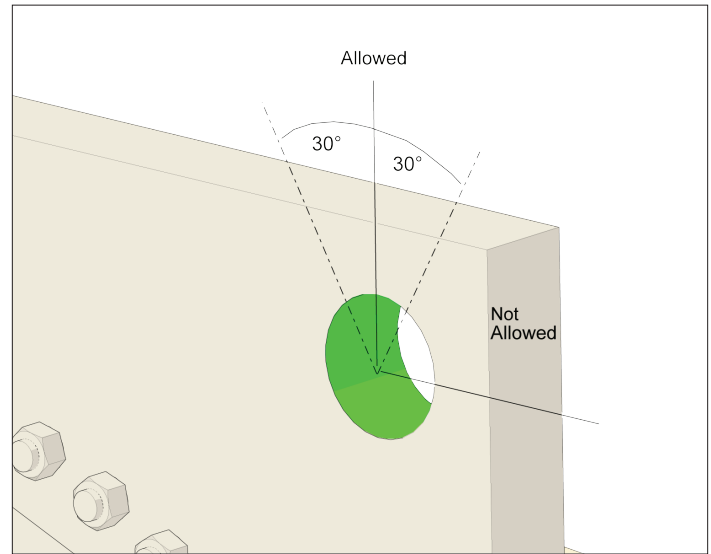


Figure 2: Illustration of Allowed Angle Label

⚠ WARNING

All factory provided lifting points must be used. Unit must remain level during lift and transit!

The lifting and tie-down angle must not go beyond 30 degrees from vertical or the unit can become unstable which may result in unit damage, property damage or severe personal injury or death.

Lifting Equipment

Lifting equipment is supplied by the user or their designate. This is typically selected around the unit certified information of the equipment to be lifted and the available lifting equipment planned to be at the site where the lift is to take place. It is the responsibility of the Lifting Director to follow a standard practice of lift planning and equipment selection, like that found in the ASME P30 series of standards. Lifting plan and equipment must ensure that the only contact with the unit is at the lifting brackets. Straps, chains or spreader bars that are likely to be used shall not come in contact with the unit.

CAUTION

Lifting mechanisms must not make contact with the unit beyond the lifting bracket. Extreme care must be used when rigging the unit to prevent damage to the control panels, unit handles, unit piping, and unit frame.


Lifting Points

Lifting points are predetermined by design. When lifting, all factory installed lifting brackets must be used. Figure 3 illustrates typical 4 point lifting configuration, with four lifting points on each side of the unit. The unit must remain level throughout the entire lifting event. Level is defined as one end being no more than 0.25" per foot of unit length to the opposite end.

WARNING

Be aware that the center of gravity may not necessarily be in the geometric center of the unit. No additional items can be added to a lift with the unit as it may affect the center of gravity and cause unit damage, property damage, severe personal injury, or death. Refer to as-designed, certified drawings for weight, center of gravity location and details specific to unit configuration.

Figure 3: Lifting Points Locations

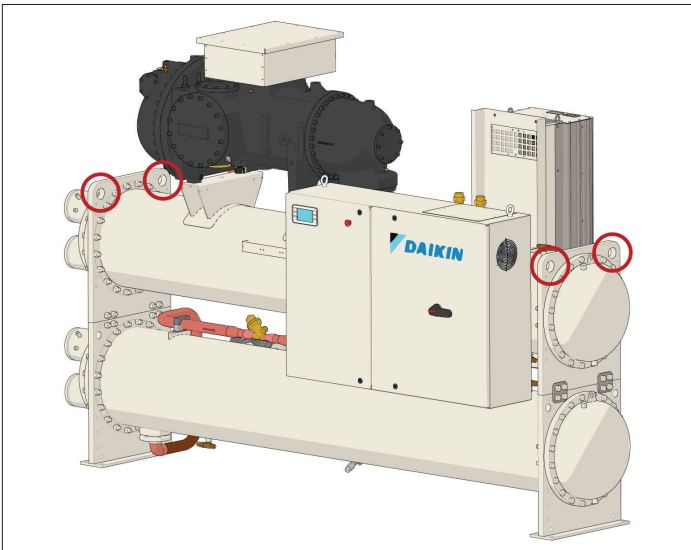

Transit and Temporary Storage

If the unit is stored for an intermediate period before installation or moved to a different location, take these additional precautions:

1. Support the unit well along the length of the base rail.
2. Level the unit (no twists or uneven ground surface).

3. Provide proper drainage around the unit to prevent flooding of the equipment.
4. Provide adequate protection from vandalism, mechanical contact, etc.
5. Securely close the doors and lock the handles.
6. Long term storage in humid environments may cause condensate corrosion on steel surfaces. Consider adding a desiccant material to alleviate corrosion concerns.

When the unit is being tied down for transit, the maximum allowable attachment angle from the vertical is 30 degrees in the opposite direction of lifting in Figure 2. Shimming of the unit under the lifting brackets or tie-down points must be used to ensure even contact along the length of the base rail.

Long Term Storage

This information applies to new units being stored waiting for startup or to existing units that may be inoperative for an extended period of time.

The chiller must be stored in a dry location and protected from any damage or sources of corrosion. A Daikin Applied service representative must perform an inspection and leak test of the unit on minimum quarterly schedule, to be paid by the owner or contractor. Daikin Applied will not be responsible for any refrigerant loss during the storage time or for repairs to the unit during the period of storage, or while moving the unit from the original location to a storage facility and back to any new installation location. If there is concern about the possibilities of damage and loss of charge during storage, the customer can have the charge removed and stored in recovery cylinders.

CAUTION

If the temperature of where the chiller is located is expected to exceed 122°F (50°C), then the refrigerant must be removed.


Should it be necessary to store the unit prior to installation, it is necessary to observe some precautions.

- Do not remove the protective plastic
- Do not leave the unit exposed to the elements
- Do not expose the unit to direct sunlight
- Do not use the machine near a heat source and/or open flame
- Keep in places where room temperature is between + 41°F (5°C) to 122°F (50°C) (room temperature over the maximum limit may trigger the relief valve resulting in loss of refrigerant)

For additional tasks required, contact a Daikin Applied service representative.

Heat Exchanger Water Piping

Figure 4: Typical Piping, Shell and Tube Evaporator

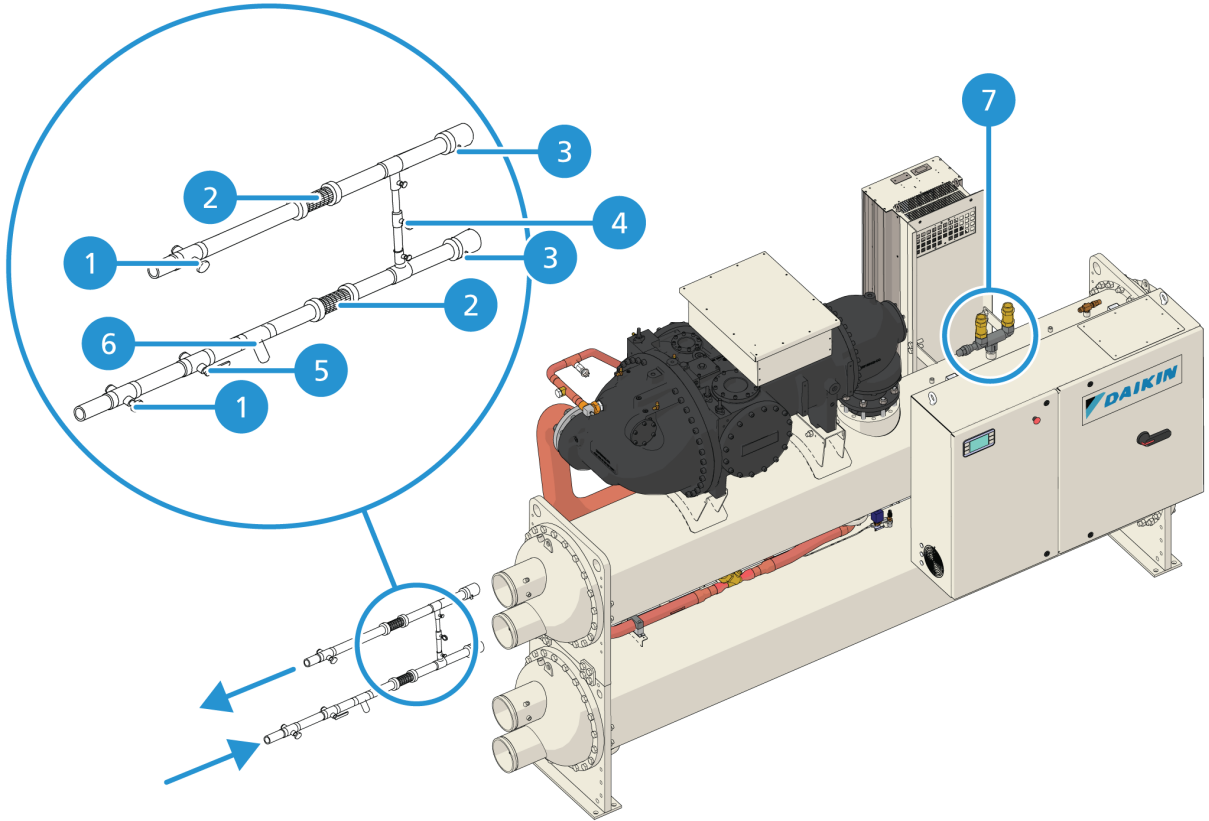

No.	Component
1	Gate Valve (2)
2	Vibration Eliminators (2)
3	Temp. Sensor Wells (2)
4	Valved Pressure Gauge
5	Balancing Valve
6	Water Strainer
7	Relief Pipe Plug

Be sure that water inlet and outlet connections match certified drawings and nozzle markings.

Field installed water piping to the chiller must include:

- air vents at the high points.
- a cleanable water strainer upstream of the evaporator and condenser inlet connections.
- a flow proving device for both the evaporator and condenser to prevent freeze up. Flow switches, thermal dispersion switches, or Delta-P switches can be used. Note that thermal dispersion flow switches are factory installed as standard. Additional flow switches can be used only if they are connected in series with the ones already provided.
- sufficient shutoff valves to allow vessel isolation. The chiller must be capable of draining the water from the evaporator

or condenser without draining the complete system.

- matching mechanical connections. All evaporators and condensers have OGS-type grooved water connections (adhering to Standard AWWA C606) or optional flange connections. PVC piping should not be used.
- water pressure gauge connection taps and gauges at the inlet and outlet connections of both vessels for measuring water pressure drop.

⚠ WARNING

Polyolester Oil, commonly known as POE oil is a synthetic oil used in many refrigeration systems, and is present in this Daikin Applied product. POE oil, if ever in contact with PVC/CPVC, will coat the inside wall of PVC/CPVC pipe causing environmental stress fractures. Although there is no PVC/CPVC piping in this product, please keep this in mind when selecting piping materials for your application, as system failure and property damage could result. Refer to the pipe manufacturer's recommendations to determine suitable applications of the pipe.

It is recommended that field installed water piping to the chiller include:

- temperature sensors at the inlet and outlet connections of both vessels.

CAUTION

When common piping is used for both building heating and cooling modes, care must be taken to provide that water flowing through the evaporator cannot exceed 109.4°F (43°C). Water this hot can damage controls or cause the relief valve to discharge refrigerant.

Piping must be supported to eliminate weight and strain on the fittings and connections. Chilled water piping must be adequately insulated.

Inlet Strainer Guidelines

An inlet water strainer must be installed in the chilled water piping before the evaporator inlet. Two paths are available to meet this requirement:

1. A field-installed kit shipped loose with the unit that consists of:
 - Y-type area strainer with 304 stainless steel perforated basket, groove pipe connections and strainer cap
 - Extension pipe with two Schrader fittings that can be used for a pressure gauge and thermal dispersion flow switch. The pipe provides sufficient clearance from the evaporator for strainer basket removal
 - ½-inch blowdown valve
 - Two grooved clamps
2. A field-supplied strainer that meets specification and installation requirements of this manual on www.DaikinApplied.com.

Inlet and outlet connections are clearly marked on the unit and also appear on the dimension drawings. Drain connections should be provided at all low points in the system to permit complete drainage. Air vents should be located at the high points in the system to purge out air. A vent connection, located on top of the evaporator vessel, permits the purging of air out of the evaporator. Air purged from the water system prior to unit start-up provides adequate flow through the vessel and prevents safety cutouts on the freeze protection. System pressure should be maintained by using a properly sized expansion tank.

Pressure gauges should be installed in the inlet and outlet water lines to the evaporator. Pressure drop through the evaporator should be measured to calculate proper gpm (L/s) as specified in the Pressure Drop tables.

Source water piping may have to be insulated (depending on its temperature) to reduce heat loss and prevent condensation if cold water is used. If cooling tower water is used, insulation may not be necessary. Complete unit and system leak tests should be performed prior to insulating the water piping. Insulation with a vapor barrier is recommended. If the vessel is insulated, the vent and drain connections must extend beyond the proposed insulation thickness for accessibility. If the unit operates year-round, or if the system is not drained for the winter, the chilled water piping exposed to outdoor ambient should be protected against freezing by wrapping the lines with a heater cable.

System Water Volume

All chilled water systems need adequate time to recognize a load change, respond to that load change and stabilize, without undesirable short cycling of the compressors or loss of control. In air conditioning systems, the potential for short cycling usually exists when the building load falls below the minimum chiller plant capacity or on close-coupled systems with very small water volumes. Some of the things the designer should consider when looking at water volume are the minimum cooling load, the minimum chiller plant capacity during the low load period and the desired cycle time for the compressors.

A storage tank may have to be added to the system to reach the recommended system volume. Refer to AG 31-003 for method of calculating "Minimum Chilled Water Volume".

The water quality provided by the owner/occupant/operator/user to a chiller system should minimize corrosion, scale buildup, erosion, and biological growth for optimum efficiency of HVAC equipment without creating a hazard to operating personnel or the environment. Strainers must be used to protect the chiller systems from water-borne debris. Daikin Applied will not be responsible for any water-borne debris damage or water side damage to the chiller heat exchangers due to improperly treated water.

Water systems should be cleaned and flushed prior to chiller installation. Water testing and treatment should be verified during initial chiller installation/commissioning and maintained on a continuous basis by water treatment professionals (see Limited Product Warranty).


CAUTION

The improper use of detergents, chemicals, and additives in the chiller system water may adversely affect chiller performance and potentially lead to repair costs not covered by warranty. Any decision to use these products is at the discretion of the owner/occupant/operator/user as such they assume full liability/responsibility for any damage that may occur due to their use.

Vessel Drains at Startup

The unit is drained of water at the factory. Drain plugs for each vessel head are shipped separately in the control box. Units are shipped with the drain plug in the top water box vent hole and no plug in the bottom drain hole. Install the bottom drain plugs prior to filling the vessel with fluid. See [Figure 5](#).

Figure 5: Drain Plug Installation

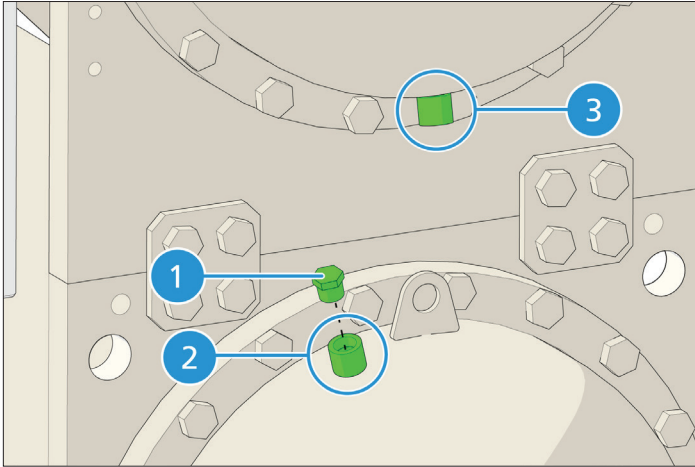


No.	Description
1	Plug
2	Vent Hole (Air Purge)
3	Drain Hole (Under Insulation)

Flow Switch

A flow switch must be included in the chilled water system to prove that there is adequate water flow to the evaporator before the unit can start or to shut down the unit if water flow is interrupted. A solid state, thermal dispersion flow switch that is factory-wired is standard and is mounted in the chiller leaving water nozzle.

Figure 6: Flow Switch

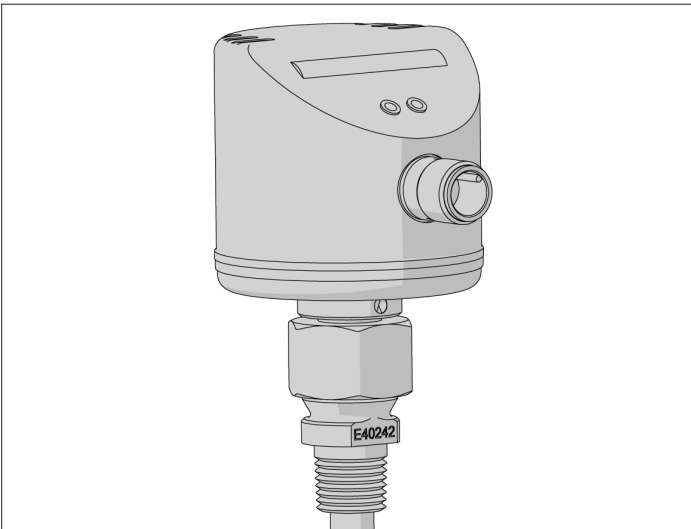

Temperature sensors and pressure gages are recommended on the water pipes near the heat exchangers connections. Furthermore, air vents must also be installed at the highest points on the pipe.

Should water pump noise be excessive, we recommend using flexible connectors at both pump or chiller inlet and outlet.

Variable Speed Pumping

Reducing evaporator flow in proportion to load can reduce system power consumption. Daikin Applied chillers are designed for variable water flow duty provided that the rate of change is less than 10 percent of the design flow per minute, and the minimum and maximum flow rates for the evaporator are not exceeded. If flow drops below the minimum allowable, large reductions in heat transfer can occur. If the flow exceeds the maximum rate, excessive pressure drop and tube erosion can occur. For example, if the maximum design flow is 200 gpm and it will be reduced to a flow of 140 gpm, the change in flow is 60 gpm. Ten percent of 200 gpm equals 20 gpm change per minute, or a minimum of three minutes to go from maximum to desired flow.

Glycol Solutions

Test coolant with a clean, accurate glycol solution hydrometer or refractometer to determine the freezing point. On glycol applications, the supplier normally recommends that a minimum of 25% solution by weight be used for protection against corrosion or that additional inhibitors should be employed.

The use of glycol may impact system performance depending on its concentration and should be considered during initial system design.

⚠ CAUTION

Do not use automotive grade antifreeze. Industrial grade glycols must be used. Automotive antifreeze contains inhibitors that will cause plating on the copper tubes within the chiller evaporator. The type and handling of glycol used must be consistent with local codes.

Ice Mode

Ice making chillers will run very cold fluid during off hours, when energy is least expensive, to build a tank of ice. In ice building mode, the unit will operate at full load until the shutoff temperature setpoint is reached. Optional double evaporator insulation is recommended for ice mode operation. The standard controller software will require “ice” setpoint changes and a digital signal into the controller is required to change to the ice mode and back to standard cooling. Set points related to ice mode can be found in “Unit Level Set Points” on page 27 and wiring connection points are shown in Figure 16.

Condenser Water Control

The minimum condenser inlet water temperature should not be less than 60°F (15.6°C). If the water temperature is lower, a method of condenser water temperature control will be required. Cooling tower control is discussed beginning on page 34.

Two-Way Bypass Valve Operation

A two-way regulating control valve can control flow to ensure adequate condenser water temperature. The unit controller can send a 0-10Vdc signal to the valve to modulate its position.

Three-Way Bypass Valve Operation

To modulate the water temperature in the condenser, install a three-way by-pass valve. The three-way valve position can be modulated by a 0-10Vdc signal from the unit controller to regulate proper water temperature.

VFD Operating with a Condenser Water Pump

In place of a valve, use a circulation pump controlled by an inverter.

The VFD speed may be controlled by an analog 0-10 Vdc signal issued by the controller according to the water temperature entering the condenser.

Relief Valves

As a safety precaution and to meet code requirements, each chiller is equipped with pressure relief valves located on the condenser and evaporator for the purpose of relieving excessive refrigerant pressure (caused by equipment malfunction, fire, etc.) to the atmosphere.

Table 2: Three-Way Relief Valve Data


Chiller	WWV	
Relief Valve	Evaporator	Condenser
Location	Top of vessel	Top of vessel
Pressure Setting (psi)	225	325
Discharge Cap.(lb/min air)	84.4	111
Qty	1 set	1 set
Connection Size	1.0-inch female NPT	1.0-inch female NPT

Building codes require that relief valves be vented to the outside of a building. Relief piping connections to the relief valves must have flexible connectors.

Remove plastic shipping plugs (if installed) from the inside of the valves prior to making pipe connections. Whenever vent piping is installed, the lines must be in accordance with local code requirements and ANSI/ASHRAE Standard 15 code recommendations must be followed.

In order to ensure proper installation, it is important to know how the three-way relief valve functions. One valve remains active at all times and the second valve acts as a standby. When the stem of the three-way valve is turned into the valve completely, the valve is in "Front Seated Position" and all refrigerant will flow through the back outlet port, as shown in Figure 8. When the stem of the three-way valve is turned back completely, the valve is in "Back Seated Position" and all refrigerant will flow through the front outlet port as shown in Figure 9.

Figure 7: Three-Way Relief Valve

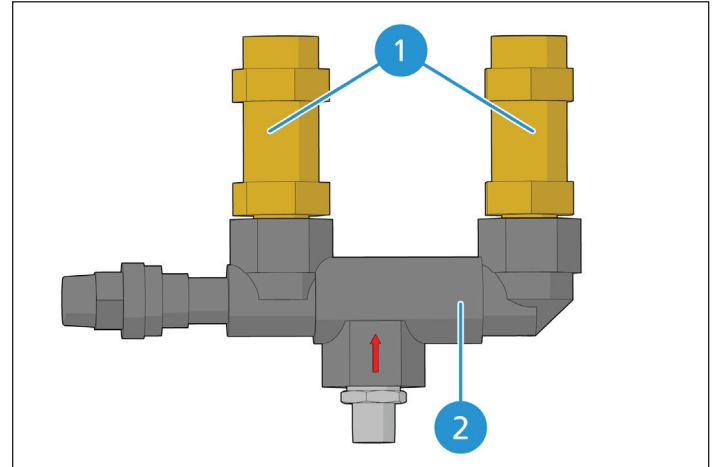

No.	Description
1	Relief Valves
2	Three-Way Valve

Figure 8: Three-Way Valve, Front Seated Position


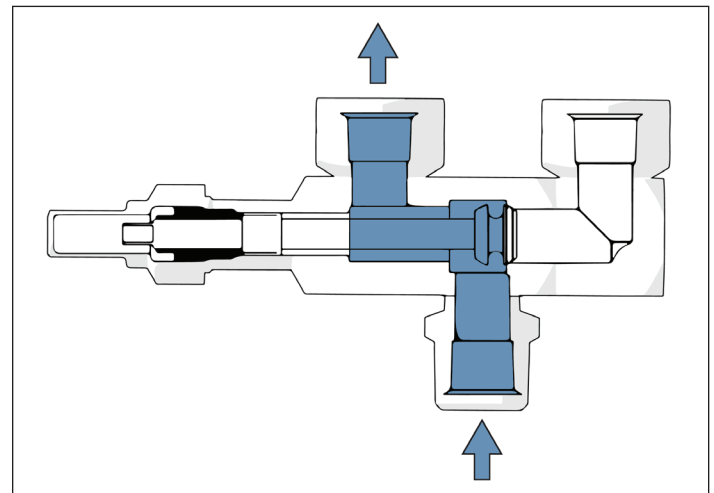


Figure 9: Three-Way Valve, Back Seated Position

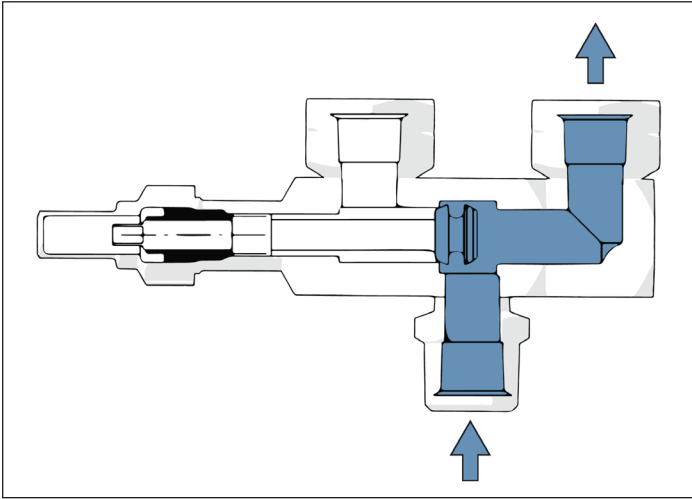


When the valve stem is not turned forward or turned back completely, the valve is in “Mid Position,” as shown in Figure 10.

CAUTION

Do not operate the system with the three-way valve stem in the Mid Position.

Figure 10: Three-Way Valve, Mid Position

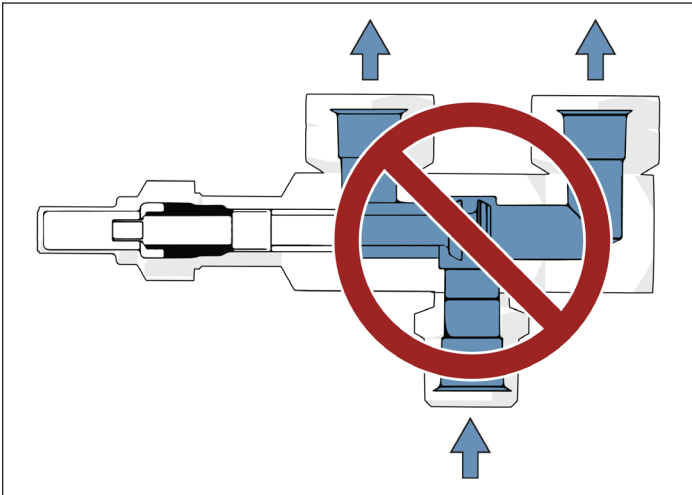


Retrofit Knockdown

It is estimated that fifty percent of retrofit applications require partial or complete disassembly of the chiller. WWV chillers are relatively easy to disassemble due to the small compressor size and simplified refrigerant piping. Two knockdown arrangements, Type A and Type B, are available as options. All major components (evaporator, condenser, compressor, unit control panel and compressor) are designed with lifting holes or eyebolts that should be utilized in moving these pieces individually.

Type A Knockdown, “Bolt-Together Construction”

Chillers are built and shipped completely assembled with bolt-together construction on major components for field disassembly and reassembly on the job site.

Figure 11: Knockdown Piping Connections - Exploded View

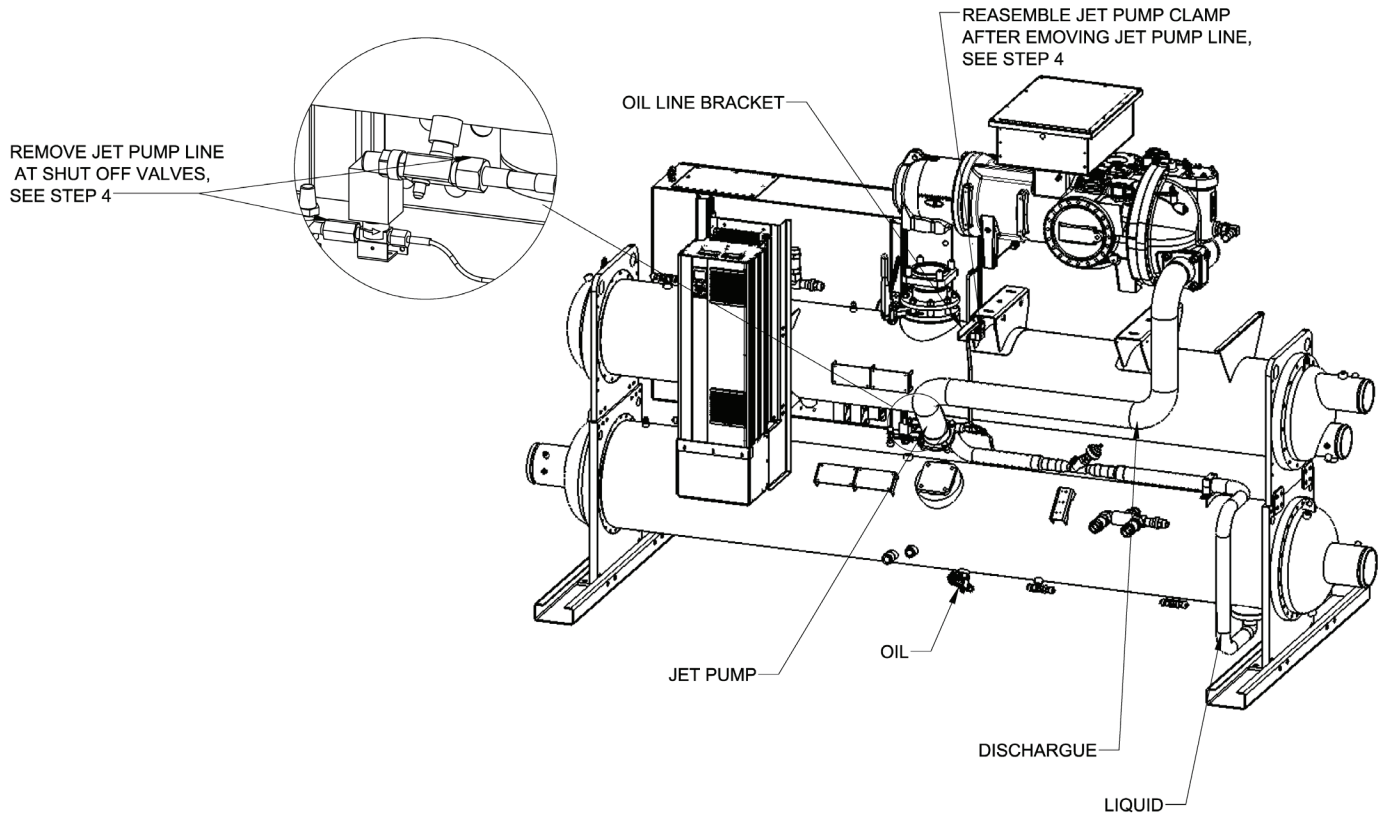

Type A Scope:

- Chiller components are manufactured with bolt-together construction designed for field disassembly and reassembly on-site.
- Suction and discharge lines have bolt-on flanges.
- Unit ships with vessel and/or head insulation.
- Unit ships with full factory refrigerant charge in the chiller.
- Unit ships with replacement refrigerant gaskets and O-rings, stick-on wire ties, and touch-up paint. Unit is fully tested at the factory prior to shipment.
- Site disassembly and reassembly must be supervised or completed by Daikin Applied service personnel.
- Block off plates are required to cover any refrigerant connection left open for extended periods of time. Contact Daikin Applied service to obtain these parts.
- Ideal for retrofit applications where site disassembly is needed due to installation clearances.

Type B Knockdown, “Bolted Construction, Shipped as Parts”

Compressor(s), power boxes and control box are removed at the factory and shipped on separate skids; combined vessel stack is shipped together as a sub-assembly.

Type B Scope:

- All associated piping and wiring remain attached, if possible.
- All free piping ends are capped.
- Unit ships with vessel and/or head insulation, if ordered.
- Refrigerant will not be shipped with the chiller and must be procured by others.
- Compressor(s) and vessels receive an inert gas holding charge.
- Unit ships with replacement refrigerant gaskets and O-rings, stick-on wire ties, and touch-up paint.
- Unit is fully tested at the factory prior to shipment.
- Site reassembly must be supervised or completed by Daikin Applied service personnel. Cost for unit reassembly and supervision by Daikin Applied service is not included in the purchase price of the equipment. Contact Daikin Applied service for pricing.
- Ideal for retrofit applications where it is desired that the compressor(s), power box, and control box be removed at the factory, prior to shipment, and where refrigerant may be secured by others.

Compressor Dimensions

Figure 12: WWV Compressor Dimension Schematic

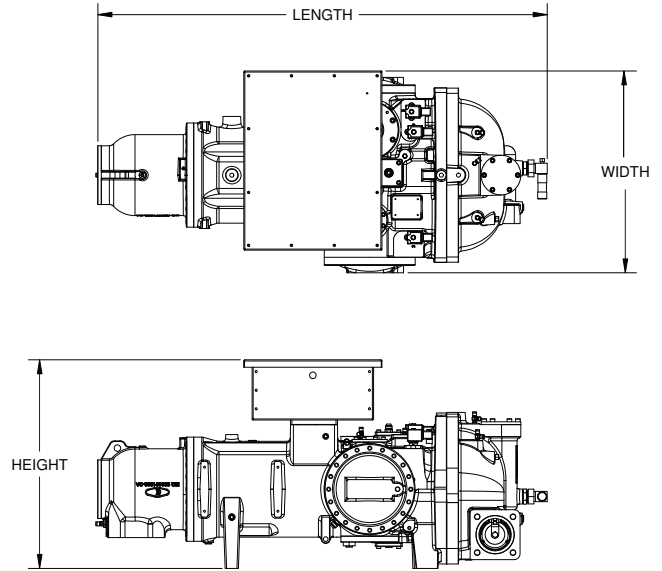


Table 3: Compressor Dimensions and Weights

Com-pressor	Dimensions			
	Length (in)	Width (in)	Height (in)	Weight (lbs)
JNNS	60.5	27.1	28.0	1534
MNNS	61.6	28.0	29.1	1925
RNNS	64.6	30.5	31.4	2778

Unit Knockdown Dimensions

Figure 13: Unit Dimensional Diagram for Typical WWV Knockdown

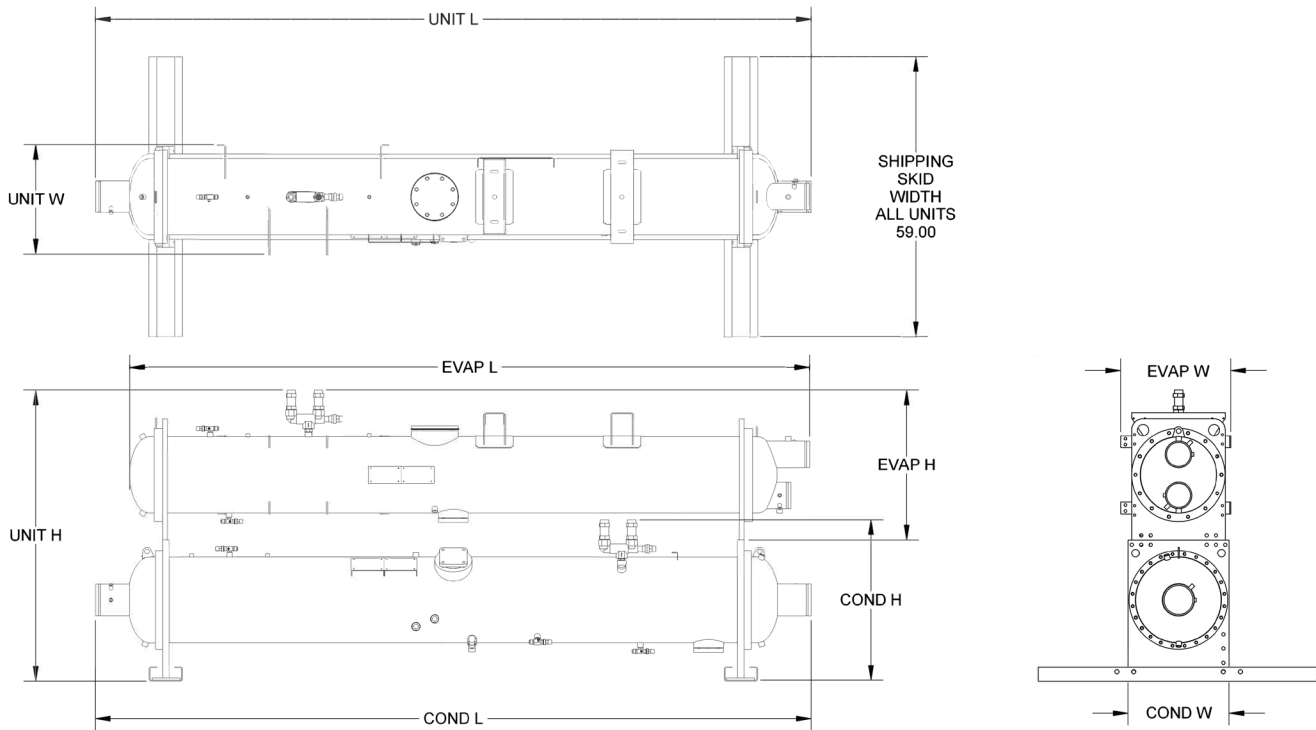


Table 4: WWV Knockdown Dimensions

	Combined Unit Configurations			
	E16/C18	E16/C20	E20/C20	E24/C24
Length (in)	150.7	149.7	149.8	152
Width (in)	23.2	23.2	25.2	30.4
Height (in)	61.2	61.2	65.4	73.3

	Separated Evaporator			Separated Condenser		
	E16	E20	E24	C18	C20	C24
Length (in)	143.2	144.3	142.7	150.7	149.3	151.5
Width (in)	23.2	25.2	30.4	21.3	23.7	28.4
Height (in)	31.7	35.9	38.5	33.8	34.6	38.1
Weight (lb)	1783	2579	3646	2398	2999	4371

NOTE: Weight based on maximum tube configuration and heaviest waterbox combination.

NOTE: Weight and “corner point” weight values are presented with a +/- 5% tolerance.

Type A Knockdown Disassembly

Removal of specific components only may be necessary for job site installation. Steps outlined below illustrate knockdown of compressor, all refrigerant lines and electrical items. Additional knockdown details will be shipped with the unit in the control panel. During disassembly, save gaskets for block offs and bolts, washers, and nuts for use later to install block off plates.

CAUTION

Standard torque specs must be followed when re-installing bolts, unless otherwise stated for specific components. Contact Daikin Applied service for this information.

1. Recover refrigerant charge from the unit.
2. Remove discharge line at compressor and condenser connections.
3. Remove liquid line at evaporator and condenser connections, leaving the liquid line clamp on the top of the condenser.
4. Remove jet pump line at shutoff valve on condenser and evaporator. Reassemble the clamp attached to the compressor bracket after copper jet pump line is removed.
5. Remove oil line at Rotolock connection on compressor and condenser connection. Remove support bracket attached to compressor mounting foot. Leave the clamp and bracket attached to the oil line.
6. Remove power wire harness assemblies from the bottom of the VFD to the unit control box and to compressor terminal box but leave the bus bars, electrical barrier, ground strap, and fittings installed.

7. Disconnect the thermister wires from the compressor terminal box and coil them inside the VFD - do not disconnect from the VFD terminal block. Unbolt VFD from mounting brackets and use lifting lugs to remove the panel.
8. Disconnect the high pressure switch from the control box end only and leave connected to the compressor.
9. Remove compressor using lifting lugs and install blockoffs on the discharge and suction connections; then remove suction line.
10. Disconnect all solenoids from the chiller but leave connected to the control box; the jet pump solenoid harness should include the solenoid coil.
11. Disconnect the multi-cable connectors from the back side of the control box. Leave all transducers and flow sensors installed on the chiller, just remove the cables. Unmount the control box and use lifting lugs to remove the control panel.
12. Ensure vessel blockoffs are installed at suction, discharge, and liquid connections as shown in [Figure 15](#). Refer to detailed knockdown instructions included in the chiller control panel for discharge line bolt torque specifications.
13. Vessels can be further separated at tubesheet braces if needed, leaving relief valves attached. Use lifting holes in the tubesheets to properly move vessels.

Figure 14: Power Wiring Inside VFD


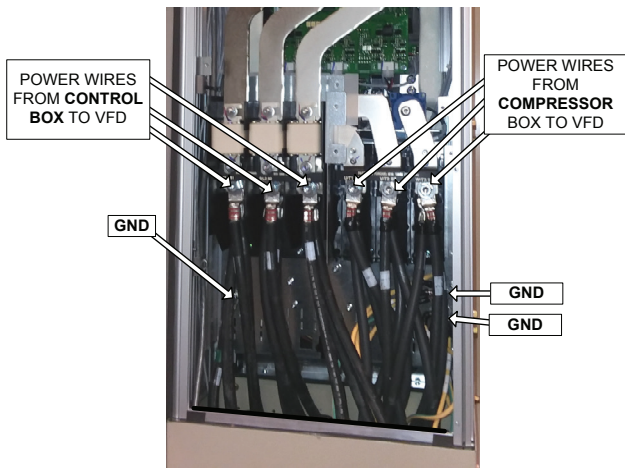


Figure 15: Vessel Blockoff Locations

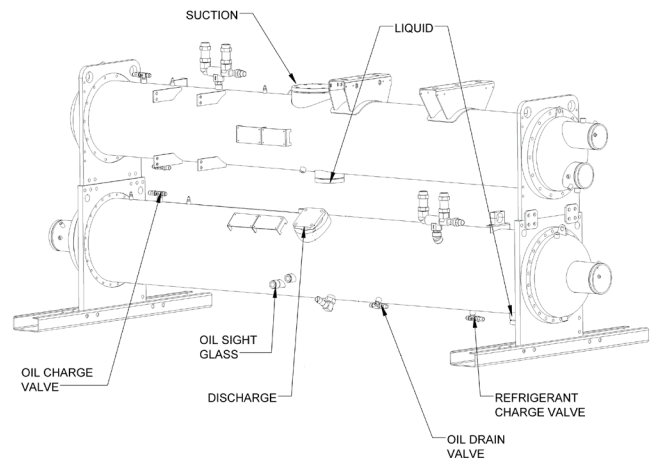

Type B Knockdown Disassembly

Type B knockdown units are shipped disassembled except for the vessel stack and are shipped without refrigerant. If the stack size or weight dictates further disassembly, the vessels can be separated by disconnecting any interconnecting wiring and tubing and then unbolting the tube sheet braces while ensuring the vessel weights are safely supported. Vessels have holes designed into each tubesheet for lifting purposes. The vessels and compressors have an inert gas holding charge that must be released prior to attempting to open any connection.

WARNING

Remove compressor, piping, or vessel holding charge through the Schrader valve in the block off plates before attempting to loosen any fittings on them. Failure to do so can cause severe bodily injury.

Reassembly

1. Reassemble the vessel stack, if disassembled, and reconnect any wiring and tubing.
2. Mount the compressor on the stack. Be careful to avoid damaging lines already mounted on the unit. Mounting bolts, washers, and nuts are shipped loose. Leave the mounting bolts loose until the suction and discharge lines are installed and aligned.

During assembly, bolts holding block off plates are used for reassembly of the component.
3. Do not remove block offs until ready to install piping. The compressor and vessels have a Schrader valve on their block off plates to be used for relieving the inert gas holding charge.
4. Install the suction, discharge, and liquid line piping. For Type B knockdown, the piping is shipped in crates and on pallets. Tighten bolts after each line has been installed and aligned, referring to detailed knockdown instructions included in the chiller control panel for discharge line bolt torque specifications. Insulate the suction line with the insulation and glue provided.
5. Install the control panel and reattach wiring to the unit.
6. Install VFD on the mounting brackets and reconnect wiring to the unit control panel and compressor terminal box. Refer to detailed knockdown instructions included in the chiller control panel to properly place the wires.
7. Pressure (leak) test, evacuate, and charge with field-supplied R-134a or R-513A using standard refrigeration practices.

Templifier

Templifier Operating Limits

Templifier units are designed to operate over a large range of temperatures so as to have wide application possibilities. The following operating limits are based on vessel and compressor limits.

Table 5: Templifier Operating Limits

Description	Limit
Maximum allowable condenser water pressure	225 psig (1552 kPa)
Maximum allowable evaporator water pressure	175 psig (1207 kPa)
Maximum allowable water temperature to evaporator in a nonoperating cycle	105°F (40.5°C)
Maximum entering water temperature for operating cycle (for example, during system changeover from heating to cooling cycle)	90°F (32.2°C)
NOTE:	
Contact a Daikin Applied representative for performance at specific operating conditions, as some limits depend on unit configuration	

Table 6: Temperature Limits

Cooling Cycle	Min. Temp	Max Temp	Notes
Evap Leaving Water Temp.	40° F	60° F	In Cooling Cycle controlling Evap LWT - The Maximum Set point temp is 60°F
Cond Leaving Water Temp	70° F	160° F	With Evap LWT above 50°F, the Cond LWT must be 30°F above Evap LWT
Evap Water Delta-T	6° F	16° F	
With Glycol in Evap - Evap LWT	15° F	60° F	With Evap LWT below 40°F, the Cond EWT must not exceed 120°F above Evap LWT.
Heating Cycle			
Evap Leaving Water Temp	40° F	85° F	With Evap LWT above 70°F, the Cond LWT must be 30°F above Evap LWT
Cond Leaving Water Temp	110° F	160° F	
Evap Water Delta-T	6° F	16° F	
Cond Water Delta - T			
with 2 Pass Cond Water Flow	10° F	15° F	Cond Water Temp Delta-T should be 10°F minimum for liquid subcooling
with 4 Pass Cond Water Flow	15° F	40° F	
NOTE:			
Contact a Daikin Applied representative for performance at specific operating conditions, as some limits depend on unit configuration			

Source Water Piping

The system water piping must be flushed thoroughly prior to making connections to the unit evaporator. Lay out the water piping so the source water circulating pump discharges into the evaporator inlet.

 **CAUTION**

Templifier Models must have clean source water from a closed and treated loop going to the brazed-plate evaporator. For open water loop applications, an intermediate heat exchanger between the source water and evaporator is required. Failure to provide a clean, closed water loop can cause equipment failure and possible revocation of the unit warranty.

Templifier evaporator water can come from various sources and care must be exercised to avoid sources that can cause corrosion, fouling, or accumulation of debris in the heat exchanger. Borderline cases will require a careful and rigorously performed maintenance schedule.

Heating and Cooling Units

Templifier units can be arranged and controlled to act as either a water chiller or a water heater. These systems vary considerably in the specifics of the piping arrangement. Care must be exercised when changeover occurs to avoid mixing water streams that could possibly contaminate a water system. For example, a unit can have chilled water in the evaporator and tower water in the condenser when in the cooling mode. Changeover to heating could put tower water through the evaporator and hot water (possibly potable water) through the condenser. This could introduce tower water into the chilled water system and into the hot water system and should be avoided.

Source/Hot Water Thermostat

The source water temperature sensor is factory installed in the leaving water connection on the evaporator. The controlling hot water sensor is in the leaving condenser connection. A sensor is also located in the entering water connection in order to measure the condenser Delta-T. Care should be taken not to damage the sensor cable or lead wires when working around the unit. It is also advisable to check the lead wire before running the unit to be sure that it is firmly anchored and not rubbing on the frame or any other component.

If the sensor is ever removed from the well for servicing, care must be taken as not to wipe off the heat conducting compound supplied in the well.

The units can be switched from heating to cooling. In the cooling mode they are controlled by a thermistor in the leaving evaporator connection, in the heating mode by the leaving condenser thermistor.

Flow Switch

A water flow switch must be mounted in the evaporator and condenser leaving water lines to prove adequate water flow to the vessels before the unit can start. This will safeguard against slugging the compressors on startup. It also serves to shut down the unit in the event that water flow is interrupted to guard against evaporator freeze-up.

NOTICE

Install per the vendor instructions and calibrate to a safe setting based on the application design flow.

Groove Coupling / Flow Switch Warning

All evaporators and condensers have OGS-type grooved water connections (adhering to Standard AWWA C606) or optional flange connections. The installing contractor must provide matching mechanical connections. PVC piping should not be used.

On units utilizing shell-and-tube evaporator vessels and factory-mounted flow switches and flange connections (groove-to-flange adaptors or weld-on flanges), relocating the flow switch is required to allow for possible future replacement. The flange will interfere with unscrewing the switch. The following procedure is recommended before installing a flange to avoid interference:

1. Remove the flow switch and plug the opening in the nozzle.
2. Install the groove-to-flange adaptor or weld on flange.
3. Relocate the flow switch in the water piping outside the flange close enough to it that the wire leads will reach and the switch can still be unscrewed.

Glycol Solutions

The use of glycol in Templifier systems is uncommon, but if used, the system performance will result in lower refrigerant suction pressure, cooling performance less, and water side pressure drop will be higher.

Daikin Applied encourages a minimum glycol concentration of 25% be provided on all glycol applications. Glycol concentrations below 25% have too little inhibitor content for long-term corrosion protection of ferrous metals.

NOTICE

The effect of glycol in the condenser is negligible and there is no capacity derate.

CAUTION

Do not use automotive grade antifreeze. Industrial grade glycols must be used. Automotive antifreeze contains inhibitors which will cause plating on the copper within the unit evaporator. The type and handling of glycol used must be consistent with local codes.

Electrical

Power wiring connections to the chiller may be done with either copper or aluminum wiring. Wire should be sized and installed per NEC and/or local codes. Wire sizing and wire count must fit in the power connection lug sizing listed in chiller submittals. All wiring within the unit is sized in accordance with the USA National Electrical Code. Refer to the unit nameplate and the submittals for the correct electrical ratings.

DANGER

Qualified, licensed electricians must perform wiring. Electrical shock hazard exists that can cause severe injury or death.

The field power wiring required varies depending on unit model. See [page 21](#) for wiring information. These wiring diagrams are also provided with the chiller.

NOTICE

Wiring, fuse, and wire size must be in accordance with the National Electric Code (NEC). The voltage to these units must be within $\pm 10\%$ of nameplate voltage (415V units must have voltage within -13% and $+6\%$ of nameplate voltage) and the voltage unbalance between phases must not exceed 2%. Since a 2% voltage unbalance will cause a current unbalance of 6 to 10 times the voltage unbalance per the NEMA MG-1 Standard, it is most important that the unbalance between phases be kept at a minimum.

CAUTION

Do not use power factor correction capacitors with WWV chillers. Doing so can cause harmful electrical resonance in the system. Correction capacitors are not necessary since VFDs inherently maintain high power factors.

Control panels are rated for the amount of current that can be passed through it and still contain the damage within the enclosure; this value is known as the short circuit panel rating as shown in [Table 7](#) and is standard on all WWV and TWV models.

Table 7: Short Circuit Current Ratings (kAmps)

Voltage/Hz	High Short Circuit Panel Rating
460/60	65kA
380/60	
400/50	
575/60	25kA

Field-supplied disconnect switches are required if not factory-supplied with the unit. Disconnecting means are addressed by Article 440 of the U.S.A. National Electrical Code (NEC), which requires "disconnecting means capable of disconnecting air conditioning and refrigerating equipment including motor-compressors, and controllers from the circuit feeder." Select and locate the disconnect switch per the NEC guidelines.

Control Circuit

The unit control circuit is powered at 120 Vac. Terminals are provided in the unit control panel for optional field hookup of the control circuit to a separate fused 115-volt power supply in lieu of

the standard factory installed control transformer.

Water flow switch interlock terminals are included in the controller. See [Figure 16](#) for the correct connections in the field. The purpose of the water flow switch interlock is to prevent the compressor from running while the evaporator and condenser water pumps come online and provide the correct water flow.

It is best to leave pump control to the unit controller for better system management. If an external system independently manages pump starts, use the following guidelines:

- Turn on evaporator pump 2 minutes before enabling the machine
- Turn off evaporator pump 5 minutes after disabling the machine

Use with On-Site Generators

Switching from site grid power to generator power and vice versa requires that the chiller must either be powered down or the power must be off for more than 5 seconds to avoid sending out of phase voltage to the chiller. A properly installed, fully Synchronized Automatic Transfer Switch must be used to transfer power if the chiller is running under load.

Generator Sizing

WARNING

Generator must be sized by an electrical engineer familiar with generator applications.

Transfer Back to Grid Power

Proper transfer from stand-by generator power back to grid power is essential to avoid chiller damage and must be used to ensure proper function of the unit.

WARNING

Stop the chiller before transferring supply power from the generator back to the utility power grid. Transferring power while the chiller is running can cause severe chiller damage.

The necessary procedure for reconnecting power from the generator back to the utility grid is as follows:

1. Set the generator to always run five minutes longer than the unit start-to-start timer, which can be set from two to sixty minutes, while keeping the chiller powered by the generator until the fully Synchronized Automatic Transfer Switch properly hands over chiller power from the site.
2. Configure the transfer switch provided with the generator to automatically shut down the chiller before transfer is made. The automatic shut-off function can be accomplished through a BAS interface or with "remote on/off" wiring connection shown in [Figure 16](#).

A start signal can be given anytime after the stop signal since the three-minute start-to-start timer will be in effect.

Figure 16: Field Wiring Diagram - Single Point Power


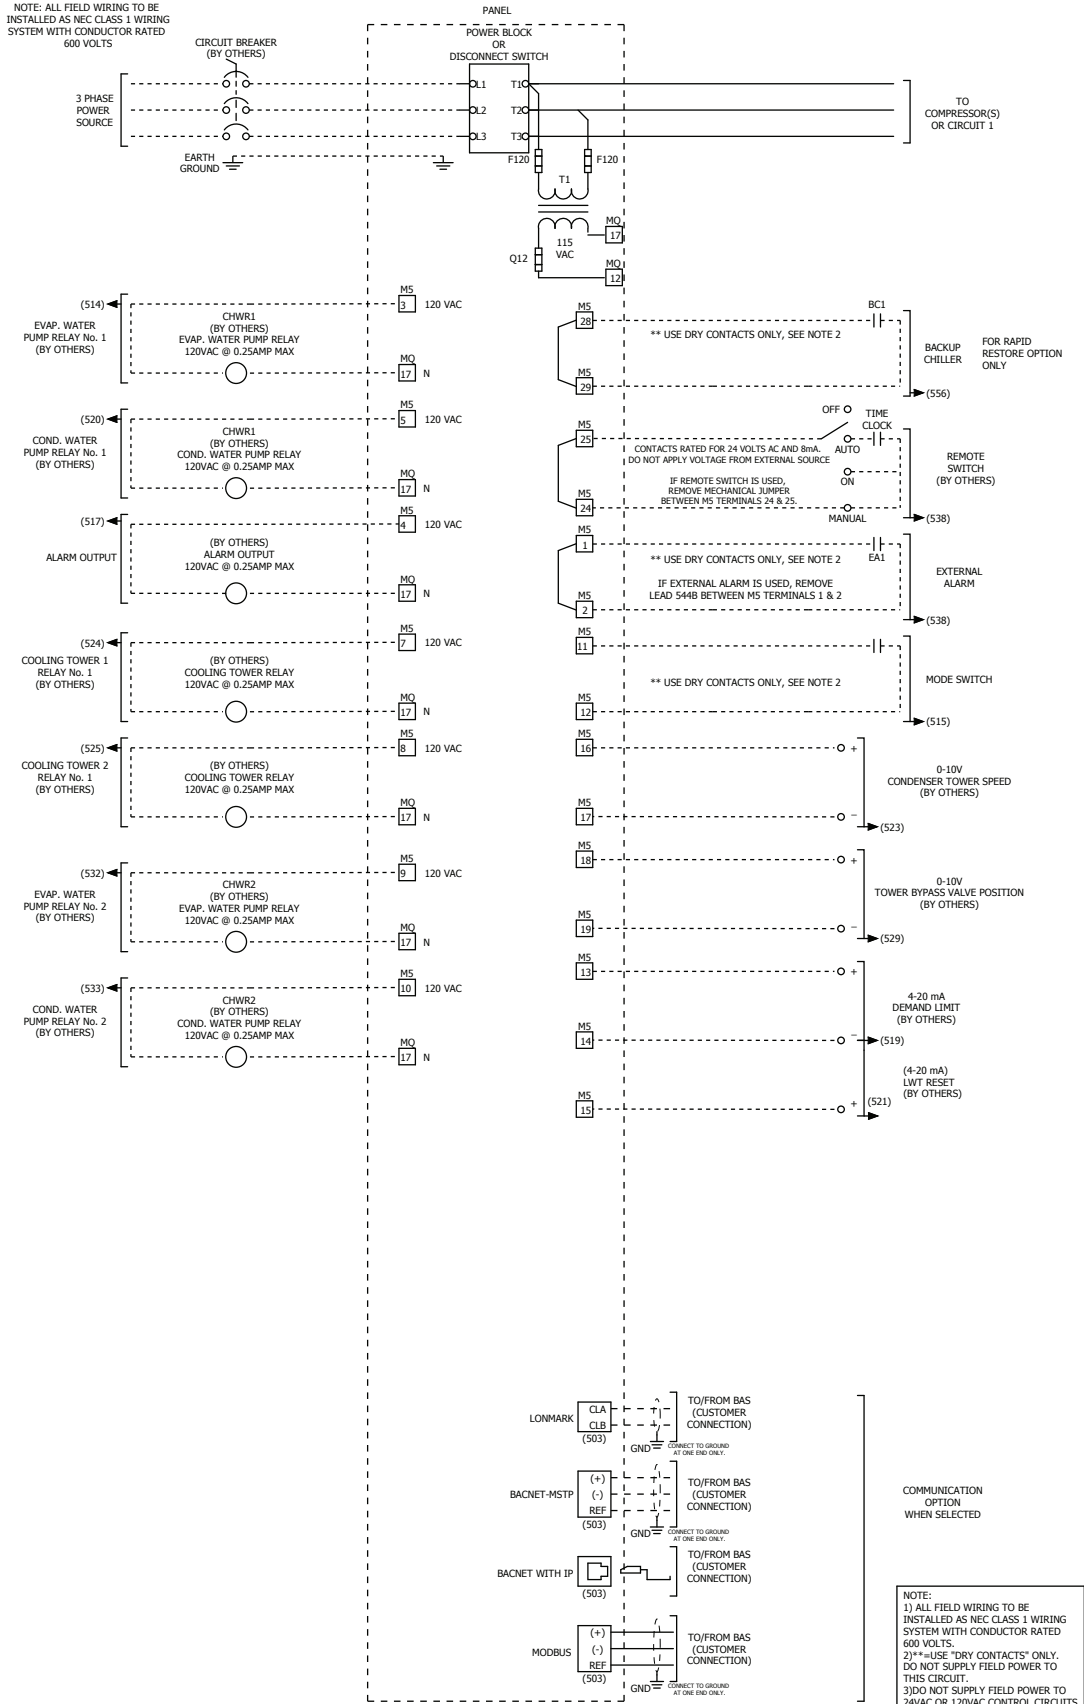


Figure 17: Typical Refrigerant Piping Diagram

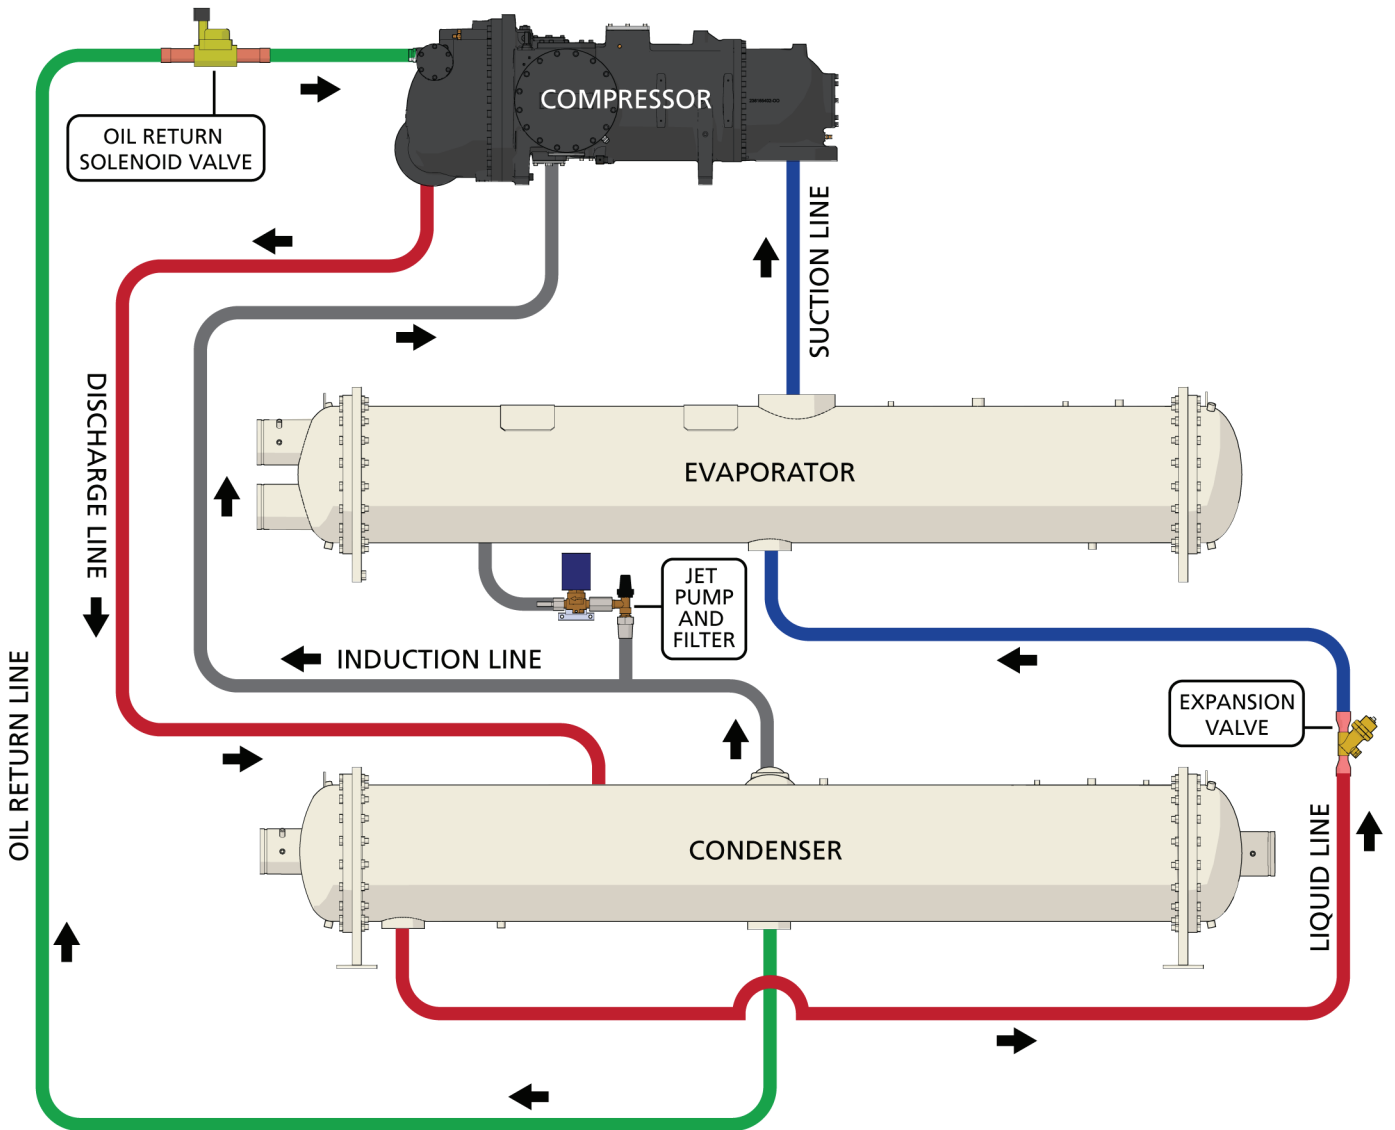


Physical Data

NOTICE


Drawings, dimensional values, and other information may change depending on options or configurations selected. Refer to the as-built submittal drawings provided by a Daikin Applied sales representative for configuration-specific details.

Figure 18: Component Locations - Front View

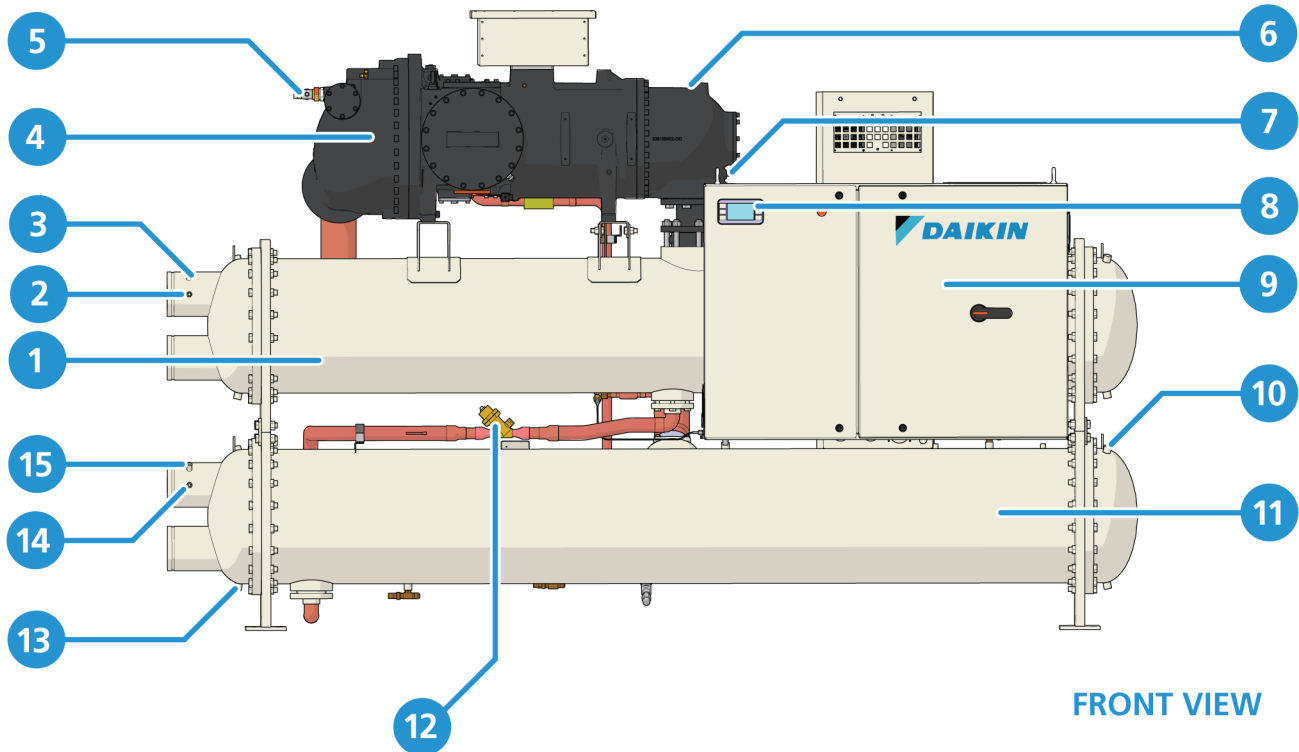

No.	Component	No.	Component
1	Evaporator	9	Control Panel
2	Evaporator Water Flow Sensor	10	Air Purge
3	Evaporator Leaving Water Temperature Sensor	11	Condenser
4	Compressor	12	Expansion Valve
5	Oil Line Sight Glass	13	Water Drain
6	Suction Temperature Sensor	14	Condenser Water Flow Sensor
7	Suction Pressure Transducer	15	Condenser Leaving Water Temperature Sensor
8	Human Machine Interface (HMI)		

Figure 19: Component Locations - Top and Back Views

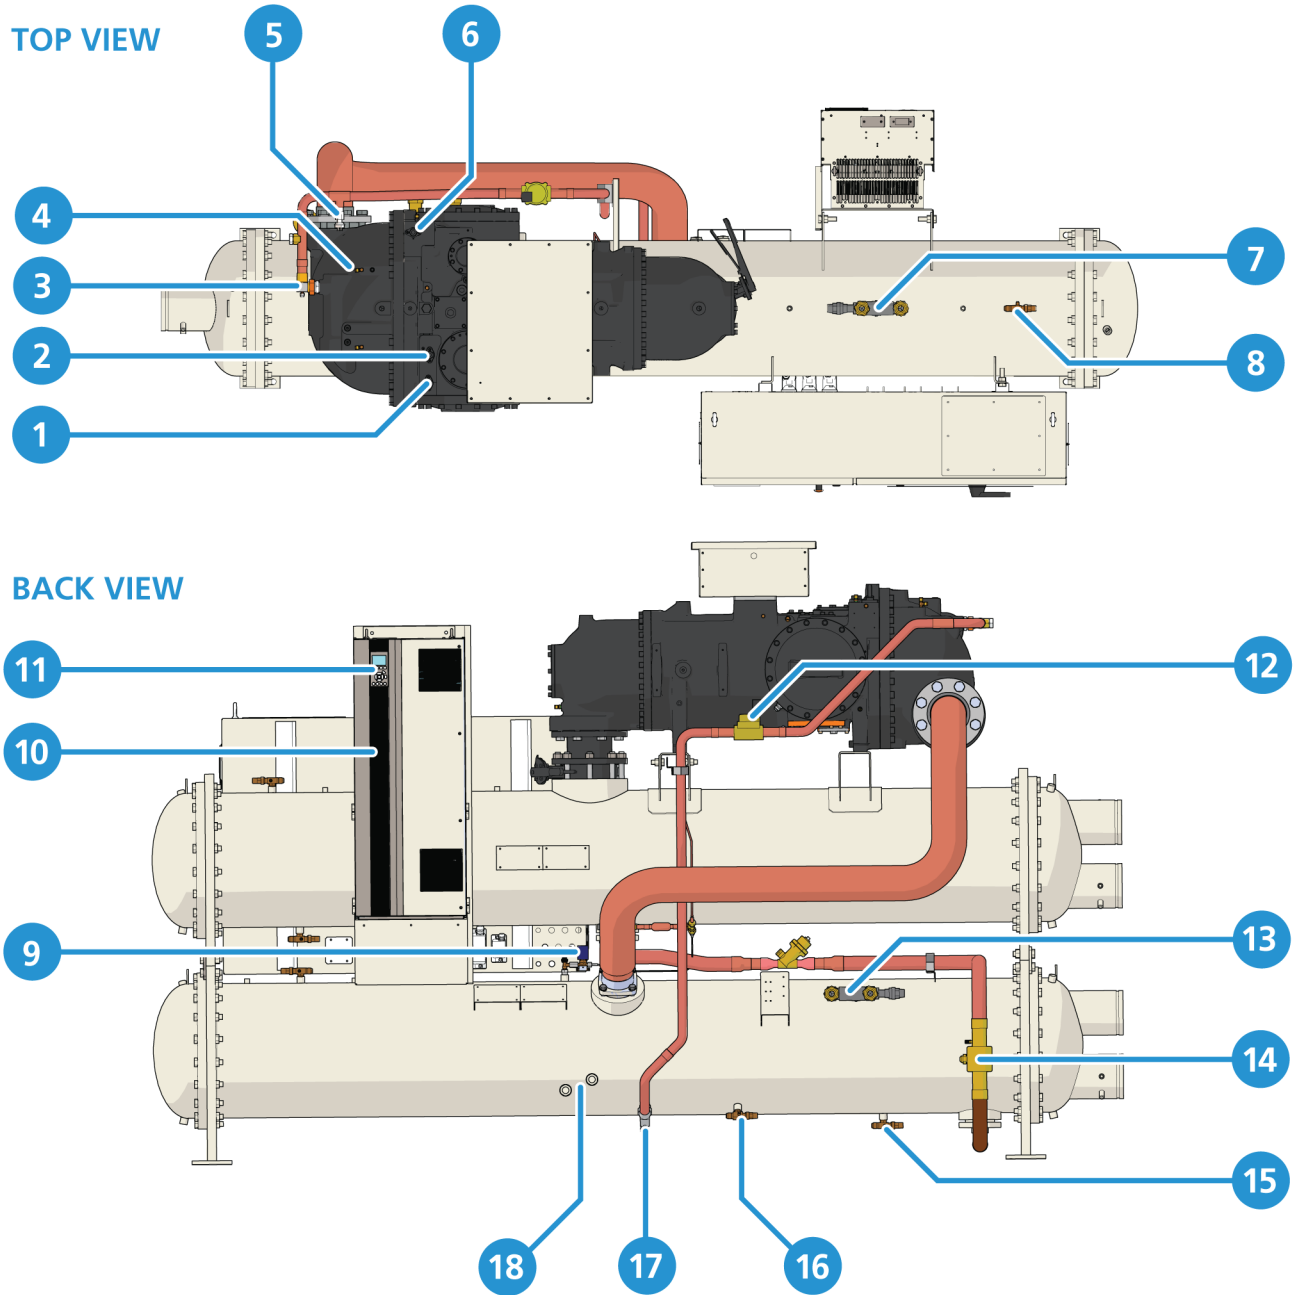


No.	Component	No.	Component
1	2.4 VR Solenoid Valve	10	VFD
2	3.1 VR Solenoid Valve	11	VFD Control Panel
3	Discharge Temperature Sensor	12	Oil Return Solenoid Valve
4	High Pressure Switch	13	High Side Relief Valve
5	Oil Presence Sensor	14	Liquid Line Shut-off Valve
6	1.8 VR Solenoid Valve	15	Refrigerant Charge Service Valve
7	Low Side Relief Valves	16	Oil Discharge Service Valve
8	Service Valve	17	Oil Line Shut-off Valve
9	Jet Pump Solenoid Valve	18	Oil Level Sight glasses

Operation

Control System Architecture

Figure 20 shows an overview of the control system including all possible components, some of which will only be used if the chiller is equipped with a particular option or certain hardware.

Figure 20: WWV Control System Overview

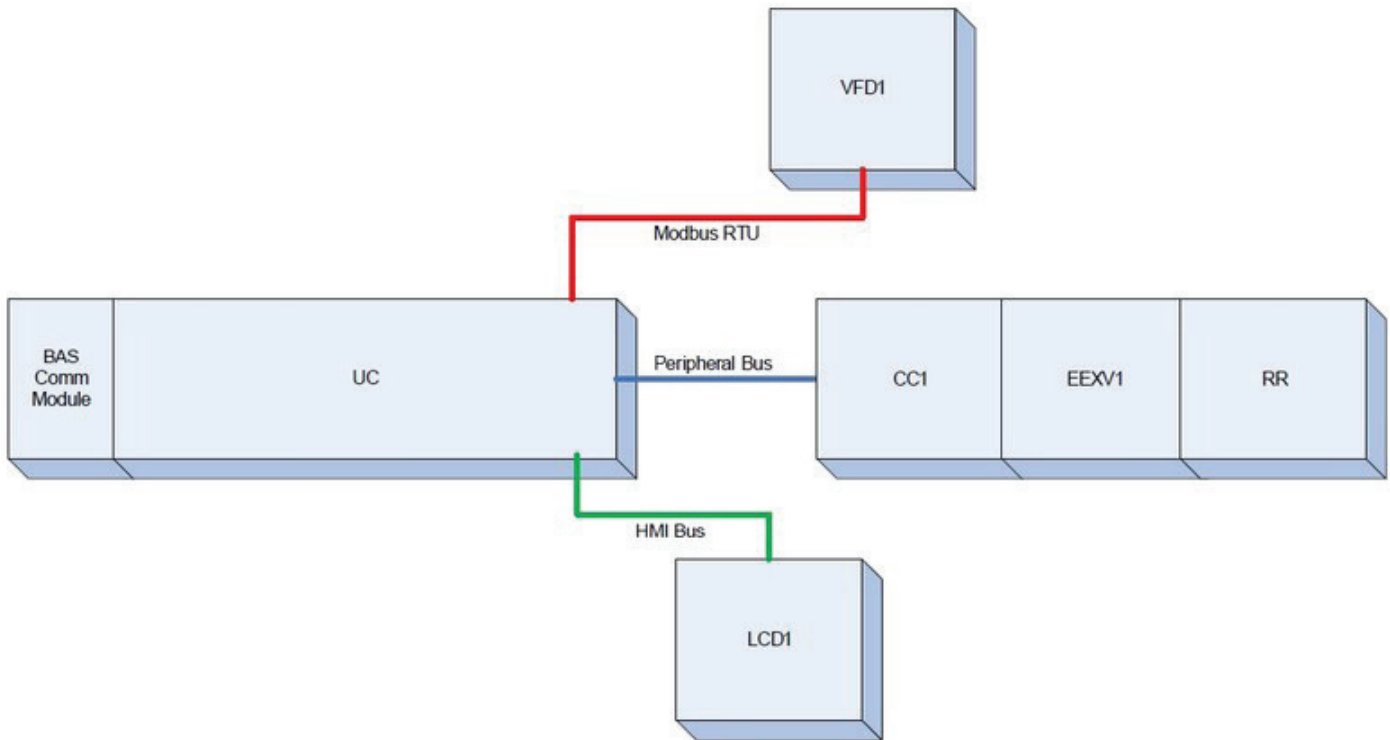

Operator Responsibilities

It is important that the operator become familiar with the equipment and the system before attempting operation. During the initial startup of the chiller, the Daikin Applied service technician will be available to answer any questions and instruct the proper operating procedures. It is recommended that the operator maintain an operating log for each individual chiller unit. In addition, a separate maintenance log should be kept of the periodic maintenance and servicing activities.

Operator Schools

Training courses for Navigator Water-cooled Screw Maintenance and Operation are held throughout the year at the Daikin Learning Institute in Verona, Virginia. The class includes instruction on basic refrigeration, MicroTech Unit Controllers, enhancing chiller efficiency and reliability, MicroTech troubleshooting, system components, and other related subjects. For more information, refer to the back cover of this document for training contact information.

MicroTech Unit Controller Inputs/Outputs

Figure 21: Analog Inputs

#	Description	Signal Source
AI1	Evap Entering Water Temp	NTC 10KThermister
AI2	Condenser Entering Water Temp	NTC 10KThermister
X3	Demand Limit	4-20 mA Current
X4	LWT Reset	4-20 mA Current
X6	Evap Leaving Water Temp	NTC 10KThermister

Table 8: Analog Outputs

#	Description	Output Signal
X5	Cooling Tower VFD Speed	0-10VDC
X7	Cooling Tower Bypass Valve Position	0-10VDC

Table 9: Digital Inputs

#	Description	Signal Off	Signal On
DI1	Unit Ground Fault Relay	Fault	No Fault
DI2	Evaporator Flow Switch	No Flow	Flow
DI3	Oil Presence Sensor	Oil Not Present	Oil Present
DI4	Remote Switch	Unit disable	Unit enable
DI5	Unit Switch	Unit disable	Unit enable
DI6	External Alarm	Unit disable	Unit enable
X1	Emergency Stop	Unit off	Unit enable
X2	Mode Switch	Cool Mode	Ice Mode
X8	Condenser Flow Switch	No Flow	Flow

Table 10: Digital Outputs

#	Description	Output OFF	Output ON
DO1	Evaporator Water Pump 1	Pump Off	Pump On
DO2	Alarm Relay	Alarm not Active	Alarm Active
DO3	Condenser Water Pump 1	Pump Off	Pump On
DO5	Cooling Tower Fan 1	Off	On
DO6	Cooling Tower Fan 2	Off	On
DO9	Evaporator Water Pump 2	Pump Off	Pump On
DO10	Condenser Water Pump 2	Pump Off	Pump On

CC1 Module

Table 11: Analog Inputs

#	Description	Signal Source
X1	Discharge Temperature	NTC 10k Thermister
X2	Evaporator Pressure	Ratiometric 0.5-4.5 Vdc
X3	Oil Pressure	Ratiometric 0.5-4.5 Vdc
X4	Condenser Pressure	Ratiometric 0.5-4.5 Vdc
X6	Condenser Leaving Water Temp	NTC 10k Thermister

Table 12: Digital Outputs

#	Description	Output Off	Output On
DO1	Oil Return Solenoid Valve & Jet Pump Solenoid Valve	Solenoid Closed	Solenoid Open
DO3	VVR SV 1	Solenoid Closed	Solenoid Open
DO4	VVR SV 2	Solenoid Closed	Solenoid Open
DO5	VVR SV 3	Solenoid Closed	Solenoid Open

Evaporator EXV1 Module

Table 13: Analog Inputs

#	Description	Signal Source
X2	Suction Temperature	NTC 10k Thermister
X3	Liquid Temperature	NTC 10k Thermister

Table 14: Stepper Motor Output

#	Description
M1+	Evaporator EXV Stepper Coil 1
M1-	
M2+	Evaporator EXV Stepper Coil 2
M2-	

RapidRestore Module

Table 15: Digital Inputs

#	Description	Signal Off	Signal On
DI1	RapidRestore Enable	Disable	Enable

Compressor VFD1 Module

Table 16: Digital Inputs

#	Description	Signal Off	Signal On
37	Mechanical High Press Switch	Safe Torque Off	Normal Operation

Table 17: Analog Inputs

#	Description	Signal Source
54	Motor Temperature	PTC Thermister

Set Points

The following parameters are remembered during power off (permanent memory), are factory set to the Default value, and can be adjusted to any value in the Range column.

Unit Level Set Points

All basic unit configuration settings require the unit switch to be off in order to make a change. Modifying the Ground Fault Protection and Comm Module settings require rebooting the controller in order to apply a change.

Table 18: Set Point Default and Range

Description	Default	Range
Basic Unit Configuration		
Input Voltage	Not Set	Not Set, 380, 400, 460, 575
Ground Fault Protection Option	No	No, Yes
RapidRestore Option	No	No, Yes
Evaporator Glycol	No	No, Yes
Condenser Glycol	No	No, Yes
Available Mode	Cool	Cool, Cool/Ice, Ice, Heat, Cool/Heat This setting cannot be set to Cool/Ice or Ice unless Evaporator Glycol is set to Yes. If it is changed to Cool/Ice or Ice when Evaporator Glycol is set to No, Available Modes should automatically reset to 'Cool'
Oil Presence Sensor	Yes	No, Yes
Compressor Type	Not Set	Not Set, F3AL, F3BL, F4AL
Compressor Maximum Frequency	51 Hz	51 to 78 Hz - dependent on compressor type. The range for this set point should be limited to what the selected compressor type can support. If a value outside the allowed range has been selected due to changing compressor type, the value should be automatically reset to the maximum allowed
Compressor VFD Input RLA	100	1 to 1000 amps
Compressor VFD Parameter Set	No	No, Yes
Evap EXV Type	Not Set	Not Set, ETS250, ETS400L, ETS250, ETS400, VPF250, VPF400
Compressor VFD Parameter Set	No	No, Yes
Refrigerant Type	None	None, R134a, R513a
Comm Module 1	None	None, IP, LON, MSTP, Modbus
Comm Module 2	None	None, IP, LON, MSTP, Modbus
Comm Module 3	None	None, IP, LON, MSTP, Modbus
Unit Mode and Enabling		
Unit Enable	Enable	Disable, Enable
Control source	Local	Local, Network

Description	Default	Range
Unit Test Mode	Off	Off, On
Staging and Capacity Control		
Cool LWT	44.6°F (7°C)	See Table 21
Ice LWT	24.8°F (-4°C)	17.6 to 39.2°F (-8 to 4°C)
Heat LWT	110°F (43.33°C)	68 to 140°F
Start Up Delta T	4.9°F (2.7°C)	3 to 9°F (1.66 to 5°C)
Shut Down Delta T	2.7°F (1.5°C)	1.8 to 3.6°F (1 to 2°C)
Ice Cycle Delay	12	1-23 hours
Clear Ice Delay	No	No, Yes
RapidRestore Maximum Power Off Time	15 seconds	15 to 180 seconds
Pump Control		
Evaporator Pump Control Configuration	#1 Only	#1 Only, #2 Only, Auto, #1 Primary, #2 Primary
Evaporator Recirculation Time	90	15 to 300 seconds
Evaporator Pump 1 Run Hours	0	0 to 999999 hours
Evaporator Pump 2 Run Hours	0	0 to 999999 hours
Evaporator Pump 1 Starts	0	0 to 999999 starts
Evaporator Pump 2 Starts	0	0 to 999999 starts
Condenser Pump Control Configuration	#1 Only	#1 Only, #2 Only, Auto, #1 Primary, #2 Primary
Condenser Recirculation Time	30	10 to 300 seconds
Condenser Pump 1 Run Hours	0	0 to 999999 hours
Condenser Pump 2 Run Hours	0	0 to 999999 hours
Condenser Pump 1 Starts	0	0 to 999999 starts
Condenser Pump 2 Starts	0	0 to 999999 starts
Power Conservation and Limits		
Cool LWT Reset Enable	Disable	Disable, Enable
Cool Maximum Reset	9°F (5°C)	0 to 18°F (0 to 10°C)
Heat LWT Reset Enable	Disable	Disable, Enable
Heat Maximum Reset	10°F (5.56°C)	0 to 40°F (0 to 22.22°C)
Demand Limit Enable	Off	Off, On
Tower Control		
Tower Control	None	None, Condenser EWT, Condenser LWT
Number of Tower Fan Stages	1	1, 2

Description	Default	Range
Tower Fan Stage 1 On Temperature	70°F (21.11°C)	40 to 120°F (4.44 to 48.89°C)
Tower Fan Stage 2 On Temperature	75°F (23.89°C)	40 to 120°F (4.44 to 48.89°C)
Tower Fan Stage Off Differential	3°F (1.67°C)	1 to 10.0°F (0.56 to 5.56°C)
Tower Fan Stage On Delay	2 minutes	1 to 60 minutes
Tower Fan Stage Off Delay	5 minutes	1 to 60 minutes
Tower Fan Stage On Position/Speed	80%	0 to 100%
Tower Fan Stage Off Position/Speed	30%	0 to 100%
Valve/VFD Control Configuration	None	None, Valve Set Point, Valve Stage, VFD Stage, Valve SP/VFD Stage
Valve Type	NC to Tower	NC to Tower, NO to Tower
Valve/VFD Set Point	65°F (18.33°C)	60 to 120°F (15.56 to 48.89°C)
Minimum Valve Position	10%	0 to 100%
Maximum Valve Position	90%	0 to 100%
Valve Start Minimum Position	0.0%	0 to 100%
Valve Start Maximum Position	100.0%	0 to 100%
Valve Start Minimum @ (Temperature)	60°F (15.56°C)	32 to 100°F (0 to 37.78°C)
Valve Start Maximum @ (Temperature)	90°F (32.22°C)	32 to 100°F (0 to 37.78°C)
Minimum VFD Speed	25%	0 to 100%
Maximum VFD Speed	100%	0 to 100%
Valve PID Proportional Factor	1.0	0 to 100
Valve PID Integral Time	2.0 minutes	0 to 100 minutes
VFD PID Proportional Factor	1.0	0 to 100
VFD PID Integral Time	2.0 minutes	0 to 100 minutes
Unit Sensor Offsets		
Evaporator LWT Sensor Offset	0°F (0°C)	-9.0 to 9.0°F (-5.0 to 5.0°C)
Evaporator EWT Sensor Offset	0°F (0°C)	-9.0 to 9.0°F (-5.0 to 5.0°C)
Condenser LWT Sensor Offset	0°F (0°C)	-9.0 to 9.0°F (-5.0 to 5.0°C)
Condenser EWT Sensor Offset	0°F (0°C)	-9.0 to 9.0°F (-5.0 to 5.0°C)
Circuit Configuration		
Start To Start Time Delay	15 min	15 to 60 minutes

Description	Default	Range
Stop To Start Time Delay	3 min	3 to 20 minutes
Alarm and Limit Settings - Unit		
Evaporator Fluid Freeze	36°F (2.2°C)	See section below
Evaporator Flow Loss Delay	15 sec	5 to 15 sec
Evaporator Recirculate Timeout	3 min	1 to 10 min
Condenser Fluid Freeze	36°F (2.2°C)	See section below
Condenser Flow Loss Delay	15 sec	5 to 15 sec
Condenser Recirculate Timeout	3 min	1 to 10 min
Alarm and Limit Settings - Circuits		
Low Evap Pressure Unload	29.0 psi (200.0 kPa)	See below
Low Evap Pressure Hold Offset	2.2 psi (15 kPa)	1.5 to 7.3 psi (10 to 50 kPa)
High Oil Pressure Delay	30 sec	10-30 sec
High Oil Pressure Drop Minimum	36.3 psi (250 kPa)	0.0 to 60.2 psi (0.0 to 415.0 kPa)
High Discharge Temperature	230°F (110°C)	149 to 230°F (65 to 110°C)
High Condenser Pressure Hold Offset	2.7°F (1.5°C) See note below	2.7 to 27°F (1.5 to 15°C) - Value forced to be at least 0.9°F (0.5°C) greater than the High Condenser Pressure Unload Offset setting.
High Condenser Pressure Unload Offset	1.8°F (1.0°C)	1.8 to 25.2°F (1.0 to 14°C)
High Condenser Pressure Delay	5 sec	0 to 5 sec
Low Pressure Ratio Delay	300 sec	30 to 300 sec
Low DSH Limit	10.8°F (6.0°C)	10.8 to 27.0°F (6.0°C to 15.0°C)
BAS Control Inputs		
Network Unit Enable	Disable	Disable, Enable
Network Cool Set Point	44.6°F (7.0°C)	See below section
Network Capacity Limit	100%	0% to 100%
Network Alarm Clear Command	Normal	Normal, ClearAlarm

Table 19: Unit Test Mode Set Points

Description	Default	Range
Test Unit Alarm Output	Off	Off, On
Test Evaporator Pump Output 1	Off	Off, On
Test Evaporator Pump Output 2	Off	Off, On
Test Condenser Pump Output 1	Off	Off, On
Test Condenser Pump Output 2	Off	Off, On
Test Cooling Tower Fan 1 Output	Off	Off, On
Test Cooling Tower Fan 2 Output	Off	Off, On
Test Cooling Tower VFD Speed	0.0%	0.0% to 100.0%
Test Cooling Tower Bypass Valve Position	0.0%	0.0% to 100.0%

NOTE: Unit test mode set points can be changed only when the unit mode is Test. When the unit mode is no longer Test, all unit test mode set points will be changed back to the 'off' values.

Table 20: Administration and Service Support

Description	Default	Range
Unit G.O. Number	"Enter Data"	Alphanumeric string of up to 16 characters
Unit Serial Number	"Enter Data"	Alphanumeric string of up to 20 characters
Next Maintenance Month	January	January through December
Next Maintenance Year	2017	2009 - 2200
Service Support Reference	999-999-9999	Any 10 digit phone number
Controller Time	From Controller Timeclock	00:00:00 to 23:59:59
Controller Date	From Controller Timeclock	1/1/2000 to 12/31/2050
UTC Difference	-60 minutes	-3276 to 32767 minutes
Daylight Savings Time Enable	Yes	No, Yes
Daylight Savings Time Start Month	March	January through December
Daylight Savings Time Start Week	2nd Week	1st through 5th Week
Daylight Savings Time End Month	November	January through December
Daylight Savings Time End Week	1st Week	1st through 5th Week
Operator Password Disable	Off	Off, On
Apply Changes	No	No, Yes
Active Alarm Clear	No	No, Yes
Alarm Log Clear	No	No, Yes
Log Export to SD Card	No	No, Yes
Load Files from SD Card	No	No, Yes
Save Settings to SD Card	No	No, Yes
Restore Settings from SD Card	No	No, Yes

Description	Default	Range
Restore Default Settings	No	No, Yes
Display Units	English	English, Metric

Saving and Restoring Settings

When the 'Save Settings To SD Card' setting is set to 'Yes', all the setting values should be saved into a file on the SD card. This operation requires that there is an SD Card in the slot on the controller and it is not write protected. When the operation completes, the setting should change back to 'No'.

This operation is dependent on functionality built into the controller firmware so only some aspects of the behavior can be changed via the controller software. The settings will be saved on the SD Card in two files: PARAM.BIN and PARAM.UCF. Both files are standalone and contain all the setting values.

When the 'Restore Settings From SD Card' setting is set to 'Yes', the setting values should be changed to those found in the PARAM.BIN or PARAM.UCF file on the SD card. If both files are on the SD card, the controller will use the PARAM.BIN file. After the setting values are loaded from the SD card, the controller should automatically reboot in order to apply all the setting changes.

When the 'Restore Defaults' setting is set to 'Yes', the setting values should all change back to the original values in the software.

Dynamic Set Point Ranges

The following settings have different ranges of adjustment based on other settings.

Table 21: Cool LWT and Network Cool Set Point

Evaporator Glycol Selection	Range
No	40 to 77°F (4.44 to 25°C)
Yes	25 to 77°F (-3.89 to 25°C)

Table 22: Evaporator and Condenser Fluid Freeze

Glycol Selection	Range
No	35.6 to 42.8°F (2 to 6°C)
Yes	-0.4 to 42.8°F (-18 to 6°C)

Table 23: Low Evaporator Pressure Hold and Unload

Evaporator Glycol Selection	Range
No	27.8 to 45 psi (191.6 to 310 kPa)
Yes	0 to 45 psi (0 to 310 kPa)

Glycol Factors

WWV chillers are designed to operate with leaving anti-freeze solution temperatures per software range limits. Consult the local Daikin Applied sales office for performance outside these temperatures. Leaving chilled fluid temperatures below 40°F (4.4°C) result in evaporating temperatures at or below the freezing point of water and a glycol solution is required. MicroTech unit control inhibits compressor unloading at leaving fluid temperatures below 25°F (-3.9°C).

Circuit Level Set Points

The settings in this section all exist for each individual circuit.

Table 24: Set Points for Individual Circuits

Description	Default	Range
Mode, Enabling, Configuration		
Capacity Control	Auto	Auto, Manual
Manual Speed	See below	See below
VR Control	Auto	Auto, Manual
Manual VR	See below	1.6, 1.8, 2.4, 3.1
The Manual Speed setting value will follow the target speed while Capacity Control = Auto. When Capacity Control is set to ManSpd, the Manual Speed set point can be set to the desired value. The minimum will be the same minimum speed calculated for automatic control. The maximum value is equal to the Compressor Maximum Speed setting. The Manual VR setting value will follow the target capacity while VR Control = Auto. When VR Control is set to Manual, the Manual VR set point can be set to the desired value.		
Sensor Offsets		
Evaporator Pressure Offset	0 psi (0 kPa)	-14.5 to 14.5 psi (-100 to 100 kPa)
Condenser Pressure Offset	0 psi (0 kPa)	-14.5 to 14.5 psi (-100 to 100 kPa)

Oil Pressure Offset	0 psi (0 kPa)	-14.5 to 14.5 psi (-100 to 100 kPa)
Suction Temperature Offset	0°F (0°C)	-9.0 to 9.0°F (-5.0 to 5.0°C)
Discharge Temperature Offset	0°F (0°C)	-9.0 to 9.0°F (-5.0 to 5.0°C)
Liquid Temperature Offset	0°F (0°C)	-9.0 to 9.0°F (-5.0 to 5.0°C)
Administrative and Service Support		
Clear Cycle Timers	Off	Off, On
Compressor Run Hours	0	0 to 999999 hours
Compressor Starts	0	0 to 65535

Circuit Test Mode Set Points

Circuit test mode set points can be changed when either the unit mode is Test, or the circuit mode is Test. When neither the unit nor the circuit are in Test mode, all the circuit test mode set points for the circuit are automatically changed back to their 'off' values.

Table 25: Circuit Test Mode Set Points

Description	Default	Range
Test Oil Return and Jet Pump Output	Off	Off, On
Test VR 1.8 Output	Off	Off, On
Test VR 2.4 Output	Off	Off, On
Test VR 3.1 Output	Off	Off, On
Test EXV Position	0.0%	0.0 to 100.0%

Unit Function

Evaporator Calculations

Error

LWT Error = Evaporator LWT - Active LWT Set Point

Slope

EWT slope is calculated such that the slope represents the estimated change in EWT over a time frame of one minute.

Unit Enable

Enabling and disabling the chiller is accomplished using set points and inputs to the chiller. The Unit Switch, Remote Switch Input, and Unit Enable Set Point all are required to be On/Enable for the unit to be enabled when the control source is set to Local. The same is true if the control source is set to Network, with the additional requirement that the BAS Enable set point be Enable.

Table 26: Enable Combinations

Unit Switch	Control Source Set Point	Remote Switch Input	Unit Enable Set Point	BAS Request	Unit State
Off	-	-	-	-	Disable
-	-	-	Disable	-	Disable
-	-	Off	-	-	Disable
On	Local	On	Enable	-	Enable
-	Network	-	-	Disable	Disable
On	Network	On	Enable	Enable	Enable

All of the methods for disabling the chiller, discussed in this section, will cause a normal shutdown of any running circuits.

Unit Mode Selection

The operating mode of the unit is determined by set points and inputs to the chiller. The Available Modes Set Point determines what modes of operation can be used. This set point also determines whether the unit is configured for glycol use. The Control Source Set Point determines where a command to change modes will come from.

The Available Modes Set Point must only be changed when the unit switch is off. This is to avoid changing modes of operation inadvertently while the chiller is running. Unit Mode is set according to the following table.

Table 27: Unit Mode Combinations

Available Modes Set Point	Control Source Set Point	Mode Input	BAS Request	Unit Mode
Cool	-	-	-	Cool
Cool/Ice	Local	Off		Cool
Cool/Ice	Local	On		Ice
Cool/Ice	Network		Cool	Cool
Cool/Ice	Network		Ice	Ice
Ice	-	-	-	Ice


Glycol Configuration

If the Evaporator Glycol Set Point is set to a value 'Yes', then glycol limits should be enabled for the unit. This means that various pressure and temperature settings can be set to lower values as a result of the glycol limits being enabled. Once glycol limits are enabled, they should only be disabled when the Evaporator Glycol Set Point is set to 'No.'

Unit Control States

The unit will always be in one of three states:

1. Off – Unit is not enabled to run
2. Auto – Unit is enabled to run
3. Shutdown – Unit is doing a normal shutdown

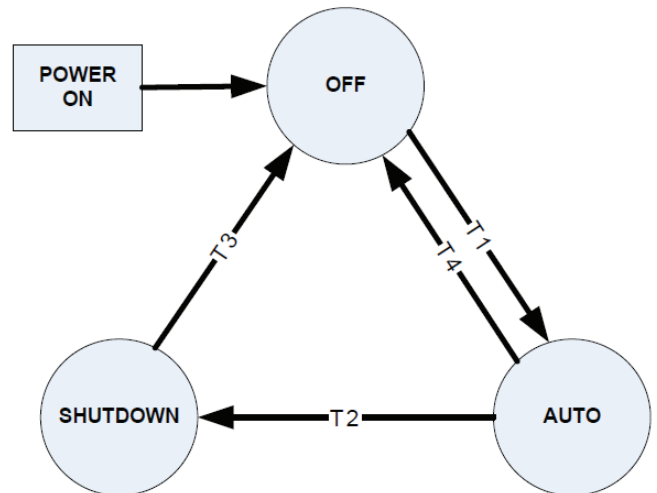

T1 - Off to Auto. All of the following are required:

- Unit is enabled per the Unit Enable section
- No alarms requiring shutdown are active (except for auto cleaning flow loss alarms)
- Circuit is available to start
- Unit configuration is valid
- Mode is Cool, Heat
- Mode is Ice with no Ice Start delay

T2 - Auto to Shutdown. Any of the following are required:

- Unit is disabled per the Unit Enable section
- Unit alarm requiring normal shutdown is active
- Circuit is running in Ice mode and Stage Down command received

T3 - Shutdown to Off. Any of the following are required:

- Unit alarm requiring rapid shutdown is active
- Circuit is in the Off state

T4 - Auto to Off. Any of the following are required:

- Unit alarm requiring rapid shutdown is active
- Circuit disabled and unit in Off state

Unit Status

Unit Status is displayed to indicate the general condition of the unit. The following table lists the text displayed for each unit status and the conditions that enable each status. If more than one status is enabled at the same time, the highest numbered status overrides the others and is displayed.

Table 28: Unit Status Conditions


#	Status	Conditions
0	AUTO	Unit State = Auto
1	OFF: Ice Mode Timer	Unit State = Off, Unit Mode = Ice, and Ice Deay = Active
2	OFF:All Cir Disabled	Unit State = Off and all circuits unavailable to start (temporary conditions are not considered to be a cause of a circuit being unavailable)
3	OFF: Unit Alarm	Unit State = Off and manual reset Unit Alarm active
4	OFF: Keypad Disable	Unit State = Off and Unit Enable Set Point = Disable
5	OFF: Remote Switch	Unit State = Off and Remote Switch input is Off
6	OFF: BAS Disable	Unit State = Off, Control Source = Network, and BAS Enable = false
7	OFF: Unit Switch	Unit State = Off and Unit Switch input is Off
8	OFF: Test Mode	Unit State = Off and Unit Mode = Test
9	AUTO: Wait For Load	Unit State = Auto, no circuits running, and LWT is less than the active set point + startup delta
10/11	AUTO: Evap Recirc or Cond Recirc	Unit State = Auto and Evaporator State = Start or Condenser State = Start
12/13	AUTO: Wait Cond Flow or Wait Evap Flow	Unit State = Auto, Evaporator State = Start and Flow Switch input is off, or Condenser State = Start and Flow Switch input is off
14	Shutting Down	Unit State = Shutdown
15	AUTO: Max Pulldn Rate	Unit State = Auto, unit capacity limited by the evap EWT pulldown rate
16	AUTO: Unit Cap Limit	Unit State = Auto, unit capacity limit has been met or exceeded
17	AUTO: RapidRestore	Unit State = Auto, unit is performing RapidRestore operation

18	OFF: Cfg Chg Rst Ctrl	A configuration change requiring a reboot has occurred but controller has not been rebooted yet.
19	OFF: Invalid Config	The unit configuration is not complete.
20	OFF: Sending VFD Config	Controller is configuring the compressor VFD via Modbus communication

Evaporator Pump Control

Three evaporator pump control states for control of the evaporator pumps.

1. Off - No pump on.
2. Start – Pump is on, water loop is being recirculated.
3. Run – Pump is on, water loop has been recirculated, and circuits can start if needed.

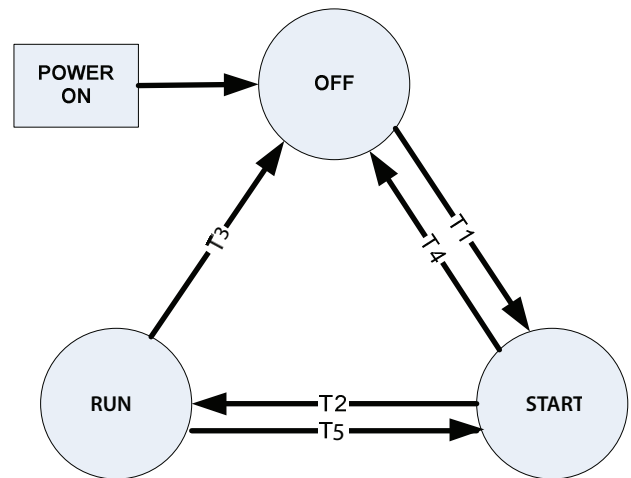

T1 - Off to Start - Requires either of the following to be true:

- Unit state = Auto
- Freeze protection started

T2 - Start to Run - Requires the following to be true for time longer than evaporator recirculate time set point:

- Evap state = Start
- Evaporator flow switch input is on

T3 - Run to Off - Requires all of the following to be true:

- Unit state = Off
- Freeze protection is not active

T4 - Start to Off. - Requires all of the following to be true:

- Unit state = Off
- Freeze protection is not active

T5 - Run to Start. - Requires the following to be true for longer than the Evaporator Flow Loss Delay set point:

- Evap State = Run
- Evaporator flow switch input is off

Evaporator Freeze Protection

To protect the evaporator from freezing, the evaporator pump will start if the manual reset flow loss alarm is not active and either of the following are true:

- LWT equal to or less than the Evap Freeze set point for at least three seconds AND LWT sensor fault isn't active
- EWT equal to or less than the Evap Freeze set point for at least three seconds AND EWT sensor fault isn't active

Freeze protection will end when manual reset flow loss alarm is active or all of the following are true:

- LWT is at least 2°F (1.11°C) above the Evap Freeze set point or LWT sensor fault is active
- EWT is at least 2°F (1.11°C) above the Evap Freeze set point or EWT sensor fault is active
- Pump has been running for at least 15 minutes

Evaporator Pump Selection

The pump output used when evaporator state is Run will be determined by Evap Pump Control set point. This setting allows the following configurations:

- #1 only – Pump 1 will always be used
- #2 only – Pump 2 will always be used
- Auto – The primary pump is the one with the least run hours, the other is used as a backup
- #1 Primary – Pump 1 is used normally, with pump 2 as a backup
- #2 Primary – Pump 2 is used normally, with pump 1 as a backup

Primary/Standby Pump Staging

The pump designated as primary will start first. If the evaporator state is Start for a time greater than the evaporator recirculate timeout set point and there is no flow, then the primary pump will shut off and the standby pump will start. When the evaporator is in the Run state, if flow is lost for more than half of the Evaporator Flow Loss Delay set point value, the primary pump will shut off and the standby pump will start. Once the standby pump is started, the flow loss alarm logic will apply if flow cannot be established in the evaporator start state, or if flow is lost in the evaporator Run state.


Auto Control

If auto pump control is selected, the primary/standby logic above is still used. When the evaporator is not in the Run state, the run hours of the pumps will be compared. The pump with the least hours will be designated as the primary at this time. Counters for both starts and run hours should be maintained for each pump. These should be displayed and should be changeable.

Condenser Pump Control

For control of the condenser pumps, three condenser pump control states are used:

1. Off - No pump on.
2. Start – Pump is on, water loop is being recirculated.
3. Run – Pump is on, water loop has been recirculated and circuits can start if needed.

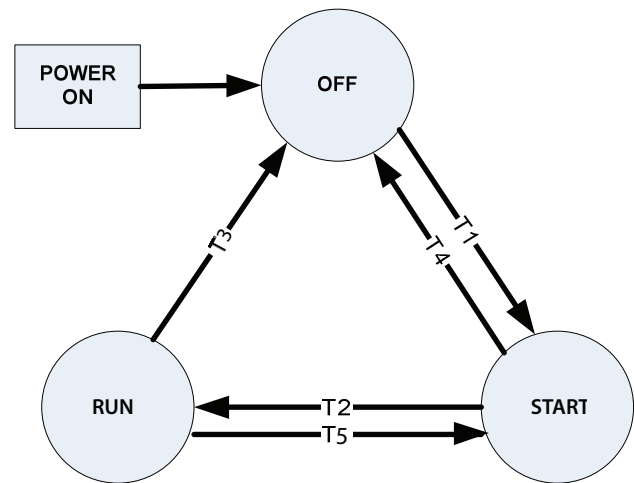

T1 – Off to Start - Transition should also occur if Freeze Protection starts or RapidRestore is active. Requires all of the following

- Evap State = Run
- Unit State = Auto
- Evap LWT Error > Start Delta T

T2 – Start to Run - Requires the following to be true for time longer than condenser recirculate time set point:

- Cond State = Start
- Condenser flow switch input is on

T3 – Run to Off - Requires all of the following to be true:

- Unit State = Off or Evap LWT Error < Start Delta T - 0.556°C
- Freeze Protection is not active
- RapidRestore is not active
- Compressor is not running

T4 – Start to Off - Requires all of the following to be true:

- Unit State = Off or Evap LWT Error < Start Delta T - 0.556°C
- Freeze Protection is not active
- RapidRestore is not active
- Compressor is not running

T5 – Run to Start - Requires the following to be true for longer than the Evaporator Flow Loss Delay set point:

- Cond State = Run
- Condenser flow switch input is off

Condenser Freeze Protection

To protect the condenser from freezing, the condenser pump will start if the manual reset flow loss alarm is not active and either of the following are true:

- LWT is equal to or less than the Cond Freeze set point for at least three seconds AND LWT sensor fault isn't active
- EWT is equal to or less than the Cond Freeze set point minus 0.6°C for at least three seconds AND EWT sensor fault isn't active

Freeze protection will end when manual reset flow loss alarm is active or all of the following are true:

- LWT is at least 1.11°C (2°F) above the Cond Freeze set point or LWT sensor fault is active
- EWT is at least 1.11°C (2°F) above the Cond Freeze set point or EWT sensor fault is active
- Pump has been running for at least 15 minutes

Condenser Pump Selection

Condenser pump selection, staging, auto control, starts and run hours function in the same way as for the evaporator section beginning on [page 33](#).

Cooling Tower Control

WWV cooling tower control includes the capability to control 1 or 2 fan stages, a bypass valve, and a fan VFD.

Cooling Tower Fan Staging

Tower fan staging is enabled when the Tower Control set point is set to a CP (controlled parameter) of either Condenser EWT or Condenser LWT based on the Tower Control set point. A stage timer should start when the condenser pump starts or when the fan stage is changed.

The first stage should turn on when the following conditions are met:

- Stage timer > Tower Fan Stage On Delay set point
- CP > Stage 1 On Temperature set point
- Bypass valve position > Stage On Position/Speed set point (if Valve/VFD Control Configuration = Valve Stage)
- VFD Speed > Stage On Position/Speed set point (if Valve/VFD Control Configuration = VFD Stage or Valve SP/VFD Stage)

The second fan stage can turn on when the following conditions are met:

- Number of Tower Fan Stages = 2
- Stage timer > Stage On Delay set point
- CP > Stage 2 On Temperature set point
- Bypass valve position > Stage On Position/Speed set point (if Valve/VFD Control Configuration = Valve Stage)
- VFD Speed > Stage On Position/Speed set point (if Valve/VFD Control Configuration = VFD Stage or Valve SP/VFD Stage)

The second fan stage should turn off when the following conditions are met:

- Stage timer > Tower Fan Stage Off Delay set point
- CP < Stage 2 On Temperature set point – Stage Off Differential set point
- Bypass valve position < Stage Off Position/Speed set point (if Valve/VFD Control Configuration = Valve Stage)
- VFD Speed < Stage Off Position/Speed set point (if Valve/VFD Control Configuration = VFD Stage OR Valve SP/VFD Stage)

The first fan stage should turn off when the following conditions are met:

- Stage timer > Tower Fan Stage Off Delay set point
- CP < Stage 1 On Temperature set point – Stage Off Differential set point
- Bypass valve position < Stage Off Position/Speed set point (if Valve/VFD Control Configuration = Valve Stage)
- VFD Speed < Stage Off Position/Speed set point (if Valve/VFD Control Configuration = VFD Stage OR Valve SP/VFD Stage)

The fan stage should also be set to 0 when condenser pump state is not Run.

Cooling Tower Bypass Valve

When the Valve/VFD Control Configuration set point is set to None or VFD Stage, bypass valve position should always be set to 0%.

If the Valve/VFD Control Configuration set point is set to Valve Set Point, Valve SP/VFD Stage, or Valve Stage, the bypass valve should be controlled as described in the following mode sections.

As the calculated position varies from 0 to 100%, the voltage signal for the Bypass Valve Position output should vary based on the Valve Type set point:

- If 'NC to tower' then 0 to 100% = 0 to 10 VDC
- If 'NO to tower' then 0 to 100% = 10 to 0 VDC

For both valve control modes, when active a valve position is calculated and limited to a range from the Minimum Valve Position set point to the Maximum Valve Position set point.

Valve Set Point Mode

This mode is enabled when the Valve/VFD Control set point is set to Valve Setpoint or Valve SP/VFD Stage. When the condenser state becomes Run, the valve position will be controlled to a position limited to a range from the Minimum Valve Position set point to the Maximum Valve Position set point. In this mode the valve position is calculated by a PID loop to control the condenser EWT or LWT (as selected by the Tower Control set point) to the Valve/VFD Set Point.

Valve Stage Mode

This mode is enabled when the Valve/VFD Control set point is set to Valve Stage. When the condenser state becomes Run, the valve position will be controlled to a position limited to a range from the Valve Minimum Position set point to the Valve Maximum

Position set point.

In this mode the valve position is calculated by a PID loop to control the condenser EWT or LWT (as selected by the Tower Control set point) to the active set point. The active set point is selected based on the fan stage as shown below:

Tower Fan Stage	Active Set Point
0	Valve/VFD Set Point
1	Tower Fan Stage 1 On Temperature
2	Tower Fan Stage 2 On Temperature

Cooling Tower Fan VFD

When the Valve/VFD Control set point is set to None, Valve Setpoint, or Valve Stage, cooling tower fan VFD control should not be operational and the speed should always be set to 0%.

If the Valve/VFD Control Configuration set point is set to VFD Stage or Valve SP/VFD Stage then VFD speed will be controlled as described below.

When active a VFD speed is calculated and limited to a range defined by the VFD Minimum Speed set point and the VFD Maximum Speed set point.

The VFD speed should always be 0% when the fan stage is 0. When one or both fan stages are on, the VFD speed should be calculated using a PID loop to control the condenser EWT or LWT (as selected by the Tower Control set point) to the active set point. The active set point is selected based on the fan stage as shown below.

Tower Fan Stage	Active Set Point
0	N/A
1	Tower Fan Stage 1 On Temperature
2	Tower Fan Stage 2 On Temperature

As the calculated speed varies from 0 to 100%, the voltage signal for the Tower VFD Speed output should vary from 0 to 10 VDC.

Leaving Water Temp (LWT) Target

The LWT Target varies based on settings and inputs. The base LWT Target is selected as shown in [Table 29](#).

Table 29: LWT Targets Control Source


Available Modes Set Point	Control Source Set Point	Mode Input	BAS Re-request	Base LWT Target
COOL	Local	-	-	Cool Set Point
	Network	-	-	BAS Cool Set Point
Cool/Ice	Local	Off	-	Cool Set Point
		On	-	Ice Set Point
	Network	-	Cool	BAS Cool Set Point
		-	Ice	BAS Ice Set Point
Ice	Local	-	-	Ice Set Point
	Network	-	-	BAS Ice Set Point

LWT Reset

The base LWT target may be reset to a higher value if the unit is in Cool mode and LWT Reset Enable is enabled.

When the reset is active, it will be 0 if the reset signal is less than or equal to 4 mA. Reset is equal to the Max Reset set point if the reset signal equals or exceeds 20 mA. The amount of reset will vary linearly between these extremes if the reset signal is between 4 mA and 20 mA.

Figure 22: 4-20mA Reset

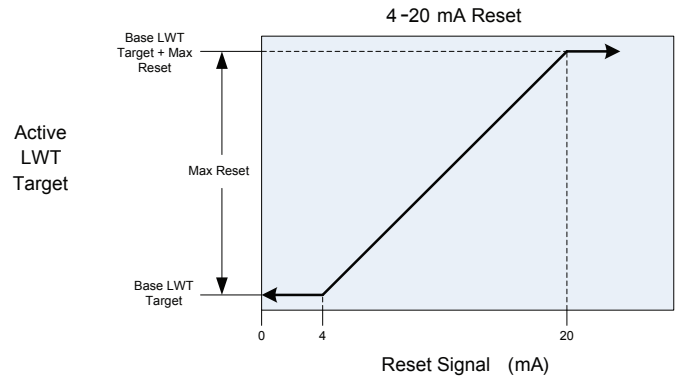

When the active reset increases, the Active LWT Target is changed at a rate of 0.1 °C (0.18 °F) every 10 seconds. When the active reset decreases, the Active LWT Target is changed all at once.

After reset is applied, the LWT target can never exceed a value of 20.0°C (68°F). Since the Cool LWT set point can be set as high as 20.0°C, the amount of reset may be limited in order to meet this requirement to clamp the active LWT target to 20.0°C.

Unit Capacity Control

Unit capacity control will be performed as described in this section. Loading and unloading the refrigerant circuit is used to control the overall unit capacity.

Cool Mode Operation

LWT error and EWT pulldown rate are the primary factors in unit capacity adjustments. This section details all the logic for unit capacity control in Cool Mode.

Staging On

Unit capacity control will command the circuit to start if all of the following are true:

- Unit State = Auto
- Evaporator Pump State = Run
- LWT error > Startup Delta T set point

Staging Off

Unit capacity control logic will command the circuit to shut down if either of the following conditions are true:

- LWT error < -(Shut Down Delta T set point)
- LWT < LWT Target AND EWT < LWT Target

Ice Mode Operation

In Ice mode, the compressor will load up at the maximum possible rate that allows for stable operation of the refrigerant circuit. The unit should start when LWT error is greater than the Startup Delta T set point. The unit should shut down when LWT error is 0 or less.

Unit Capacity Limits

Unit capacity limits are used to limit total unit capacity in Cool mode only. Multiple limits may be active at any time, and the lowest limit is always used in the unit capacity control.

Demand limit and network limit use a deadband around the actual limit value, such that unit capacity increase is not allowed within this deadband. If unit capacity is above the deadband, capacity is decreased until it is back within the deadband which is 7%.

The unit capacity will be adjusted as needed to meet the lowest active limit, but the circuit cannot be turned off to meet a limit lower than the minimum unit capacity.

Demand Limit

The maximum unit capacity can be limited by a 4-20 mA signal on the Demand Limit analog input at the unit controller. This function is only enabled if the Demand Limit set point is set to On. As the signal varies from 4 mA up to 20 mA, the limit changes linearly from 100% to 0%.

Network Limit

The maximum unit capacity can be limited by a network command. This function is only enabled if the unit control source is set to network. The signal will be received through the BAS interface on the unit controller. This network limit command directly sets a max unit capacity from 0% to 100%.

RapidRestore Option

RapidRestore is an option that can be added to WWV chillers. The general purpose of the option is to allow the capability to restart more quickly and to load faster than normal when power is lost and restored.

Enabling

The RapidRestore option is enabled via the RapidRestore set point on the unit configuration screen. Changing the setting to 'enable' will require the following to be true:

- RapidRestore module is present at address 22
- DI1 on the RapidRestore module has a signal

If either of the above conditions are no longer true for at least five seconds, then the RapidRestore set point will be changed to 'disable', effectively disabling the RapidRestore option in the chiller.

Operation Following Power Cycle

The chiller will enter RapidRestore upon powering up when the following conditions are met:

- RapidRestore is enabled
- Power failure lasts less than the value of the Max Power Failure Time set point
- Power failure lasts at least one second (shorter power loss may result in unpredictable operation)
- Unit is enabled
- LWT error is at least 1°C

RapidRestore will end if any of the following conditions occur:

- LWT error is less than 1°C
- Unit capacity = 100%
- Unit becomes disabled for any reason
- 10 minutes have passed since unit powered up

Unit Level Changes

Evaporator Recirculation Time

With a goal of starting the chiller within 30 seconds after power is restored, the evaporator recirculation time must be trimmed to account for the controller boot time. When RapidRestore is triggered, the time value used for the evaporator recirculation time will be 10 seconds. Note that the evaporator recirculation time set point is not changed as a result of this.

Condenser Recirculation Time

Similar to the evaporator, the condenser recirculation time will be trimmed to 10 seconds for RapidRestore. The condenser recirculation time set point is not changed as a result.

Unit Capacity Control

The evaporator LWT error does not have to be more than the start delta t value. If RapidRestore is active, that is considered adequate for starting the chiller.

Circuit Level Changes

When RapidRestore is triggered, all compressor cycle timers are cleared to allow for starting more quickly. The limitation of four starts per hour is still in effect though, and will not be cleared by the RapidRestore operation. Compressor speed increments will be 2Hz (normally 1Hz).

Circuit Functions

Components controlled at the circuit level include:

- Compressor VFD
- Compressor VR Solenoid Valves
- Oil Return Solenoid Valve
- Jet Pump Solenoid Valve
- Evaporator EXV

Approach Values

Evaporator Approach = LWT – Evap Saturated Temp

Condenser Approach = Cond Saturated Temp - LWT

Superheat Values

Suction superheat = Suction Temp – Evap Saturated Temp

Discharge superheat = MAX{0, Discharge Temp – Cond Saturated Temp}

Subcooling = Cond Saturated Temp – Liquid Line Temp

Differential Pressure Values

Oil Pressure Drop = Cond Pressure - Oil Pressure

Pressure Ratio

Pressure Ratio = (Cond Press + 101.3) ÷ (Evap Press + 101.3)

Actual Capacity

Actual capacity is a representation of capacity as a percentage of full capacity based on feedback regarding the actual speed of the compressor.

Compressors vary capacity via changes to the speed. The actual compressor speed is read from the VFD. Feedback capacity for a compressor with a VFD is:

Actual Compressor Speed x 100 ÷ Maximum Speed

Circuit Availability


A circuit is available to start if the following conditions are true:

- No manual reset circuit fault alarms are active
- Circuit Mode set point is set to Enable
- BAS Circuit Mode set point is set to Auto if Control Source = Network
- No cycle timers are active (including the max starts per hour limit)

Circuit States

There are four distinct states of control for the circuit as shown.

Figure 23: Circuit State Transitions

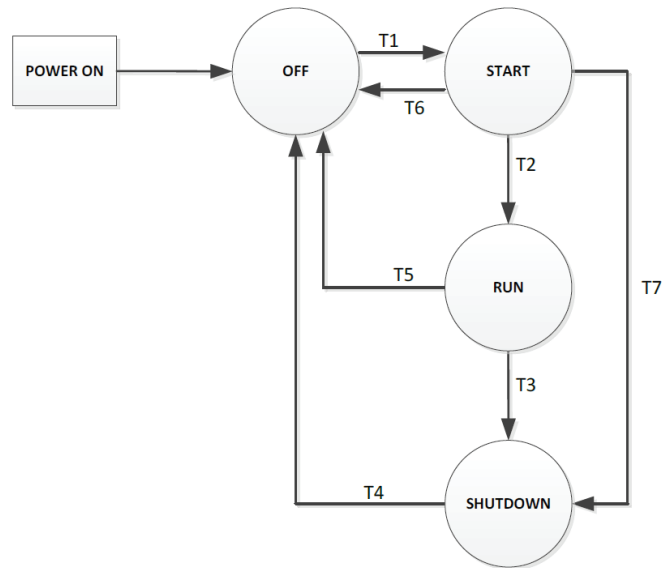

T1 – Off to Start - All of the following must be true:

- Circuit is available to start per the previous section
- Adequate pressure in the evaporator and condenser (see No Pressure At Start Alarm)
- Unit capacity control logic requires the circuit to start
- BAS Circuit Mode set point is set to Auto if Control Source = Network
- No cycle timers are active (including max starts per hour)
- Evaporator State = Run
- Condenser State = Run
- Circuit state has been Off for at least 15 seconds

T2 – Start to Run - All of the following are required:

- Circuit has been in the Start state for 20 seconds
- Evap Pressure ≥ Low Pressure Unload set point

T3 – Run to Shutdown - Any of the following are required:

- Unit capacity control logic requires this circuit to stop
- Unit state is Shutdown
- A normal shutdown alarm occurs on the circuit
- Control Source = Network and BAS Circuit Mode = Off

T4 – Shutdown to Off - Any of the following are required:

- Unit state is Off
- Rapid stop alarm occurs on the circuit
- Evaporator State is not Run
- Condenser State is not Run
- Compressor speed ≤ 20 Hz
- Circuit State = Shutdown for more than 30 seconds

T5 – Run to Off - Any of the following are required:

- Unit state is Off
- Rapid stop alarm occurs on the circuit
- Evaporator State is not Run
- Condenser State is not Run

T6 – Start to Off - Any of the following are required:

- Unit state is Off
- Rapid stop alarm occurs on the circuit
- Evaporator State is not Run
- Condenser State is not Run

T7 – Start to Shutdown - Any of the following are required:

- Unit capacity control logic requires this circuit to stop
- Unit state is shutdown
- A normal shutdown alarm occurs on the circuit
- Control Source = Network and BAS Circuit Mode = Off

Circuit Status

Circuit Status is displayed to indicate the general condition of the circuit. The following table lists the text displayed for each circuit status and the conditions that enable each status. If more than one status is enabled at the same time, the highest numbered status overrides the others and is displayed.

Table 30: Circuit Status

#	Status	Conditions
0	Off: Ready	Circuit is ready to start when needed.
1	Off: Cycle Timer	Circuit is off and cannot start due to active cycle timer.
2	Off: Max Starts Per Hour	Circuit is off and cannot start due to compressor reaching max starts per hour.
3	Off: BAS Disable	Circuit is off and cannot start due to BAS Circuit Mode input being set to Off.
4	Off: Alarm	Circuit is off and cannot start due to active circuit alarm.
5	Shutting Down	Circuit is in shutdown state.
6	Run: Normal	Circuit is in start or run state and running normally.
7	Run: DSH Low	Circuit is in start or run state and cannot load due to low discharge superheat.
8	Run: Evap Press Low	Circuit is in start or run state and cannot load due to low evaporator pressure.
9	Run: Cond Press High	Circuit is in start or run state and cannot load due to high condenser pressure.
10	Run: VFD Input Current High	Circuit is in start or run state and cannot load due to high VFD input current.
11	Run: VFD Out Current High	Circuit is in start or run state and cannot load due to high VFD output current.
12	Run: VFD Temp High	Circuit is in start or run state and cannot load due to high VFD temperature..
13	Run: High LWT Limit	Circuit is in start or run state and cannot load due to the evaporator LWT exceeding the limit for allowing full capacity.

Compressor Control

The compressor is controlled via:

- commands to the VFD via Modbus to start/stop the compressor
- a speed command to the VFD via Modbus to control the compressor speed
- a digital output to control the oil return solenoid valve and jet pump solenoid valve
- digital outputs for compressor VR solenoids to control VR

Cycle Timers

A minimum time must pass between starts of each compressor. When the compressor starts, a timer starts which will run for a time determined by the Start-Start Timer set point.

A minimum time must pass between the stop and start of each compressor as well. When the compressor stops, a timer starts which will run for a time determined by the Stop-Start Timer set point.

While either timer is running the compressor cannot start. Both cycle timers will be enforced even through cycling of power to the chiller. These timers may be cleared via the Clear Cycle Timers set point.

Starts Per Hour Limit

In addition to the cycle timers, a limit of four starts per hour is enforced. A buffer of start times for the last four starts is maintained. If the current time is an hour or less after the first timestamp in the buffer, the next start will be delayed. This limit is cleared if the Clear Cycle Timers set point is set to Yes.

Capacity Control

The compressor will vary capacity via changes to the motor speed (frequency). The speed is controlled via writing to a specific modbus register in the VFD. The VFD should initiate the compressor to run when the circuit state is Start, Run, or Shutdown.

Auto Capacity Control

The minimum running speed is set to 14 Hz and the normal speed change is 1hz for all compressor configurations.

Circuit State = Off - Speed command is 0 Hz.

Circuit State = Start - Immediately after starting, the compressor speed will be set to a frequency at least equal to the calculated Compressor Minimum Frequency, which minimum is 14 Hz.

Circuit State = Run - After the circuit enters the Run state for 30 seconds, changes to the speed are performed based on load and unload commands coming from the unit capacity control logic. The speed is constrained to a range from the minimum based on the configuration up to the Compressor Maximum Speed set point.

When a capacity increase occurs a time delay starts and when a capacity decrease occurs a separate time delay starts. While either of these delays is active, no normal capacity changes will

occur. The load and unload delay times are calculated values.

Whenever the speed command is less than the Compressor Minimum Frequency value, the speed command should be increased at the same rate allowed for normal capacity increases until it reaches that value. If there is an unload command from the unit capacity control logic, the speed command should not decrease if it is less than or equal to the Compressor Minimum Frequency value.

Circuit State = Shutdown - Speed will be ramped down to 20 Hz. The ramp rate will be 1 Hz/second, but the maximum ramp time should be 30 seconds so the ramp rate will adjust up as needed to complete the speed ramp within 30 seconds.

Manual Speed Control

The speed of the compressor may be controlled manually. Manual speed control is enabled via a set point with choices of Auto and Manual. With manual control speed can be set in 0.1 Hz increments, in a range from 14 Hz to the Compressor Maximum Speed set point.

When setting a manual speed, the compressor speed will generally be stepped up or down using 1 Hz speed changes. If the change required to reach the manually set speed command is less than 1 Hz, the compressor speed will change directly to the manually set speed command. Changes to the speed will be made as fast as allowed by the calculated load and unload delays. Capacity control may be set to Manual only when circuit state is Run.

Capacity control shall revert back to automatic control if either:

- the circuit state changes from Run to another state
- capacity control has been set to manual for four hours

VR Solenoid Valve Control

There are three solenoid valves for changing volume ratio (VR) of the compressor:

- 100% solenoid valve
- 50% solenoid valve
- 75% solenoid valve

Note: The VR position % does not equal the % capacity load of the compressor.

Automatic VR Control

The compressor should start with all three solenoid valves off. After compressor has been running for at least 20 seconds, the control logic will “stage” the solenoid valves. The table below shows which VR solenoid valves are on at each stage as well as stage up and stage down conditions. The staging conditions must be active for 30 seconds to trigger each stage up or down.

Stage	VR	50 VR SV	75 VR SV	100 VR SV
0	1.6	Off	Off	Off
1	1.8	On	Off	Off
2	2.4	Off	On	Off
3	3.1	On	On	On

Whenever the VR of the compressor needs to be reduced, all three solenoid valves must first be turned off for 15 seconds. After that, the necessary solenoid valve can be turned on.

When the circuit state becomes Shutdown or Off, all VR solenoids should be turned off.

Manual VR Control

VR can be controlled manually using settings on the variable VR screen. VR control can be changed to Manual only when the circuit state is Run. When VR Control is set to Manual, the VR can be selected with choices of 1.6, 1.8, 2.4, 3.1. The solenoid valve outputs will be set according to the table in the previous section on automatic control. However, there will not be any time delays or special operation for staging the VR down as in automatic control.

Evaporator EXV Control

The Evaporator EXV is installed in the liquid line feeding the evaporator and the chiller controls use specific logic to set the position.

EXV will normally be positioned to control suction superheat (SSH) with a PI loop. In some conditions, the evap EXV will be positioned to control evaporator pressure to keep the compressor within its operating envelope.

EXV States

The control of the EXV follows a sequence of states. The transitions from one state to another is based on the running conditions of the circuit. The states are as follows:

- Closed – EXV fully closed.
- Startup – The pressure target ramps up to bring the liquid level up in the evaporator.
- Superheat – EXV controls to a calculated pressure target in order to maintain evaporator liquid refrigerant level at an optimal level.

Oil Return Solenoid Valve

The oil return solenoid valve output should be on whenever the compressor is being commanded to run. This output activates the oil return solenoid valve as well as the jet pump solenoid valve.

Circuit Capacity Overrides

The following conditions override automatic capacity control as described. These overrides keep the circuit from entering a condition in which it is not designed to run.

High Water Temperature Capacity Limit

If the evaporator LWT reaches 25°C (77°F) or higher, then high evaporator loop temperature capacity limits will be in effect.

When high evaporator loop temperature capacity limits are in effect and the capacity is 80% or higher, the circuit will not increase in capacity.

When high evaporator loop temperature capacity limits are in effect and the capacity is higher than 85%, the circuit capacity will be reduced until it is at 85% or less.

High evaporator loop temperature capacity limits will no longer be in effect when evaporator LWT is less than 25°C (77°F) for at least a minute.

Low Discharge Superheat Capacity Limit

If DSH < Minimum DSH set point, unit mode is Cool, and the compressor speed = 35 Hz, the compressor will not be allowed to increase speed.

If DSH < Minimum DSH set point, unit mode is Cool, and the compressor speed > 35 Hz the compressor speed will be reduced until it is at 35 Hz or lower.

The above limits will no longer be in effect when DSH ≥ Minimum DSH set point for at least a minute or the unit mode is no longer Cool.

Alarms

Situations may arise that require some action from the chiller, or that should be logged for future reference. The alarm digital output will be operated based on active alarm scenarios as shown in the table below.

State	Scenario
Off	No alarms preventing the chiller or circuit from running are active
On	An alarm is preventing the chiller from running


There are alarms that do not cause the chiller to shut down or prevent it from running. Those alarms should not cause the alarm digital output to be turned on.

Alarm Logging

All alarms appear in the active alarm list while active and can contain up to 50 total entries. All alarms are added to the alarm log when triggered and when cleared. Entries in the log representing the occurrence of an alarm will be preceded by '+' while entries representing the clearing of an alarm will be preceded by '-'.

When an alarm occurs, the alarm date, time, and description are stored in the active alarm buffer corresponding to that alarm (viewed on the Alarm Active screens) also in the alarm history buffer (viewed on the Alarm Log screens). The active alarm buffers hold a record of all current alarms.

Figure 24: Alarm Format

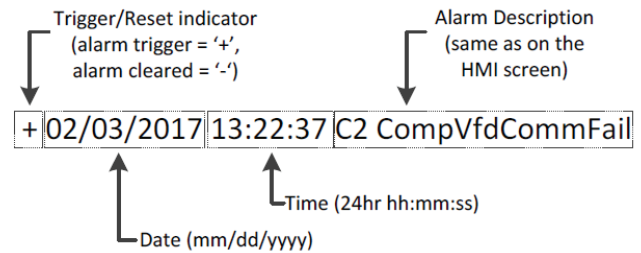

Alarm Snapshot Log

When alarms designated as 'Fault' category are triggered they should also be stored in the Alarm Snapshot Log. 'Problem' and 'Warning' category alarms should not be stored in the alarm snapshot log. See the alarm details section for information about the category assigned to each alarm.

This log will store the alarm, time and date it was triggered, and a list of values from the program cycle just before the alarm was triggered.

Like the alarm log, this functionality relies on features built into the controller firmware. The snapshot log should be implemented with 'sets' of logged parameters defined for unit alarms and circuit alarms. Each set should be configured such that older entries will be pushed out as new entries are added when the set is full. Each of the sets can have 50 alarm instances stored based on the available storage and the number of sets configured. All sets are viewed in the same alarm snapshot log, and the log should show the entries in order from newest to oldest.

Figure 25: Alarm Snapshot Log Example

```

File Edit Format View Help
03/08/2019 14:46:35 Evap LWT SenFault
Unit Alarm
Unit Status=Off:Unit Sw
Active Setpt=44.01 °F
Evap LWT=-1768 °F
Evap EWT=54.15 °F
Evap Flow Sw=On
Cir Status 1=Off:Cmp vfd Htg
Capacity 1=0 %
Comp Speed 1=0 Hz
VFD Current In 1=0 A
Evap Pr 1=39.68 psi
Cond Pr 1=151.1 psi
Evap EXV Pos 1=0 %
Cir Status 2=Off:Cmp vfd Htg
Capacity 2=0 %
Comp Speed 2=0 Hz
VFD Current In 2=0 A
Evap Pr 2=40.49 psi
Cond Pr 2=143.3 psi
Evap EXV Pos 2=0 %

```

Note that the alarm snapshot log will be erased if a configuration setting on the unit configuration screen is changed and the controller rebooted. This is a behavior that cannot be changed since it is part of the alarm snapshot feature built into the firmware.

Event Log


The event log should be set up and behave in a way similar to the alarm log. Note that this is a functionality that is part of the firmware so some of the characteristics and behavior are not changeable with the application software. This log stores up to 50 entries with the oldest entries being pushed out as new entries need to be added if the log is full.

Sort order should be based on time and date, most recent first in the log. All events will be added to the event log when triggered and when cleared. Entries in the log representing the occurrence of an event will be preceded by '+' while entries representing the clearing of an alarm will be preceded by '-'.

Export to SD Card

The alarm log can be exported to an SD card in the controller. A setting called 'Log Export to SD' will be used to initiate this when set to 'Yes'. The exported log will be saved in a text file on the SD card with Alarm, Snapshot, and Event logs each getting their own folder on the root level of the card. Within each log folder, the logs are organized by 'month-year' folders, and then by 'day' subfolders as shown in the example below:

Figure 26: SD Card Folder Structure

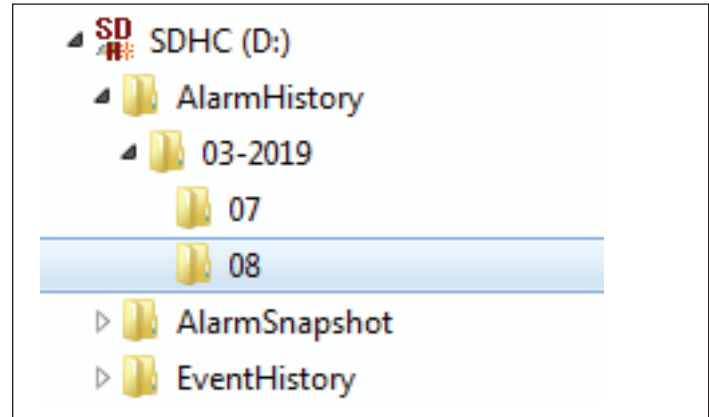

Signaling Alarms

The following actions will signal that an alarm has occurred:

- The unit or a circuit will execute a rapid or normal shutdown.
- An alarm bell icon will be displayed in the upper right-hand corner of all controller screens including the optional remote user interface panel's screens.
- An optional field supplied and wired remote alarm device will be activated.

Clearing Alarms/Faults

Active alarms can be cleared through the unit controller HMI/display or a BAS network. Alarms are automatically cleared when controller power is cycled. Alarms are cleared only if the conditions required to initiate the alarm no longer exist. All alarms and groups of alarms can be cleared via the unit controller HMI or network via LON using nviClearAlarms and via BACnet using the ClearAlarms object.

To use the unit controller HMI, follow the Alarm links to the Alarms screen, which will show Active Alarms and Alarm Log. Select Active Alarm and press the wheel to view the Alarm List (list of current active alarms). They are in order of occurrence with the most recent on top. The second line on the screen shows Alm Cnt (number of alarms currently active) and the status of the alarm clear function. An active password is not necessary to clear alarms.

If the problem(s) causing the alarm have been corrected, the alarms will be cleared, disappear from the Active Alarm list and be posted in the Alarm Log. If not corrected, the On will immediately change back to OFF and the unit will remain in the alarm condition.

Description of Alarms

Details for each alarm are listed as shown below.

Displayed Text:	Text to be displayed on HMI in the alarm lists.
Trigger:	Conditions required to trigger the alarm.
Action Taken:	Actions should be taken when alarm triggers.
Reset:	Method by which the alarm can be cleared and conditions required for doing so, if any.

Unit Alarms

Evaporator Flow Loss

Displayed Text:	Evap Water Flow Loss
Trigger:	<p>1: Evap Pump State = Run AND Evap Flow Digital Input = No Flow for time > Flow Loss Delay set point AND at least one circuit is not in the Off state</p> <p>2: Evap Pump State = Start for time greater than Recirculate Timeout set point and all pumps have been tried and Evap Flow Digital Input = No Flow</p>
Action Taken:	<p>Rapid shutdown all circuits and:</p> <ul style="list-style-type: none"> - if an auto reset occurrence has triggered, keep unit enabled and allow the evaporator recirculation sequence to proceed - if a manual reset occurrence has been triggered, lock out unit from running
Reset:	<p>This alarm can be cleared at any time manually via the keypad or via the BAS clear alarm command.</p> <p>If active via trigger condition 1:</p> <p>When the alarm occurs due to this trigger, it can auto reset the first two times each day, with the third occurrence being manual reset. When the auto reset occurrences are triggered the unit will remain enabled to run (rather than going to an off state)</p> <p>For the auto reset occurrences, the alarm will reset automatically when the evaporator state is Run again. This means the alarm stays active while the unit waits for flow, then it goes through the recirculation process after flow is detected. Once the recirculation is complete, the evaporator goes to the Run state which will clear the alarm. After three occurrences, the count of occurrences is reset and the cycle starts over if the manual reset flow loss alarm is cleared</p> <p>If active via trigger condition 2:</p> <p>If the flow loss alarm has occurred due to this trigger, it is always a manual reset alarm</p>

Condenser Flow Loss

Displayed Text:	Cond Water Flow Loss
Trigger:	<p>1: Condenser Pump State = Run AND Condenser Flow Digital Input = No Flow for time > Flow Loss Delay set point AND at least one circuit is not in the Off state</p> <p>2: Condenser Pump State = Start for time greater than Recirculate Timeout set point and all pumps have been tried and Evaporator Flow Digital Input = No Flow</p>
Action Taken:	<p>Rapid shutdown all circuits and:</p> <ul style="list-style-type: none"> -if an auto reset occurrence has triggered, keep unit enabled and allow the evaporator recirculation sequence to proceed -if a manual reset occurrence has been triggered, lock out unit from running
Reset:	<p>This alarm can be cleared at any time manually via the keypad or via the BAS clear alarm command.</p> <p>If active via trigger condition 1:</p> <p>When the alarm occurs due to this trigger, it can auto reset the first two times each day, with the third occurrence being manual reset. When the auto reset occurrences are triggered the unit will remain enabled to run (rather than going to an off state)</p> <p>For the auto reset occurrences, the alarm will reset automatically when the evaporator state is Run again. This means the alarm stays active while the unit waits for flow, then it goes through the recirculation process after flow is detected. Once the recirculation is complete, the evaporator goes to the Run state which will clear the alarm. After three occurrences, the count of occurrences is reset and the cycle starts over if the manual reset flow loss alarm is cleared</p> <p>If active via trigger condition 2:</p> <p>If the flow loss alarm has occurred due to this trigger, it is always a manual reset alarm</p>

Evaporator/Condenser Water Freeze Protect

Displayed Text:	Evap Water Freeze Cond Water Freeze
Trigger:	LWT or EWT equal to or less than Freeze Protect set point for a time at least as long as the evaporator recirculation time. If the sensor fault is active for either LWT or EWT, then that sensor value cannot trigger the alarm
Action Taken:	Rapid shutdown unit and lock out unit from running
Reset:	This alarm can be cleared manually via the unit controller HMI, but only if specific LWT and EWT are both above the specified Freeze Protect set point or have a sensor fault (meaning the temperature reading is not valid)

Evaporator Water Temperatures Inverted

Displayed Text:	EvapWaterTempInverted
Trigger:	All of the following are true for at least 90 seconds: Unit is in Run state Evap EWT < Evap LWT – 1°C EWT sensor fault not active LWT sensor fault not active
Action Taken:	Normal shutdown unit and lock out unit from running
Reset:	This alarm can be cleared manually via the unit controller HMI or via BAS command.

Evaporator/Condenser LWT Sensor Fault

Displayed Text:	Evap LWT SenFault/ Cond LWT SenFault
Trigger:	If any of the following occur: Resistance value is < 340 Ω Resistance value is > 300k Ω Reliability value reported for input is anything other than 'NoFault'
Action Taken:	Rapid shutdown unit and lock out unit from running
Reset:	This alarm can be cleared manually via the unit controller HMI or BAS command if the following are true: Resistance value is from 340 Ω to 300k Ω Reliability value reported for input is 'NoFault'

Evaporator/Condenser EWT Sensor Fault

Displayed Text:	Evap EWT SenFault/ Cond EWT SenFault
Trigger:	If any of the following occur: Resistance value is < 340 Ω Resistance value is > 300k Ω Reliability value reported for input is anything other than 'NoFault'
Action Taken:	Normal shutdown unit and lock out unit from running
Reset:	This alarm can be cleared manually via the unit controller HMI or BAS command if the following are true for at least five seconds: Resistance value is from 340 Ω to 300k Ω Reliability value reported for input is 'NoFault'

External Alarm

Displayed Text:	External Alarm
Trigger:	Emergency Stop input has been on for at least 3 seconds, then external alarm input is off for at least 1 second
Action Taken:	Rapid shutdown unit and lock out unit from running
Reset:	Auto clear when external input is on for 5 seconds

Emergency Stop

Displayed Text:	Emergency Stop Switch
Trigger:	Emergency Stop input is off for at least 1 second.
Action Taken:	Rapid shutdown unit and lock out unit from running
Reset:	This alarm can be cleared manually via the Unit Controller HMI or via BAS command if the emergency switch input is on for 5 seconds.

Unit Ground Fault Protection

Displayed Text:	Unit Ground Fault
Trigger:	All of the following are true: Ground Fault Protection Option set point = Yes Ground Fault Relay input is off for 1 second
Action Taken:	Rapid shutdown unit and lock out unit from running
Reset:	Auto reset when Ground Fault Relay input is on for 5 seconds

Compressor Controller (CC1) Module Comm Failure

Displayed Text:	CC1 Mod Comm Fail
Trigger:	Communication with the CC1 module has failed. This means the reliability value reported for the module is anything other than 0 for at least 3 seconds
Action Taken:	Rapid shutdown unit and lock out unit from running
Reset:	This alarm can be cleared manually via the unit controller HMI or BAS command after reliability value reported for the module is 0 for at least 5 seconds.

Evaporator EXV Module Comm Failure

Displayed Text:	EEXV1 Mod Comm Fail
Trigger:	Communication with the EEXV1 module has failed. This means the reliability value reported for the module is anything other than 0 for at least 3 seconds
Action Taken:	Rapid shutdown unit and lock out unit from running
Reset:	This alarm can be cleared manually via the Unit Controller HMI or BAS command after reliability value reported for the module is 0 for at least 5 seconds.

Evaporator/Condenser Pump #1 or #2 Failure

Displayed Text:	Evap Pump1(or 2)Fault/Cond Pump1(or 2)Fault
Trigger:	Unit is configured with primary and backup pumps, pump #1 (or #2) is running, and the pump control logic switches to pump #2 and vice versa.
Action Taken:	Backup pump is used
Reset:	This alarm can be cleared manually via the unit controller HMI or BAS command

Bad Demand Limit Input

Displayed Text:	Bad Demand Lim Input
Trigger:	Demand limit input out of range and Demand Limit set point is set to Enable. For this alarm out of range is considered to be a signal less than 3mA or more than 21mA
Action Taken:	Demand limit function and signal ignored
Reset:	Auto clear when Demand Limit set point is set to Disable or demand limit input back in range for 5 seconds

Bad LWT Reset Input

Displayed Text:	Bad LWT Reset Input
Trigger:	LWT Reset set point is Enable and LWT reset input is out of range. For this alarm out of range is considered to be a signal less than 3mA or more than 21mA
Action Taken:	LWT reset signal and reset function ignored
Reset:	Auto clear when LWT Reset set point is Disable or LWT Reset input back in range for 5 seconds

RapidRestore Module Comm Failure

Displayed Text:	RR Module Comm Fail
Trigger:	RapidRestore set point is set to 'Yes' and communication with the RapidRestore module has failed. This means the reliability value reported for the module is anything other than 0 for at least 3 seconds
Action Taken:	RapidRestore functionality will be disabled while the module is not communicating since an input on the module is required in order to enable the functionality
Reset:	This alarm will automatically clear after communication is restored for at least 5 seconds

Circuit Alarms

Low Evaporator Pressure

Text:	C1 EvapPressLow
Trigger:	<p>Trigger 1 - This alarm will trigger when Freeze time is exceeded and Circuit State = Start or Run.</p> <p>Freezestat logic allows the circuit to run for varying times at low pressures. The lower the pressure, the shorter the time the compressor can run. This time is calculated as follows:</p> <p>Freeze error = Low Evaporator Pressure Unload – Evaporator Pressure</p> <p>Freeze time = $70 - 0.906 \times \text{freeze error}$, limited to a range of 20-70 seconds</p> <p>When the evaporator pressure goes below the Low Evaporator Pressure Unload set point, a timer starts. If this timer exceeds the freeze time, then a freezestat trip occurs. If the evaporator pressure rises to the unload set point or higher, and freeze time has not been exceeded, the timer will reset.</p> <p>Trigger 2 - The alarm will trigger if Evaporator Press is less than 0 kPa (0 psi) for longer than one second while the circuit state is Run</p> <p>Trigger 3 - The alarm will trigger if Evap Press is less than 0 kPa (0 psi) for longer than 5 seconds while the circuit state is anything other than Run</p> <p>For any trigger condition, the alarm cannot trigger if the evaporator pressure sensor fault is active or the CC1 module communication is not working</p>
Action:	Rapid shutdown of unit and lock out from running
Reset:	This alarm can be cleared manually via the Unit Controller HMI if evap press is above 0 kPa (0 psi)

High Condenser Pressure

Text:	C1 CondPressHigh
Trigger:	Saturated Condenser Temp > Max Saturated Condenser Value for time longer than High Condenser Pressure Delay set point. Cannot trigger if CC1 module communication is not working
Action Taken:	Rapid shutdown of unit and lock out from running
Reset:	This alarm can be cleared manually via the unit controller HMI if Saturated Condenser Temp \leq Max Saturated Condenser Value

Mechanical High Pressure Switch

Displayed Text:	C1 MHP Switch
Trigger:	At least 12 seconds elapsed since controller booted and compressor VFD reports Safe Stop alarm or warning. The alarm is bit 30 in the Alarm word and the warning is bit 30 in the Warning word from the VFD
Action Taken:	Rapid shutdown of unit and lock out from running
Reset:	This alarm can be cleared manually via the Unit Controller HMI. When alarm is cleared, command to reset alarms should be sent to VFD


High Discharge Temperature

Displayed Text:	C1 DiscTempHigh
Trigger:	The following are true for one second: Circuit state is Start, Run, or Shutdown Discharge Temperature > High Discharge Temperature set point discharge temperature sensor fault is not active
Action Taken:	Normal shutdown of unit and lock out from running
Reset:	This alarm can be cleared manually via the Unit Controller HMI or via BAS command

High Oil Pressure Difference

Displayed Text:	C1 Oil PD High
Trigger:	Circuit is in the Run state and Oil Pressure Difference > High Oil Pressure Difference value for a time longer than High Oil Pressure Difference Delay set point High Oil Pressure Difference value is calculated as shown Figure 27 Operating PD = Condenser Pressure – Evaporator Pressure Minimum for High Oil Pressure Difference = High Oil Pressure Difference set point Maximum for High Oil Pressure Difference = High Oil Pressure Difference set point + 100kPa
Action Taken:	Rapid shutdown of unit and lock out from running
Reset:	This alarm can be cleared manually via the Unit Controller unit controller HMI or via BAS command

Figure 27: High Oil Pressure Difference Values

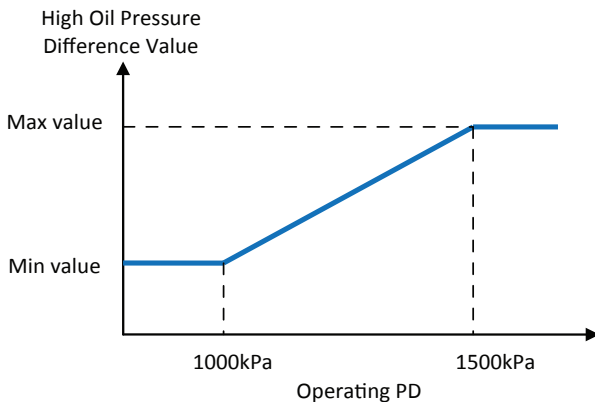

Oil Feed Loss

Displayed Text:	C1 Oil Feed Loss
Trigger:	The following are true for 20 second: Oil Presence Sensor setting is 'Yes' Compressor is running Oil Presence Sensor input is off
Action Taken:	Rapid shutdown of unit and lock out from running
Reset:	This alarm can be cleared manually via the Unit Controller HMI

High Motor Temperature

Displayed Text:	C1 Motor Temp High
Trigger:	Compressor VFD reports motor overheat alarm, which is bit 7 in the Alarm word from the VFD
Action Taken:	Rapid shutdown of unit and lock out from running
Reset:	This alarm can be cleared manually via the Unit Controller unit controller HMI when compressor has been off for at least 5 minutes. When the alarm is cleared in the unit controller, the command to clear the fault in the VFD will be sent

No Pressure Change At Start

Displayed Text:	C1 No Press Chg Start
Trigger:	After start of compressor, at least a 7 kPa drop in evaporator pressure or 25 kPa increase in condenser pressure has not occurred within 40 seconds
Action Taken:	Rapid shutdown of unit and lock out from running
Reset:	This alarm can be cleared manually via the Unit Controller unit controller HMI or BAS command

No Pressure At Start

Displayed Text:	C1 No Press At Start
Trigger:	All of the following must be true to trigger: Circuit start requested Either Evaporator Pressure or Condenser Pressure are less than 35 kPa (5.1 psi)
Action Taken:	Abort start of circuit and lock out from running
Reset:	This alarm can be cleared manually via the Unit Controller unit controller HMI or BAS command

Low Discharge Superheat

Displayed Text:	C1 Disc SH Low
Trigger:	If both of the following are true for at least 30 minutes, the alarm is triggered: Circuit state is not Off DSH < Low DSH Limit set point
Action Taken:	Normal shutdown of unit and lock out from running on the third occurrence
Reset:	This alarm can be cleared manually via the Unit Controller HMI or via BAS command

Low Pressure Ratio

Displayed Text:	C1 Low Pr Ratio
Trigger:	Circuit state is Run and pressure ratio < 1.3 for a time > Low Pressure Ratio Delay set point. This alarm is actually triggered on the third occurrence of the above conditions within 2 hours. Prior occurrences are events.
Action Taken:	Rapid shutdown of unit and lock out from running on the third occurrence.
Reset:	This alarm can be cleared manually via the Unit Controller HMI or via BAS command.

High Compressor VFD Output Current

Displayed Text:	C1 CmpVfd Curr OutHigh
Trigger:	This alarm will trigger when all of the following are true: compressor is running Motor Current > Max Motor Current x 1.1 for at least 2 seconds
Action Taken:	Rapid shutdown of unit and lock out from running
Reset:	This alarm can be cleared manually via the Unit Controller HMI or via BAS command.

High Compressor VFD Input Current

Displayed Text:	C1 CmpVfd Curr In High
Trigger:	This alarm will trigger when all of the following are true for at least 5 seconds: unit mode is Ice compressor is running VFD Input Current > VFD Primary RLA set point x 1.05 VFD Primary RLA set point is part of the unit configuration.
Action Taken:	Rapid shutdown of unit and lock out from running
Reset:	This alarm can be cleared manually via the Unit Controller HMI or via BAS command.

Compressor VFD Comm Failure

Displayed Text:	C1 CompVfd CommFail
Trigger:	Communication with the compressor VFD has failed. This means that either a modbus configuration error has occurred, or a modbus command has failed in 10 consecutive loops of the modbus commands for this node address.
Action Taken:	Rapid shutdown of unit and lock out from running
Reset:	This alarm can be cleared manually via the Unit Controller HMI or via BAS command if communication has been restored for 5 seconds.

Compressor VFD Fault

Displayed Text:	C1 Comp Vfd Fault
Trigger:	Trip flag from VFD is set and alarm flags for the following VFD alarms are NOT set: Earth fault High control card temperature Control word timeout High Motor Temp DC link undervoltage DC link overvoltage Mains Phase Loss Motor Phase Loss Safe Stop The above conditions are required for one second to trigger the alarm.
Action Taken:	Rapid shutdown of unit and lock out from running
Reset:	This alarm can be cleared manually via the Unit Controller HMI or via BAS command. When alarm is cleared, command to reset alarms should be sent to VFD.

Compressor VFD Over Voltage

Displayed Text:	C1 VfdOverVoltage
Trigger:	DC link over voltage alarm flag is set in compressor VFD for at least one second.
Action Taken:	Rapid shutdown of unit and lock out from running
Reset:	This alarm will automatically reset when 'DC link over voltage' alarm flag is not set for at least 5 seconds.

Compressor VFD Under Voltage

Displayed Text:	C1 VfdUnderVoltage
Trigger:	DC link under voltage alarm flag is set in compressor VFD.
Action Taken:	Rapid shutdown of unit and lock out from running
Reset:	This alarm will automatically reset when 'DC link under voltage' alarm flag is not set for at least 5 seconds.

Compressor Motor Phase Loss

Displayed Text:	C1 Motor Phase Loss
Trigger:	Any of the following Compressor VFD alarm flags is set: Motor phase U is missing Motor phase V is missing Motor phase W is missing
Action Taken:	Rapid shutdown of unit and lock out from running
Reset:	This alarm will automatically reset when none of the motor phase loss alarm flags are set for at least 5 seconds.

Mains Phase Loss

Displayed Text:	C1 CmpVfd Phase Loss
Trigger:	Compressor VFD sets the 'Mains Phase Loss' alarm flag for at least one second or the 'Mains Failure' warning flag for at least 2.5 seconds
Action Taken:	Rapid shutdown of unit and lock out from running
Reset:	This alarm can be cleared manually via the Unit Controller HMI or BAS command if none of the trigger condition are true

Motor Earth Leakage

Displayed Text:	C1 Motor Earth Lkg
Trigger:	Compressor VFD sets the 'Earth Fault' alarm flag
Action Taken:	Rapid shutdown of unit and lock out from running
Reset:	This alarm will automatically reset when the Earth Fault flag is not set for at least 5 seconds

Compressor VFD Control Card Temp High

Displayed Text:	C1 VfdCtrlCardTmpHi
Trigger:	Compressor is running and VFD sets the Ctrl Card Temp alarm flag
Action Taken:	Rapid shutdown of unit and lock out from running
Reset:	This alarm can be cleared manually via the Unit Controller HMI or BAS command if 'Ctrl Card Temp' alarm flag is not set for at least one minute

Compressor Multiple Start Failure

Displayed Text:	Cn CompMultiStartFail
Trigger:	This alarm is actually triggered on the third occurrence of the below conditions within 2 hours. Prior occurrences are events. All of the following must be true to trigger: Compressor Run command is on Compressor VFD Communication Failure is not active Either VFD Actual Speed = 0 for more than 15 seconds OR VFD Actual Speed < 14hz for more than 30 seconds
Action Taken:	Rapid shutdown of unit and lock out from running
Reset:	This alarm can be cleared manually via the Unit Controller HMI or BAS command

Evaporator Pressure Sensor Fault

Displayed Text:	C1 EvapPressSenFault
Trigger:	Trigger if all of the following are true: UC communication with CC1 module is OK sensor input voltage is less than 400mv and, for at least 1 second sensor input voltage is more than 4600mv for at least one second and compressor running for at least 90 seconds
Action Taken:	Rapid shutdown of unit and lock out from running
Reset:	This alarm can be cleared manually via the Unit Controller HMI or BAS command if sensor input voltage is 400mv to 4600mv for at least 5 seconds

Condenser Pressure Sensor Fault

Displayed Text:	C1 CondPressSenFault
Trigger:	Trigger if all of the following are true: UC communication with CC1 module is OK sensor input voltage is less than 400mv or more than 4600mv for at least 1 second
Action Taken:	Rapid shutdown of unit and lock out from running
Reset:	This alarm can be cleared manually via the Unit Controller HMI or BAS command if sensor input voltage is 400mv to 4600mv for at least 5 seconds

Oil Pressure Sensor Fault

Displayed Text:	C1Cmp1 OffOilFeedPSen
Trigger:	Trigger any time sensor input voltage is less than 400mv or more than 4600mv and UC communication with CC1 module is OK, for at least 1 second
Action Taken:	Normal shutdown of unit and lock out from running
Reset:	This alarm can be cleared manually via the Unit Controller HMI or BAS command if sensor input voltage is 400mv to 4600mv for at least 5 seconds

Suction Temp Sensor Fault

Displayed Text:	C1 SuctTempSenFault
Trigger:	Trigger if UC communication with EEXV1 module is OK and any of the following are true for at least 1 second: Sensor input value < 340 Ω Sensor input value > 300 kΩ Sensor reliability reported by control system ≠ 'No Fault'
Action Taken:	Rapid shutdown of unit and lock out from running
Reset:	This alarm can be cleared manually via the Unit Controller HMI or BAS command if sensor input value is 340 Ω to 300 kΩ and sensor reliability = 'No Fault' for at least 5 seconds

Discharge Temp Sensor Fault

Displayed Text:	C1 DiscTempSenFault
Trigger:	Trigger if UC communication with CC1 module is OK and any of the following are true for at least 1 second: Sensor input value < 340 Ω Sensor input value > 300 kΩ Sensor reliability reported by control system ≠ 'No Fault'
Action Taken:	Normal shutdown of unit and lock out from running
Reset:	This alarm can be cleared manually via the Unit Controller HMI or BAS command if sensor input value is 340 Ω to 300 kΩ and sensor reliability = 'No Fault' for at least 5 seconds

Liquid Line Temperature Sensor Fault

Displayed Text:	C1 LiqTempSenFault
Trigger:	Trigger if UC communication with EEXV1 module is OK and any of the following are true for at least 1 second: Sensor input value < 340 Ω Sensor input value > 300 kΩ Sensor reliability reported by control system ≠ 'No Fault'
Action Taken:	Normal shutdown of unit and lock out from running
Reset:	This alarm can be cleared manually via the Unit Controller HMI or BAS command if sensor input value is 340 Ω to 300 kΩ and sensor reliability = 'No Fault' for at least 5 seconds.

Power Loss While Running

Displayed Text:	C1 PwrLossWhileRun
Trigger:	Circuit is running when controller loses power
Action Taken:	None
Reset:	N/A

Events

Situations may arise that require some action from the chiller or that should be logged for future reference, but aren't severe enough to register as alarms. These events are stored in a separate log from alarms. This log shows the time and date of the latest occurrence, the count of occurrences for the current day, and the count of occurrences for each of the previous 7 days.

Unit Power Restore

Trigger:	This event will trigger when the controller restarts and the last reset cause was 'power'. The reset cause is a system parameter available to be read in the controller.
Action Taken:	None
Reset:	N/A

Low Evaporator Pressure - Hold

Trigger:	This event will trigger when the unit mode is Cool, circuit state is Run, and evaporator pressure drops below the low evaporator pressure hold value. Low evaporator pressure hold value = Low Evaporator Pressure Unload set point + Low Evaporator Pressure Hold Offset set point
Action Taken:	Circuit will not be able to increase in capacity.
Reset:	This event is reset when the evaporator pressure rises at least 14 kPa (2.03 psi) above the Low Evaporator Pressure Hold set point. It is also reset if the circuit is no longer in the run state or the unit operating mode is changed to Ice.

Low Evaporator Pressure - Unload

Trigger:	This event will trigger when the unit mode is Cool, the circuit state is Run, and evaporator pressure drops below the Low Evaporator Pressure Unload set point.
Action Taken:	Compressor speed will decrease 1Hz every second until evaporator pressure rises up to at least the Low Evaporator Pressure Unload set point.
Reset:	This event is reset when the evaporator pressure rises at least 14 kPa (2.03 psi) above the Low Evaporator Pressure Hold set point. It is also reset if the circuit is no longer in the run state or the unit operating mode is changed to Ice.

High Condenser Pressure - Hold

Trigger:	This event will trigger when the unit mode is Cool, the circuit state is Run, and saturated condenser temperature rises above the high saturated condenser hold value.
Action Taken:	Circuit will not be able to increase in capacity.
Reset:	This event is reset when the saturated condenser temperature drops at least 0.5°C below the high saturated condenser hold value. It is also reset if the circuit is no longer in the run state or the unit operating mode is changed to Ice.

High Condenser Pressure - Unload

Trigger:	This event will trigger when the unit mode is Cool, the circuit state is Run, and saturated condenser temperature rises above the high saturated condenser unload value.
Action Taken:	Compressor speed will decrease 1Hz every second until saturated condenser temperature drops below the high saturated condenser unload value.
Reset:	This event is reset when saturated condenser temperature drops at least 0.2°C below the high saturated condenser unload value. It is also reset if the circuit is no longer in the run state or the unit operating mode is changed to Ice.

High VFD Output Current Hold

Trigger:	This event will trigger when all of the following are true: Unit mode = Cool compressor is running Motor Current > Max Motor Current x 0.95
Action Taken:	Circuit will not be able to increase in capacity.
Reset:	This event is reset when Motor Current < Max Motor Current x 0.95 for at least 60 seconds. It is also reset when the compressor is no longer running or the unit operating mode is changed to Ice.

High VFD Output Current Unload

Trigger:	This event will trigger when compressor is running, Unit mode = Cool, and either of the following occur: Motor Current > Max Motor Current Motor Current > Max Motor Current x 0.97 for 5 seconds
Action Taken:	Compressor speed will decrease 1Hz every two seconds until the event reset condition is met.
Reset:	This event is reset when Motor Current < Max Motor Current x 0.97 for at least 3 seconds. It is also reset when the compressor is no longer running or the unit operating mode is changed to Ice.

High VFD Input Current Hold

Trigger:	This event will trigger when all of the following are true for at least 5 seconds: Unit mode = Cool compressor is running VFD Line Current > VFD Primary RLA set point VFD Primary RLA set point is part of the unit configuration.
Action Taken:	Circuit will not be able to increase in capacity.
Reset:	This event is reset when VFD Line Current < VFD Primary RLA set point x 0.99 for at least 3 minutes. It is also reset when the compressor is no longer running or the unit operating mode is changed to Ice.

High VFD Input Current Unload

Trigger:	This event will trigger when all of the following are true for at least 5 seconds: Unit mode = Cool compressor is running VFD Line Current > VFD Primary RLA set point x 1.05 VFD Primary RLA set point is part of the unit configuration.
Action Taken:	Compressor speed will decrease 1Hz every 2 seconds until the event reset condition is met.
Reset:	This event is reset when VFD Line Current \leq VFD Primary RLA set point x 1.05. It is also reset when the compressor is no longer running or the unit operating mode is changed to Ice.

High VFD Temperature Hold

Trigger:	This event will trigger when all of the following are true for at least 5 seconds: Unit mode = Cool compressor is running VFD Heat Sink > 84°C
Action Taken:	Compressor will not be able to increase in speed or capacity.
Reset:	This event is reset when VFD Heatsink Temp < 84°C for at least 60 seconds. It is also reset when the compressor is not running or the unit operating mode is changed to Ice.

High VFD Temperature Unload

Trigger:	This event will trigger when all of the following are true for at least 5 seconds: Unit mode = Cool compressor is running VFD Heat Sink > 87°C
Action Taken:	Compressor speed will decrease at a rate equivalent to 1Hz every 10 seconds.
Reset:	This event is reset when VFD Heatsink Temp \leq 87°C. It is also reset when the compressor is not running or the unit operating mode is changed to Ice.

Low Pressure Ratio Shutdown

Trigger:	This event will trigger on the first and second occurrence of the below conditions within 2 hours. A third occurrence within a 2 hour window triggers the alarm. Circuit state is Run and pressure ratio < 1.3 for a time > Low Pressure Ratio Delay set point.
Action Taken:	Rapid shutdown of unit
Reset:	This event resets immediately after triggering.


Compressor Start Failure

Trigger:	This event will trigger on the first and second occurrence of the below conditions within 2 hours. A third occurrence within a 2 hour window triggers the alarm. All of the following must be true to trigger: Compressor Run command is on Compressor VFD Communication Failure is not active Either VFD Actual Speed = 0 for more than 15 seconds OR VFD Actual Speed < 14Hz for more than 30 seconds
Action Taken:	Rapid shutdown of unit
Reset:	This event resets immediately after triggering.

Unit Controller Operation

The unit controller HMI/display is an 8-line display with 6 buttons (keys). The right side buttons are used for navigation of the menus with up, down, and check/enter. The Up and Down buttons move the cursor up and down the screen. If the selected line links to another screen, there will be an arrowhead on the right end of the line. To navigate to the linked screen, the Enter button is pressed.

Figure 28: Unit Controller

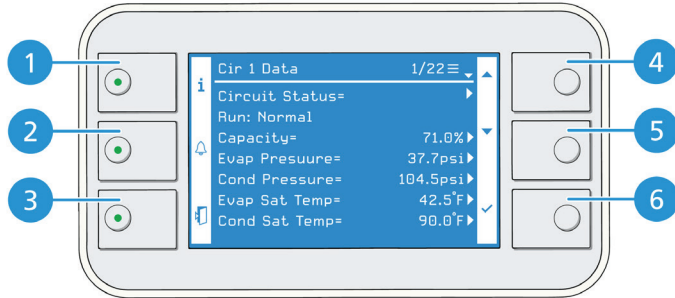

Button	Function
1	Home
2	Alarm
3	Back/Cancel
4	Navigation Up ▲
5	Navigation Down ▼
6	Enter

The three, left side buttons for Home, Alarm, and Back/Cancel have LED indicator lights.

- When the Home button is pressed, the Main Menu screen is displayed.
- When the Alarm button is pressed, the Alarm Log screen is displayed. If there are active alarms and the alarm button is pressed repeatedly, the HMI will cycle between the Alarm Log screen, the Active Alarms screen, and the Alarm Detail screen for the active alarm.
- When the Back button is pressed, the previously displayed screen is displayed. This button can be pressed repeatedly until the Main Menu screen is displayed.

Changing Parameter Values

When a setting or changeable field is selected on the screen, the Enter button is pressed to enter edit mode. Once in edit mode, the Up and Down buttons are used to adjust the value. The Enter button is pressed to set the parameter to the selected value. If the user wants to cancel any changes to the parameter, the Back button can be pressed. When the Enter or Back button are pressed, the interface returns to navigation mode.


Menu Details

Three types of lines exist:

- Menu title, displayed in the first line as in Figure 29.
- Link (also called Jump) having an arrow (>) in the right of the line and used to link to the next menu.
- Parameters with a value or adjustable set point.

The first line visible on each display includes the menu title and the line number indicating which menu number you are on and the total number of menus. In the above menu screen, the title is Cir 1 Data and it is menu 1 of 22.

Figure 29: Example Menu Screen

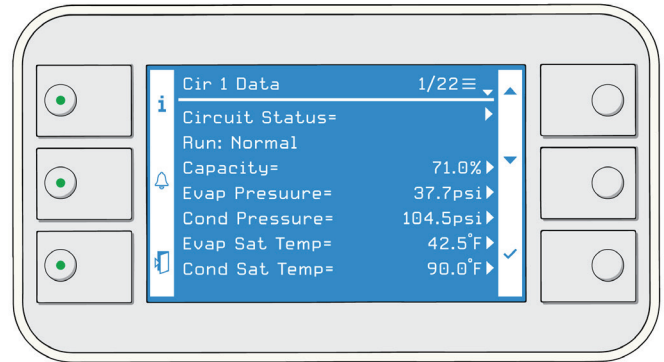


The right most position of the title line includes an “up” arrow ▲ to indicate there are menus (parameters) “above” the currently displayed line; and/or a “down” arrow ▼ to indicate there are menus “below” the currently displayed items or an “up/down” arrow to indicate there are lines “above and below” the currently displayed line.

Each line on a screen can contain status-only information or include changeable data fields (set points) and becomes highlighted when the cursor is on that line. A line in a menu may also be a link to further menus. An arrow is displayed to the far right of the line to indicate it is a “jump” line, meaning pushing the bottom right checkmark button will cause a “jump” to a new menu.

Passwords

Figure 30: Password screen

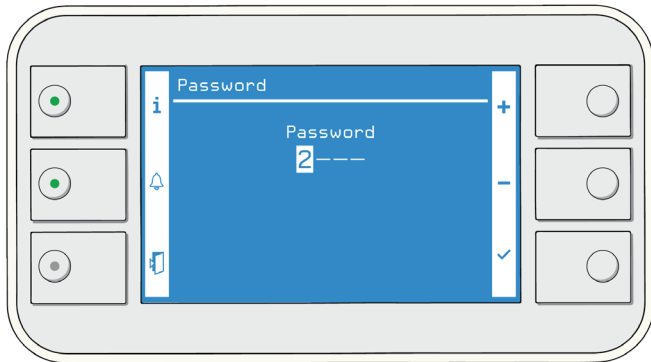

When the HMI is first accessed or if the HMI has been idle for longer than the Password Timeout (default 30 minutes), the display will show a “startup” page where a password is entered or continue without entering a password. Once a valid password is entered or if continuing without a password, the display changes to the Main Menu. There are 4 levels of access for the user interface:

- No password
- Operator level - 5321
- Technician/Manager level - Provided at startup
- Daikin Applied service technician level

Read/write access to unit setpoints is dependent upon the entered password level. Continuing without a password allows access only to the Main Menu with read only capability to basic status items. The Operator password allows access to more status information as well as read/write access to basic set points required to set up the unit for “normal” operation. The Technician/Manager password allows similar access to Operator with the addition of more advanced status and commissioning set points. The Daikin Applied service technician has the highest level of access.

Maintenance

NOTICE

Installation and maintenance are to be performed only by qualified personnel who are familiar with local codes and regulations, and experienced with this type of equipment.

DANGER

LOCKOUT/TAGOUT all power sources prior to starting, pressurizing, de-pressurizing, or powering down the Chiller. Failure to follow this warning exactly can result in serious injury or death. Be sure to read and understand the installation, operation, and service instructions within this manual.

Pre-Startup

Inspect the chiller to ensure no components became loose or damaged during shipping or installation including leak test and wiring check. Complete the pre-start checklist at the front of this manual and return to Daikin Applied prior to startup date.

NOTICE

Daikin Applied service personnel or factory authorized service agency must perform initial startup in order to activate warranty. Return the "WWV Screw Compressor Equipment Warranty Form" within 10 working days to Daikin Applied as instructed on the form to obtain full warranty benefits.

CAUTION

Most relays and terminals in unit control center are powered when S1 is closed and control circuit disconnect is on. Therefore, do not close S1 until ready for startup or unit may start unintentionally and possibly cause equipment damage.

Before powering the machine and thus starting the compressors, open all valves that were closed at the factory for shipping. The valves to be opened are:


1. Valve (optional) installed on the compressor line
2. Oil return pipe shutoff valves (jet pump). These valves are positioned below the evaporator sleeve in the vicinity of the jet pump.
3. Liquid line valve installed under the condenser.
4. Oil valves installed on the line that feeds the compressor lubrication system. This line comes from the bottom of the oil separator located inside the condenser.
5. Valve (optional) installed on the compressor pump line.

Flow Switch Installation and Calibration

A thermal dispersion flow switch uses heat to determine flow and therefore must be calibrated during system startup. A thermal dispersion flow switch can be an acceptable replacement for paddle type flow switches and differential pressure switches, but care must be taken regarding wiring.

The thermal dispersion flow switch supplied by Daikin Applied, shown in Figure 1, comes as a two part unit consisting of a flow switch and an adapter labeled E40242 by the supplier.

Figure 31: Thermal Dispersion Flow Switch and Adapter

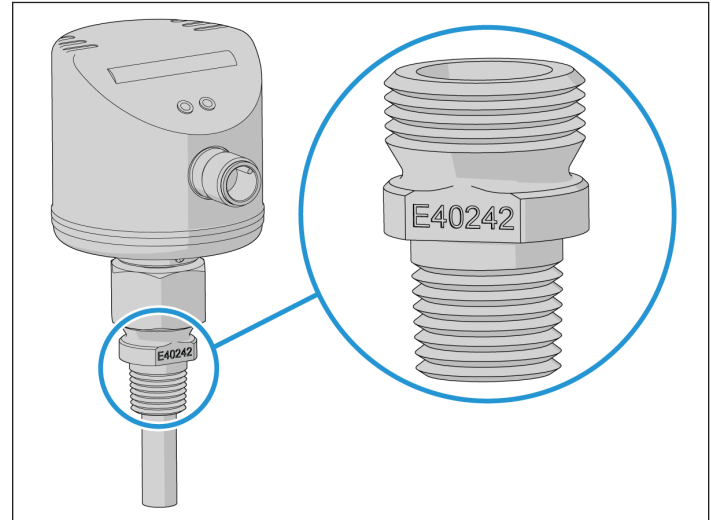


NOTICE

Flow switch MUST be calibrated before chiller operation. Failure to properly calibrate the switch may result in severe chiller damage and/or void warranty.

Mounting

Figure 32 highlights the position of the electrical connector and indentation 'mark' on flow switch.

Figure 32: Flow Switch Details

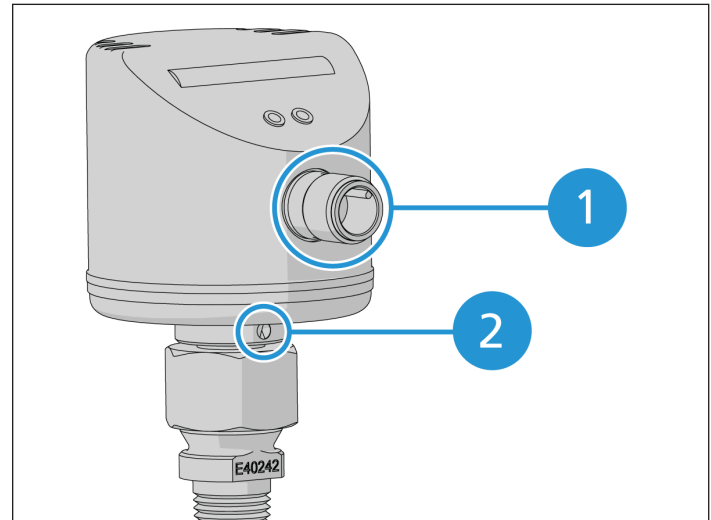


No.	Descriptions
1	Electrical Connector
2	Indentation

It is required that the flow switch be mounted such that the electrical connection and indentation 'mark' are pointed in the direction of flow as shown in **Figure 33**.

If the flow sensor is to be mounted away from the unit, the sensor should be mounted on the wall of the outlet pipe of evaporator and condenser, or in a run of straight pipe that allows 5 to 10 pipe diameters prior to the sensor and 3 to 5 pipe diameters of straight pipe after the sensor. Flow switch is placed in outlet pipe to reflect flow leaving the barrel. If installation on the inlet pipe is necessary, contact Chiller Technical Response at TechResponse@DaikinApplied.com to review the jobsite details.

Figure 33: Mount in Direction of Flow

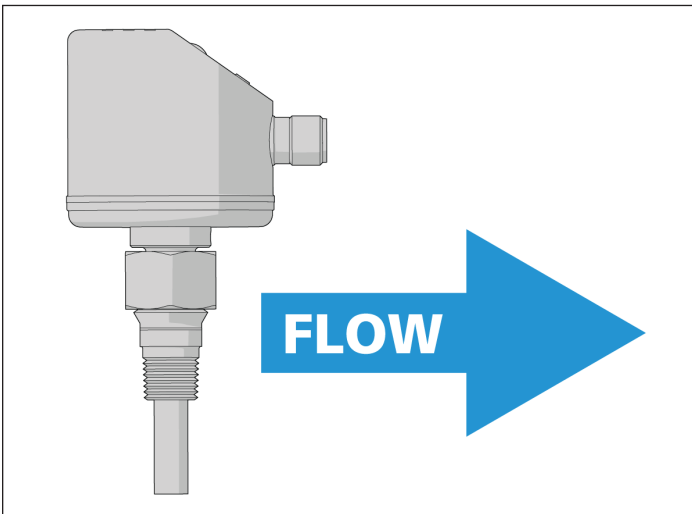

It is important that the flow switch be mounted so that the probe is sufficiently inserted into the fluid stream. **Figure 34** illustrates the recommended orientation of the sensor. It may not be mounted directly on top or directly on the bottom of a horizontal pipe.

NOTICE	
DO NOT alter or relocate factory installed flow switch. If issues exist, contact Chiller Technical Response at TechResponse@DaikinApplied.com .	

Figure 34: Remote Mounting Guidelines for Flow Switch

<p>General</p> <ul style="list-style-type: none"> The sensor tip is to be completely surrounded by the medium. Insertion depth of the sensor: minimum .47" in. 		
<p>Recommended</p> <ul style="list-style-type: none"> For horizontal pipes: mounting from the side. For vertical pipes: mounting in the rising pipe. 		
<p>To avoid</p> <ul style="list-style-type: none"> The sensor tip must not be in contact with the pipe wall. Do not mount in downpipes that are open at the bottom! 		

If needed, the adapter is threaded into the pipe using pipe sealant appropriate for the application. The flow sensor is mounted onto the adapter using silicone grease. Carefully apply lubricant to the inside threads and O-ring so temperature probe does not become coated with lubricant. Torque the adapter/sensor connection to 18.5 ft/lbs.

Wiring

Refer to wiring diagram in the unit control panel.

Either AC or DC is used to power the flow switch. The unit controller's digital input is a DC signal which is supplied through the switch output of the flow switch for flow indication. It is required that the AC and DC commons of power be separated. Contact Chiller Technical Response for alternate wiring scenarios.

Flow Switch Setup

The flow switch comes from the factory set at a default velocity of 20 cm/s. This value is typically well below the minimum water flow specified for the unit evaporator and condenser so field adjustment is required for adequate low flow protection. **Table 31** shows the calculated gallons per minute (gpm) for Schedule 40 steel pipe for various fluid velocities from 20 cm/s to 300 cm/s. The flow switch has an overall range of adjustment from 3 cm/s to 300 cm/s.

Step 1: Adjust flow through the evaporator to the minimum desired operating gpm. Maintain this flow throughout the setup procedure.

Step 2: Once steady state minimum desired operating flow is obtained, perform the 'Teach' function on the flow switch. The 'Teach' function is initiated by holding down the minus '-' button on the face of the flow switch for 15 seconds. During this 15 second period, LEDs '0' and '9' will be lit green. Once the 'Teach' function is completed, the outer LEDs will flash green as shown in **Figure 35**.

Figure 35: Automatic Teach of Setpoint


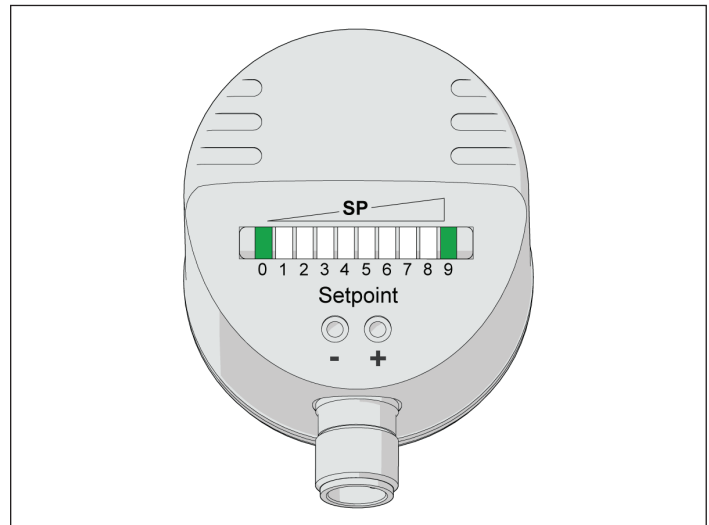


Table 31: Flow Volume Calculation

Pipe Size (inch)	Inside Pipe Diameter (inch)	US GPM at the velocities indicated below									GPM adjustment per '+' or '-' key input
		Default									
		20 cm/sec	30 cm/sec	50 cm/sec	75 cm/sec	100 cm/sec	150 cm/sec	200 cm/sec	250 cm/sec	300cm/sec	
2	2.06	6.86	10.3	17.2	25.7	34.3	51.5	68.6	85.8	102.9	1.72
2.5	2.46	9.79	14.7	24.5	36.7	49.0	73.4	97.9	122.4	146.9	2.42
3	3.07	15.1	22.7	37.8	56.7	75.6	113.4	151.2	189.0	226.8	3.78
3.5	3.55	20.2	30.3	50.6	75.8	101.1	151.7	202.2	252.8	303.3	5.06
4	4.03	26.0	39.1	65.1	97.7	130.2	195.3	260.4	325.5	390.5	6.51
5	5.05	40.9	61.4	102.3	153.5	204.6	306.9	409.2	511.5	613.7	10.2
6	6.07	59.1	88.6	147.7	221.6	295.5	443.2	590.9	738.7	886.3	14.8
8	7.98	102.3	153.5	255.8	383.7	511.6	767.5	1023.3	1279.1	1534.7	25.6
10	10.02	161.3	241.9	403.2	604.8	806.5	1209.7	1612.9	2016.2	2419.1	39.0
12	11.94	229.0	343.4	572.4	858.6	1144.7	1717.1	2289.5	2861.9	3433.8	57.2
14	13.13	276.8	415.2	692.0	1037.9	1383.9	2075.9	2767.8	3459.8	4151.3	69.2
16	15.00	361.5	542.2	903.6	1355.5	1807.3	2710.9	3614.6	4518.2	5421.2	90.4
18	16.88	457.5	686.3	1143.8	1715.7	2287.6	3431.4	4575.2	5719.0	6862.1	114.4
20	18.81	572.4	853.0	1421.6	2132.4	2843.2	4264.8	5686.4	7108.0	8528.6	142.2

Step 3: After the 'Teach' function is completed and the outer LEDs have flashed, the flow switch will indicate a new setpoint based upon the current flow which should still be at the steady state minimum desired operating flow. **Figure 36** shows a typical display for this condition. All LEDs to the left of the SP LED are lit green. The SP LED is lit RED (or may toggle amber) which indicates that the flow switch is OPEN. Typically, an increase in fluid flow between 15% to 30% above the 'Teach' function flow is required for the SP LED to turn AMBER and the flow switch to CLOSE indicating acceptable flow.


Figure 36: Teach Adjustment Complete

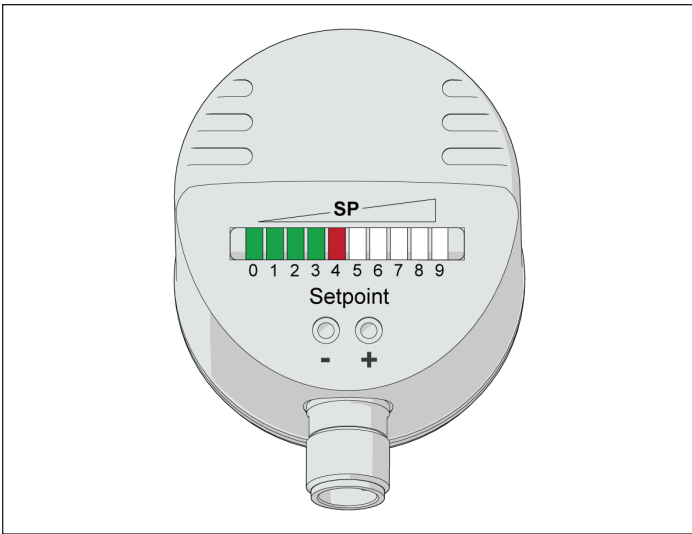

In Step 3, the 'Teach' function re-adjusted the flow switch SP while flow was at the minimum desired operating flow. The chiller will not operate at this flow because the flow switch is OPEN after performing the 'Teach' function. The benefit of the 'Teach' function is to quickly set the setpoint within the desired operating range. Additional 'manual' adjustment of setpoint is required in order to allow for chiller operation at this minimum flow. The '+' and '-' buttons on the face of the flow switch allow for the manual adjustment of the SP. Pressing the '+' button reduces the flow setpoint while pressing the '-' button increases the flow setpoint. Each button press, '+' or '-', changes the flow setpoint by 2.5 cm/s.

Step 4: Press the '+' button until LED '9' begins to flash, as shown in **Figure 37**. Opening of flow switch should now occur at approximately 80% to 90% of minimum flow.

Figure 37: Upper Range of Minimum Flow

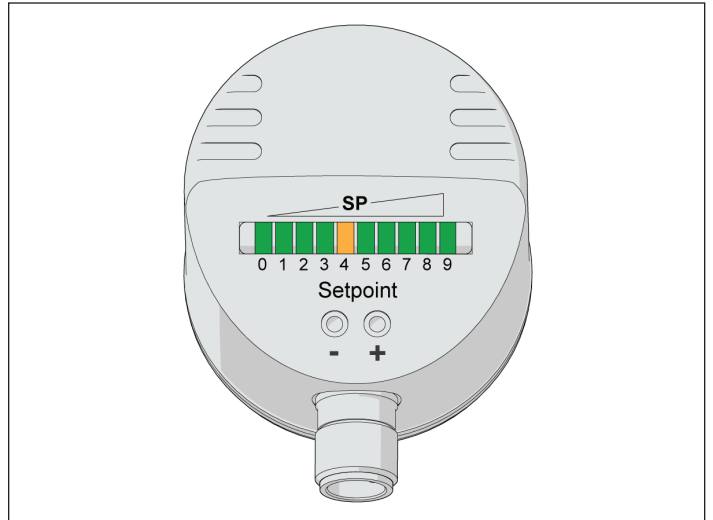


Step 5: Once the SP is set, it is recommended that the sensor be locked to avoid inadvertent readjustment. This can be performed by pressing both the '+' and '-' buttons simultaneously for 10 seconds. The indication goes out momentarily indicating the unit is locked. To unlock, the same procedure is performed to toggle to unlocked.

- NOTE:**
1. The LED window display on flow switch represents a velocity range of 50 cm/s. The window centers on the SP. For example, if the SP was set to 200 cm/s, then the LED labeled '0' would represent a velocity of 180 cm/s when lit and the LED labeled 9 would represent a velocity of 230 cm/s when lit.
 2. Each LED represents 5 cm/s, or two presses of the '+' or '-' buttons.
 3. When power is initially applied to the flow switch, all green LEDs light and go out step by step. During this time, the output is closed. The unit is in the operating mode.
 4. When making manual adjustments to the SP, if no button is pressed for two seconds, the unit returns to the operating mode with the newly set value.


Flow below display range: The SP LED will be lit red and the leftmost LED will be flashing green. For example, if the SP was set to 200 cm/s, the flashing labeled '0' would indicate that the flow was below 180 cm/s. This would be shown if no flow through chiller or lowered than desired flow.

Figure 38: Display for Flow Below Range

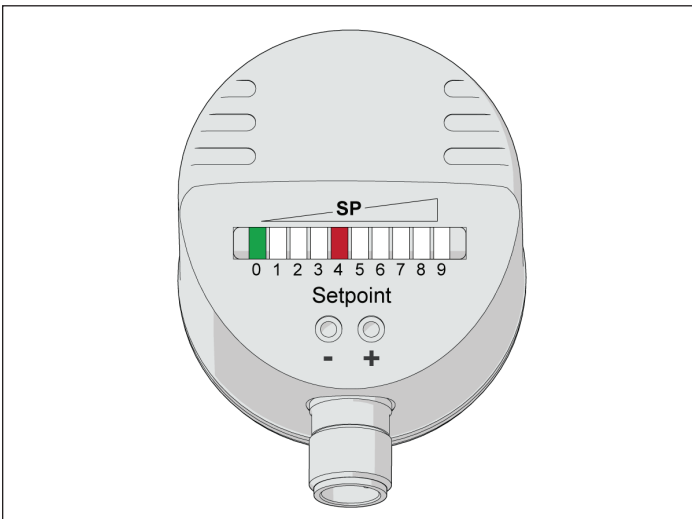

Flow above display range: The SP LED will be lit amber, all LEDs to the left and right of the SP LED will be green with the rightmost LED flashing green. For example, if the SP was set to 200 cm/s, the flashing LED labeled '9' would indicate that the flow was above 230 cm/s. This may be a normal display depending on range by which flow varies through chiller.

Figure 39: Display for Flow Above Range

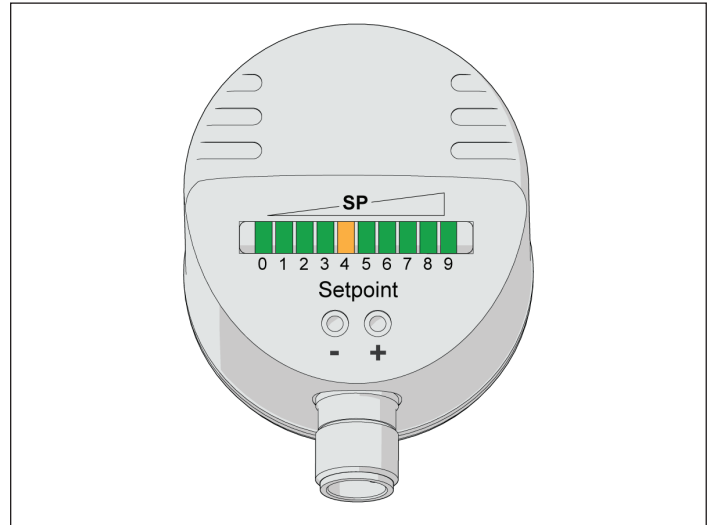

Startup

DANGER

Prevent lint, paper fibers, dust, metallic chips, or other foreign material from getting into the inverter or accumulating on VFD cooling outlets, the heat sink, circuit boards, control panels, or other electrical devices. Failure to do so may affect operation of the VFD, void warranty, result in a fire, unit damage, property damage, severe personal injury, or death. Frequently inspect area around inverter, heatsink, and other electrical devices to ensure they are free of foreign material.

NOTICE

Dyes used for refrigerant leak detection are not tested or recommended for use in Daikin Applied chillers. Use of these products may damage and/or degrade the performance of the equipment and will void the manufacturer warranty.

1. Double check that the discharge shutoff valve and the optional compressor suction butterfly valves are open.
2. Check that the manual liquid-line shutoff valves at the outlet of the subcooler coils are open.
3. Check the leaving chilled water temperature set point on the MicroTech unit controller to be sure it is set at the desired chilled water temperature.
4. Start the auxiliary equipment for the installation by turning on the time clock, and/or remote on/off switch, and chilled water pump.
5. Under the "Control Mode" menu of the keypad, place the unit into the automatic cool mode.

Temporary Shutdown

Move pumpdown switches Q1 and Q2 to the "Pumpdown and Stop" position. After the compressors have pumped down, turn off the chilled water pump.

CAUTION

Water flow to the unit must not be interrupted before the compressors pump down to avoid freeze-up in the evaporator. Interruption will cause equipment damage.

Startup After Temporary Shutdown

1. Start the chilled water pump.
2. With System switch Q0 in the "on" position, move pumpdown switches Q1 and Q2 to the "auto" position.
3. Observe the unit operation until the system has stabilized.

Extended (Seasonal) Shutdown

1. Move Q1 & Q2 switches to manual pumpdown position.
2. After the compressors have pumped down, turn off the chilled water pump.
3. Turn off all power to unit and to the chilled water pump.

4. Move the emergency stop switch S1 to the "off" position.
5. Close the compressor discharge valve and the optional compressor suction valve (if so equipped) as well as the liquid line shutoff valves.
6. Tag all opened compressor disconnect switches to warn against startup before opening the compressor suction valve and liquid line shutoff valves.

Startup After Extended (Seasonal) Shutdown

1. With all electrical disconnects locked and tagged out, check all screw or lug-type electrical connections to be sure they are tight for good electrical contact.
2. Check the voltage of the unit power supply and see that it is within the $\pm 10\%$ tolerance that is allowed. Voltage unbalance between phases must be within $\pm 2\%$.
3. See that all auxiliary control equipment is operative and that an adequate cooling load is available for startup.
4. Check all compressor flange connections for tightness to avoid refrigerant loss. Always replace valve seal caps.
5. Make sure system switch Q0 is in the "Stop" position. Turn compressor circuit breakers to "off" position until ready to start unit.
6. Open optional compressor suction butterfly as well as the liquid line shutoff valves, compressor discharge valves.
7. Vent the air from the evaporator water side as well as from the system piping. Open all water flow valves and start the chilled water pump. Check all piping for leaks and recheck for air in the system.
8. Set chilled water setpoint to the required temperature.
9. Under the "Control Mode" menu of the keypad, place the unit into the automatic cool mode.
10. Start the system by moving pumpdown switches to "auto" position.

General Maintenance

On initial startup and periodically during operation, it will be necessary to perform certain routine service checks. Among these are checking the liquid line sight glasses, and the compressor oil level sight glass. In addition, check the MicroTech unit controller temperature and pressure readings with gauges and thermometers to see that the unit has normal condensing and suction pressure and superheat and subcooling readings.

A Periodic Maintenance Log is located at the end of this manual. It is suggested that the log be copied and a report be completed on a regular basis. The log will serve as a useful tool for a service technician in the event service is required.

Initial startup date, vibration readings, and oil analysis information should be kept for reference base-line data.

If the service technician has determined that the refrigerant

charge has been contaminated, the charge should be recovered and tested for contaminants or noncondensables. Appropriate actions should be taken based on testing and Clean Air Act regulations.

Vibration Monitoring (Optional)

Vibration readings are often used as an indicator of a possible problem requiring maintenance. If vibration monitoring is part of the site PM program, the compressor can be checked with a vibration analyzer on an annual basis. When doing the annual testing, the load should be maintained as closely as possible to the load of the original test. The initial vibration analysis test provides a benchmark of the compressor, and when performed routinely, can give a warning of impending problems.

Lubrication

POE type oil is used for compressor lubrication. This type of oil is extremely hygroscopic which means it will quickly absorb moisture if exposed to air and form acids that can be harmful to the chiller. Avoid prolonged exposure of refrigerant to the atmosphere to prevent this problem.

CAUTION

POE oil must be handled carefully using proper protective equipment (gloves, eye protection, etc.). The oil must not come into contact with certain polymers (e.g. PVC) as it may absorb moisture from this material. Also, do not use oil or refrigerant additives to the system.

WARNING

Polyolester Oil, commonly known as POE oil is a synthetic oil used in many refrigeration systems, and is present in this Daikin Applied product. POE oil, if ever in contact with PVC/CPVC, will coat the inside wall of PVC/CPVC pipe causing environmental stress fractures. Although there is no PVC/CPVC piping in this product, please keep this in mind when selecting piping materials for your application, as system failure and property damage could result. Refer to the pipe manufacturer's recommendations to determine suitable applications of the pipe.

It is important that only the manufacturer's recommended oil be used. Acceptable POE oil types are:

- Emkarate RL 220H
- Icematic S68A (R-513A)

Oil charges given in Table 32 are guidelines only. The unit is properly charged with oil when the oil level is between the upper and lower sight glasses while the unit is running at full capacity. The lower sightglass is used to ensure there is a minimum amount of charge in the unit for running.

Figure 40: Sight Glasses - Condenser

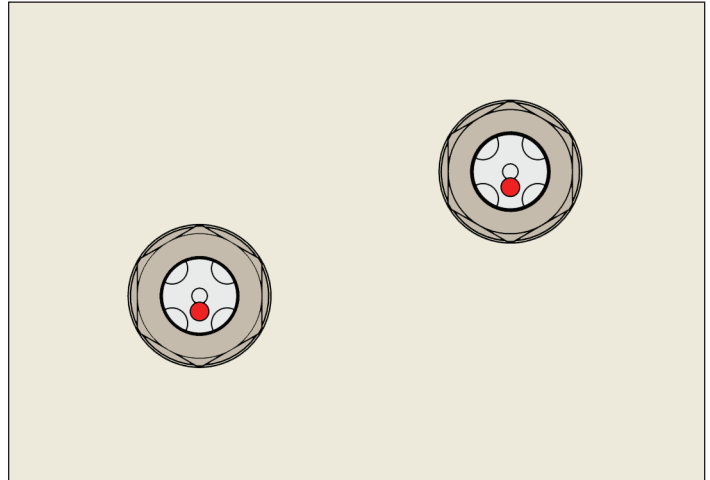



Table 32: Oil Charge Guideline

Unit Configuration Compressor/Evaporator/Condenser	Oil Charge (gal)
JNNS/E1610/C1810	6.5
JNNS/E1610/C2010	6.5
MNNS/E1610/C1810	6.5
MNNS/E1610/C2010	7.5
MNNS/E2010/C2010	7.5
MNNS/E2410/C2410	7.5
RNNS/E2010/C2010	7.5
RNNS/E2410/C2410	7.5

Oil Filter Removal and Renewal

Prior to this procedure, pump out the compressor. Isolate the electrical supply to the control panels and compressor motor terminal. Filter should be changed when pressure drop delta goes above the linear line in Figure 41.

Figure 41: Pressure Drop to Change Oil Filter

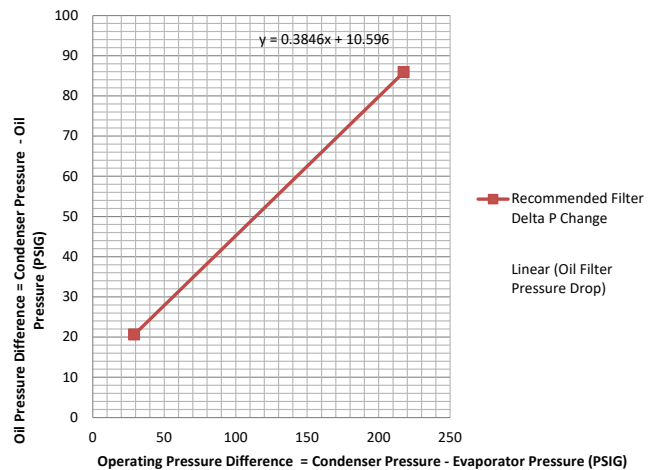

⚠ WARNING

After the compressor has been pumped down and isolated, the oil contained inside the filter housing will remain hot enough to cause burns for some time afterwards. Always allow sufficient time for the oil to cool down so that it is cool enough not to be a danger when drained off (less than 35°C [95°F] is recommended). Severe injury from burns can result.

Figure 42: Oil Filter Location


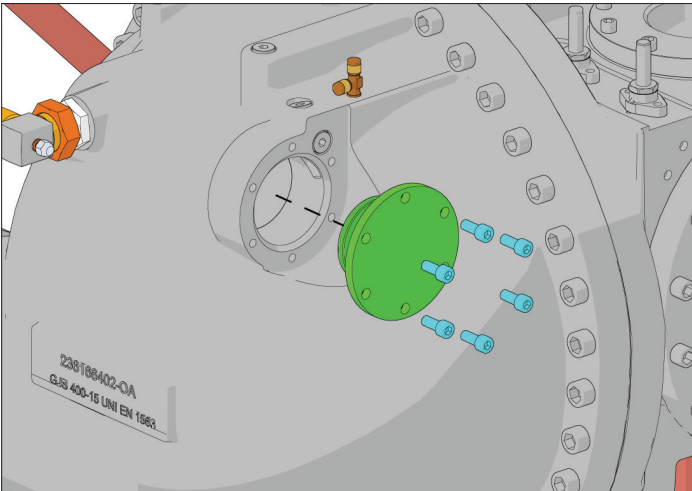


Figure 43: Oil Filter Housing Cover Plate

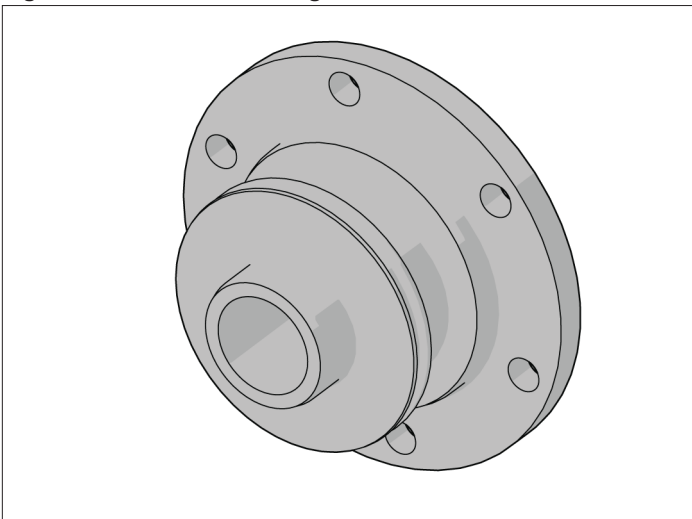

Oil filter assembly components are:

- Oil Filter – 250mm
- Oil Filter Housing Cover
- O-Ring – 89.5x3
- O-Ring – 76.1x3.4
- (6) M8 Bolts

Disassembly Procedure

1. Unscrew and remove two hex head side cover bolts 180° apart. Insert M8 guide studs into the vacant holes.
2. Remove remaining bolts and oil filter housing cover.
3. Pull the oil filter off of the spigot and withdraw the oil filter from the housing and clean the housing.
4. Clean oil filter housing cover plate and all other components.

Fitting a New Oil Filter Element – Reassembly

Before reassembly, remove any paint from joint faces. Inspect parts individually for damage and ensure they are completely clean before laying them out on a clean surface in a logical order ready for reassembly.

Use fresh refrigerant oil to lubricate parts during reassembly.

1. Install new O-rings on the oil filter housing cover.
2. Insert new oil filter into the housing, ensuring the filter sits tightly on the sealing spigot.
3. Replace the oil filter housing cover.
4. Evacuate air and non-condensibles before valving refrigerant back into the compressor.

Electrical Terminals

⚠ DANGER

Electric equipment can cause electric shock which will cause severe personal injury or death. Turn off, lock out and tag all power before continuing with following service. Panels can have more than one power source.

⚠ CAUTION

Periodically check electrical terminals for tightness and tighten as required. Always use a back-up wrench when tightening electrical terminals.

Liquid Line Sight Glass

Observe the refrigerant sight glasses weekly. A clear glass of liquid indicates that there is adequate refrigerant charge in the system to provide proper feed through the expansion valve.

Bubbling refrigerant in the sight glass, during stable run conditions, may indicate that there can be an electronic expansion valve (EXV) problem since the EXV regulates refrigerant flow. Refrigerant gas flashing in the sight glass could also indicate an excessive pressure drop in the liquid line, possibly due to a clogged filter-drier or a restriction elsewhere in the liquid line. At full load operating conditions, subcooling values will be approximately 7.2°F (4°C) and suction superheat values will be approximately 0.9°F (0.5°C).

An element inside the sight glass indicates the moisture condition corresponding to a given element color. If the sight glass does not indicate a dry condition after about 12 hours of operation, an oil acid test is recommended.

Do not use the sight glass on the EXV body for refrigerant charging. Its purpose is to view the position of the valve.

Pump Operation

It is highly recommended that the chiller unit control the chilled water pump(s). The integral chiller control system has the capability to selectively start pump A or B or automatically alternate pump selection at each start and also has pump standby operation capability.

Failure to have the chiller control the pumps may cause the following problems:

1. If any device, other than the chiller, should try to start the chiller without first starting the pumps, the chiller will lock out on the no-flow alarm and require a manual reset to restart. This can be disruptive to the normal cooling process.
2. In areas where freeze-up is a concern, the chiller control senses the chilled water temperature. It also signals the chilled water pump to start to providing flow through the evaporator and additional protection against evaporator and outside pipe freeze-up. Other pump starting methods will not automatically provide this protection. Note: the owner/operator must be aware that when the water temperature falls below freezing temperatures it is imperative NOT to stop the pump(s) as immediate freeze-up can occur.

This method of freeze protection is only effective as long as the facility and the chiller have power. The only positive freeze protection during power failures is to drain the evaporator and blow out each tube or add the appropriate concentration of glycol to the system.

Compressor VFD

Table 33: Compressor VFD Inspection Areas

Inspection Area	Inspection Points	Corrective Action
General	Inspect equipment for discoloration from overheating or deterioration.	Replace damaged equipment as required.
	Inspect for dirt, foreign particles, or dust collection on components	Inspect door seal if so equipped. Use dry air to clear foreign matter.
Conductors and Wiring	Inspect wiring and connections for discoloration, damage or heat stress.	Repair or replace damaged wire.
Terminals	Inspect terminals for loose, stripped, or damaged connections.	Tighten loose screws and replace damaged screws or terminals.
Relays and Contactors	Inspect contactors and relays for excessive noise during operation.	Check coil voltage for over or under voltage condition.
	Inspect coils for signs of overheating such as melted or cracked insulation.	Replace damaged removable relays, contactors or circuit board.

Figure 44: Planned Maintenance Schedule

Operation	Weekly	Monthly (Note 1)	Annual (Note 2)
General			
Complete unit log and review (Note 3)	X		
Inspect unit for loose or damaged components and visible leaks		X	
Inspect thermal insulation for integrity			X
Clean and paint as required			X
Electrical (* including the VFDs)			
Sequence test controls *			X
Check contactors for pitting, replace as required *			X
Check terminals for tightness, tighten as necessary (including compressor) *			X
Clean control panel interior *			X
Clean control box fan filter *	X		
Visually inspect components for signs of overheating (including compressor) *		X	
Refrigeration/Lubricant			
Leak test		X	
Check liquid line sight glasses for clear flow	X		
Check oil sight glass for correct level (lubricant charge)	X		
Perform compressor vibration test (optional)			X
Perform oil analysis test on compressor oil			X
Evaporator and Condenser (water-cooled)			
Confirm correct water flow and pressure drop		X	
Confirm appropriate water treatment		X	
Clean and Leak Test tubes			X
Clean Flow Sensor			X

- NOTE:**
- 1 Monthly operations include all weekly operations.
 - 2 Annual (or spring startup) operations include all weekly and monthly operations.
 - 3 Log readings can be taken daily for a higher level of unit observation.
 - 4 The weekly fan filter cleaning schedule can be modified to meet job conditions. It is important that the filter allows full air flow.

Appendix

Limited Product Warranty

**DAIKIN APPLIED AMERICAS INC.
LIMITED PRODUCT WARRANTY
(United States and Canada)**

WARRANTY

Daikin Applied Americas Inc. dba Daikin Applied (“Company”) warrants to contractor, purchaser and any owner of the product (collectively “Owner”) that, subject to the exclusions set forth below Company, at its option, will repair or replace defective parts in the event any product manufactured by Company, including products sold under the brand name Daikin and used in the United States or Canada, proves defective in material or workmanship within twelve (12) months from initial startup or eighteen (18) months from the date shipped by Company, whichever occurs first. Authorized replacement parts are warranted for the remainder of the original warranty. All shipments of such parts will be made FOB factory, freight prepaid and allowed. Company reserves the right to select carrier and method of shipment. In addition, Company provides labor to repair or replace warranty parts during Company normal working hours on products with rotary screw compressors or centrifugal compressors. Warranty labor is not provided for any other products.

Company must receive the Registration and Startup Forms for products containing motor compressors and/or furnaces within ten (10) days of original product startup, or the ship date and the startup date will be deemed the same for determining the commencement of the warranty period and this warranty shall expire twelve (12) months from that date. For additional consideration, Company will provide an extended warranty(ies) on certain products or components thereof. The terms of the extended warranty(ies) are shown on a separate extended warranty statement.

No person (including any agent, sales representative, dealer or distributor) has the authority to expand the Company’s obligation beyond the terms of this express warranty or to state that the performance of the product is other than that published by Company.

EXCLUSIONS

1. If free warranty labor is available as set forth above, such free labor does not include diagnostic visits, inspections, travel time and related expenses, or unusual access time or costs required by product location.
2. Refrigerants, fluids, oils and expendable items such as filters are not covered by this warranty.
3. This warranty shall not apply to products or parts : (a) that have been opened, disassembled, repaired, or altered, in each case by anyone other than Company or its authorized service representative; (b) that have been subjected to misuse, abuse, negligence, accidents, damage, or abnormal use or service; (c) that have not been properly maintained; (d) that have been operated or installed, or have had startup performed, in each case in a manner contrary to Company’s printed instructions; (e) that have been exposed, directly or indirectly, to a corrosive atmosphere or material such as, but not limited to, chlorine, fluorine, fertilizers, waste water, urine, rust, salt, sulfur, ozone, or other chemicals, contaminants, minerals, or corrosive agents; (f) that were manufactured or furnished by others and/or are not an integral part of a product manufactured by Company; or (g) for which Company has not been paid in full.
4. This warranty shall not apply to products with rotary screw compressors or centrifugal compressors if such products have not been started, or if such startup has not been performed, by a Daikin Applied or Company authorized service representative.

SOLE REMEDY AND LIMITATION OF LIABILITY

THIS WARRANTY CONSTITUTES THE SOLE WARRANTY MADE BY COMPANY. COMPANY’S LIABILITY TO OWNER AND OWNER’S SOLE REMEDY UNDER THIS WARRANTY SHALL NOT EXCEED THE LESSER OF: (i) THE COST OF REPAIRING OR REPLACING DEFECTIVE PRODUCTS; AND (ii) THE ORIGINAL PURCHASE PRICE ACTUALLY PAID FOR THE PRODUCTS. COMPANY MAKES NO REPRESENTATION OR WARRANTY, EXPRESS OR IMPLIED, REGARDING PREVENTION OF MOLD/MOULD, FUNGUS, BACTERIA, MICROBIAL GROWTH, OR ANY OTHER CONTAMINATES. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT AND UNDER NO CIRCUMSTANCE SHALL COMPANY BE LIABLE TO OWNER OR ANY THIRD PARTY FOR INCIDENTAL, INDIRECT, SPECIAL, CONTINGENT, CONSEQUENTIAL, DELAY OR LIQUIDATED DAMAGES FOR ANY REASON, ARISING FROM ANY CAUSE WHATSOEVER, WHETHER THE THEORY FOR RECOVERY IS BASED IN LAW OR IN EQUITY, OR IS UNDER A THEORY OF BREACH CONTRACT OR WARRANTY, NEGLIGENCE, STRICT LIABILITY, OR OTHERWISE. THE TERM “CONSEQUENTIAL DAMAGE” INCLUDES, WITHOUT LIMITATION, THOSE DAMAGES ARISING FROM BUSINESS INTERRUPTION OR ECONOMIC LOSS, SUCH AS LOSS OF ANTICIPATED PROFITS, REVENUE, PRODUCTION, USE, REPUTATION, DATA OR CROPS.

ASSISTANCE

To obtain assistance or information regarding this warranty, please contact your local sales representative or a Daikin Applied office.

Form No. 933-430285Y-01-A (11/2023)

Pre-Start Checklist

Must be completed, signed and provided to Daikin Applied at least 2 weeks prior to requested start date.

Job Name				
Installation Location				
Customer Order Number				
Model Number(s)				
G.O. Number(s)				
Chilled Water and Condenser Water for Water-cooled Chiller	Yes	No	N/A	Initials
Piping complete				
Water strainer(s) installed in piping per manual requirements				
Water System – flushed, filled, and vented; Water treatment in place				
Cooling tower flushed, filled, vented; Water treatment in place (if applicable)				
Pumps installed and operational (rotation checked, strainers installed and cleaned)				
Controls operational (3-way valves, face/bypass dampers, bypass valves, etc.)				
Water system operated and tested; flow meets unit design requirements				
Flow switch(es) - installed, wired, and calibrated				
Vent installed on evaporator				
Glycol at design % (if applicable)				
Electrical	Yes	No	N/A	Initials
Building controls operational				
*Power leads connected to power block or optional disconnect				
Power leads have been checked for proper phasing and voltage				
All interlock wiring complete and compliant with Daikin Applied specifications				
Power applied at least 24 hours before startup				
Oil heaters energized at least 24 hours before startup (not applicable for WWV models)				
Chiller components (EXV Sensors Transducers) installed and wired properly				
*Wiring complies with National Electrical Code and local codes (see notes)				
Remote EXV wired with shielded cable (if applicable)				
Miscellaneous	Yes	No	N/A	Initials
Unit control switches all off				
Remote Evaporator Piping factory reviewed and approved (if applicable)				
All refrigerant components/piping leak tested, evacuated and charged				
Thermometers, wells, gauges, control, etc., installed				
Minimum system load of 80% capacity available for testing/adjusting controls				
SiteLine™ cloud-connected controls included and needs to be commissioned				
Document Attached: Technical Data Sheet from Selection Software				
Document Attached: Final Order Acknowledgement				
Document Attached: Remote evaporator piping approval (if applicable)				
Notes: The most common problems delaying start-up and affecting unit reliability are:				
1. Field installed compressor motor power supply leads too small. Questions: Contact the local Daikin Applied sales representative*. State size, number and type of conductors and conduits installed:				
a. From Power supply to chiller _____				
2. Refer to NEC Article 430-22 (a)				
2. Remote Evaporator piping incomplete or incorrect. Provide approved piping diagrams.				
3. Items on this list incorrectly acknowledged may result in delayed start and extra expenses incurred for return trips.				

 
Contractor Representative

Signed: _____
 Name: _____
 Company: _____
 Date: _____
 Phone/Email: _____

Daikin Applied Sales Representative

Signed: _____
 Name: _____
 Company: _____
 Date: _____
 Phone/Email: _____





COMPLETE HVAC SYSTEM SOLUTIONS

SELF-CONTAINED | ROOFTOPS | COILS | CONDENSING UNITS
AIR HANDLERS | WATER-COOLED CHILLERS | AIR-COOLED CHILLERS
MODULAR CENTRAL PLANTS | SITELINE BUILDING CONTROLS
UNIT HEATERS | FAN COILS | AIR PURIFIERS | WATER SOURCE HEAT PUMPS
VARIABLE AIR VOLUME UNITS | UNIT VENTILATORS



13600 INDUSTRIAL PARK BLVD. | MINNEAPOLIS, MN 55441
1-800-432-1342 | 763-553-5330

LEARN MORE AT
DAIKINAPPLIED.COM

PART NUMBER: IOM1264-4

© 2024 DAIKIN APPLIED | (800) 432.1342 | WWW.DAIKINAPPLIED.COM