
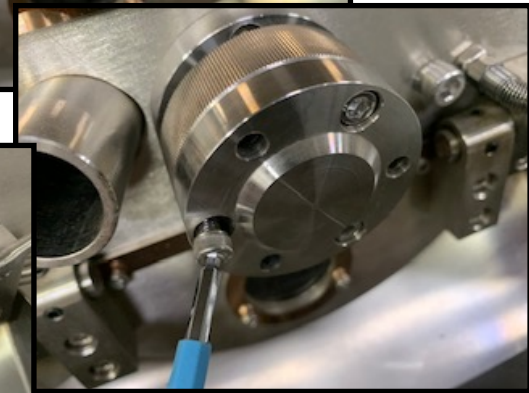




FIXING AN ISSUE WHERE CLIENT REMOVED SET SCREWS FROM NEW 2023-24 BEARING HOLDER

The new type bearing holders are designed in the rare event that your drum needs realigned you can do so easily by loosening (Never Removing) the 3 small inset set screws. If by mistake you fail to follow the guidelines and you remove one or more setscrews then follow this set of instructions to fix your mistake

1. Using a metric HEX KEY remove the front cover of the bearing holder (The 3 screws are the type with the visible heads on them)

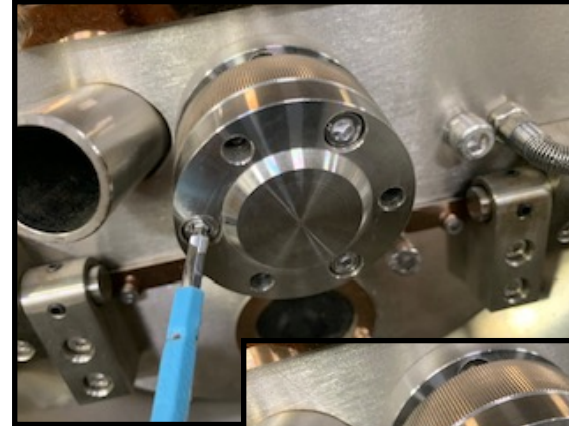

2. Once front cover is off you will see where the holes are where you took out set screws and reinsert them and screw them in all the way until just tight:

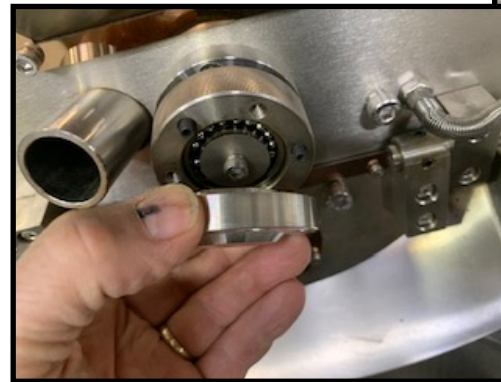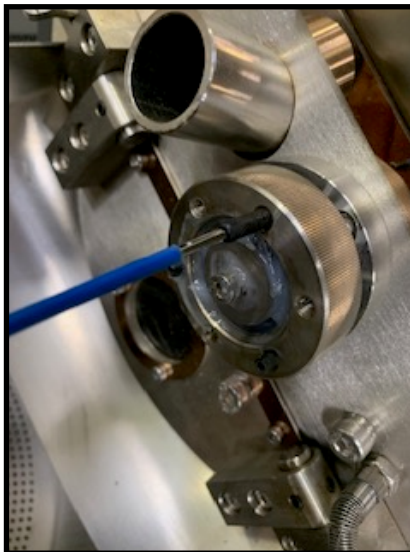

3. Once you have screwed all the set screws into place FIT the cover back over holder and insert the 3 screws that holds cover into place and hand tighten

TIP: NEVER REMOVE SET SCREWS AGAIN

