

Overview

The rider clear timer is adjustable by pressing the calibrate mode button located on the right side of the traffic light panel. The green light will flash then remain on to indicate that the system is in the calibrate mode. The system will wait for a rider to be dispatched and indicate when they have reached the bottom of the slide (RED light on). The system then waits for you to press the calibrate button once again, which sets the ride clear timer. Once the timer has been set, the green light will flash once for each second that the timer is set at. The system then will go back to the normal run mode.

NOTE: Super bright LED traffic lights are used. However there may be too much sunlight for even the brightest lights. If this situation occurs simply construct a shroud over the traffic light.

On power up, Run mode starts with the traffic light RED and all timers reset. After a 5 second delay, to allow the sensors to stabilize, the traffic light turns to GREEN and the cycle is ready to start.

- After a rider passes the top sensor, the traffic light switches to RED.
- After the rider passes the bottom sensor, the RIDER CLEAR TIMER starts.
- After the RIDER CLEAR TIMER times out, the traffic light turns GREEN, releasing the next rider.

Mounting the sensors




The entrance sensor should be mounted far enough down the slide so that a rider does not activate the sensor while waiting in the staging area. On a tube slide, the sensor can be mounted so that it points into the tube. They should also be mounted facing away from the prevailing angle of the sun because they are infra-red sensors. Sensors must be mounted at a slight angle to the water.



Verify Installation: Once the system is installed, POWER ON THE SENSORS AND CHECK THAT ALL RIDERS ARE PICKED UP (LED comes on). If needed the sensitivity range may be adjusted. (See manufacturer's instructions included). Sensing range is 8" to 80". Adjust the range so that the riders are picked up but not the water. There is a delay adjustment that we set before shipping, to eliminate splashing water from triggering the sensor.

After verifying where to install the sensors, drill mounting holes and bolt in place.

Mounting the traffic light


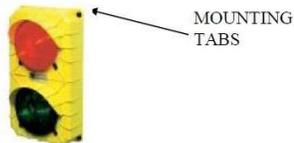


Mount the traffic light using the MOUNTING TABS (feet). Please note that drilling additional mounting holes into the enclosure will compromise the integrity of the water-proof seal. All wiring cable glands or conduit must be run to the bottom of the enclosure. Remove the green LED light to expose the wiring terminals. Wire according to the diagram shown below.



Wiring

Run the ac supply to the right side of the main enclosure (line to L, and neutral to N). Total current draw is less than 1 AMP.

 Run wiring to the sensors and to the control panel (following the terminal designations). Use minimum 20 gauge wire for all wiring. Color coded jacketed cable works best. Requires: 2 conductors for power, 3 conductors for the sensors and the traffic light. At distances of more than 500 feet, use 18 gauge wire.

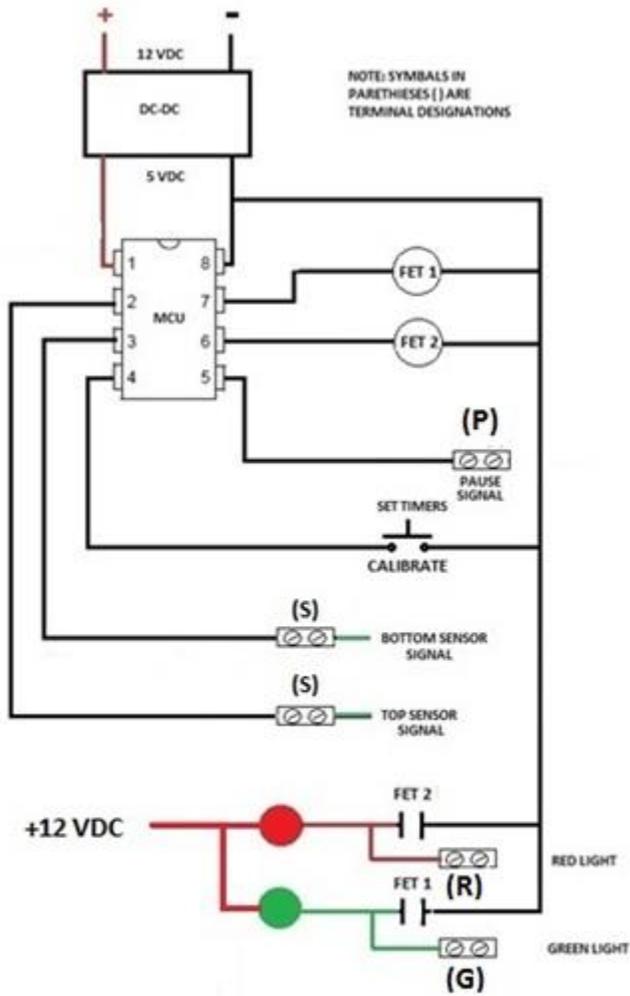

NOTE: SYMBOLS IN PARETHIESES () ARE TERMINAL DESIGNATIONS

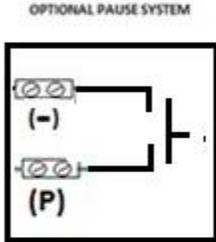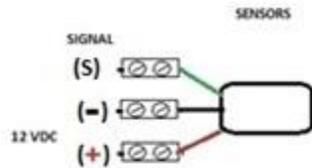

TROUBLE SHOOTING

PROBLEM	SOLUTION
NO TRAFFIC LIGHTS	CHECK AC INPUT TO POWER SUPPLY
	CHECK FOR 12 VDC OUTPUT FROM POWER SUPPLY
	CHECK FOR 5 VDC OUTPUT FROM DC-DC CONVERTER ON PCB
	CHECK WIRING CONNECTIONS
SYSTEM NOT CHANGING TRAFFIC LIGHTS	CHECK FOR 12 VDC SUPPLY TO SENSORS
	CHECK SENSORS ARE BEING TRIGGERED AND ADJUST IF NEEDED

Warranty

This EZ People Counters product has a warranty against defects in material and workmanship for a period of 90 days from the date of shipment. NOTE: There is a 3 year manufacturer warranty on the LED traffic light and 1 year on the Banner sensors. During the warranty period, EZ People Counters, will at its option, either repair or replace products that prove to be defective. This warranty is extended to the original purchaser of the equipment only.

For warranty service or repair, the product must be properly packaged and returned to EZ People Counters. The purchaser shall prepay all charges for shipping to EZ People Counters and EZ People Counters will pay the shipping charges to return the product to the purchaser as long as the product is shipped within the United States. If the product is shipped outside the United States, the purchaser shall pay all shipping charges, duties and taxes.

Limitation

The forgoing warranty shall not apply to defects or damage resulting from improper use or misuse, unauthorized repair, tampering, modification, improper connection, or operation outside the electrical or mechanical specifications of the product. The warranty does not cover acts of God, such as fire, flood, lightning etc. This warranty does not cover damage to property, equipment, direct or indirect consequential or incidental damage including damage for loss of business or business interruption arising out of misuse of this product.

Under no circumstances will the liability of EZ People Counters exceed the original purchase price of the product. No other warranty is expressed or implied. Some jurisdictions may not allow the exclusion of limitation of liability for consequential or incidental damage.

EZ People Counters

(888) 593-7225

www.ezpeoplecounters.com

© Copyright EZ-Aquamatic 2009