




## 1. OPTICAL CONNECTION

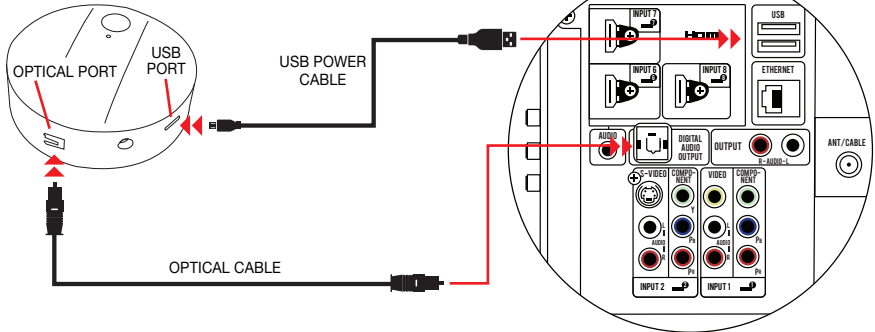

## 2. RCA CONNECTION

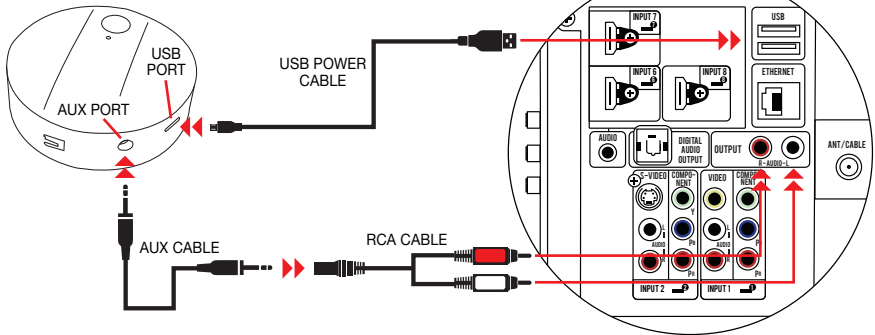

## 3. AUX CONNECTION

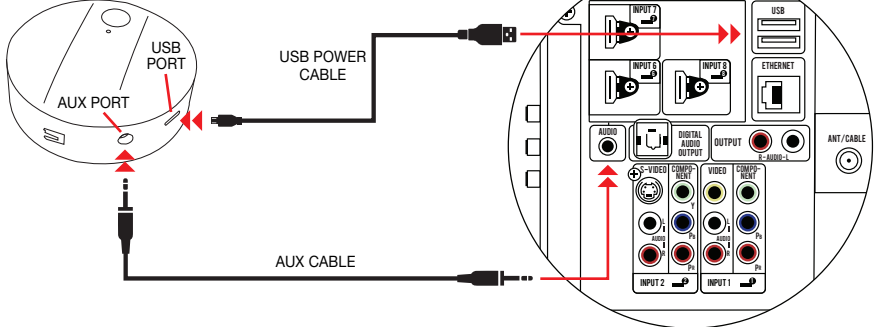



## STEP 1: CONNECTING THE TRANSMITTER

**A.) Power Source:** The transmitter can be powered using your TV's USB port. If your TV does not have a USB port, you can use any USB power source such as a 5V USB wall adapter like a cell phone charger (not included).

Use the included Micro-USB cord and plug the small end into the charge port on the transmitter and the USB end into the power source (USB port on TV or 5V wall adapter).

**B.) Audio Source:** Use the included Optical Cord and plug it into the Optical Port on the back of your TV. Plug the other end into the Optical Port on your transmitter.

If your TV does not have an Optical Port, or it is already in use, use the RCA adapter or AUX cable and plug it into your TV's audio output port and then into the Aux port on the transmitter.

The transmitter will automatically turn on. A solid blue LED will be visible on the top housing. If the LED is not visible press the power button on the transmitter.

## STEP 2: CONNECTING THE HEADPHONES

The headphones are pre-paired to the transmitter. Simply turn on your headphones by pressing the power button. The LED indicator will flash blue while it is locating the transmitter. Once the connection has been made the headphone LED will become solid blue.

If the LED indicator continues to flash blue, press and hold the scan buttons on BOTH the headphones and the transmitter until the LED indicator becomes solid blue.

## STEP 3: USE

Once the LED lights on the transmitter and headphone are solid blue the product is ready for use. **For best results, charge before first time use.** If you are using the optical or RCA cable sound will still be played through your TV's speakers as well as the headphones. If you wish to only hear sound through the headphones MUTE your TV. Use the volume buttons on the headphones to adjust when using the Optical or RCA cable. If using the AUX cable you will only hear sound through the headphones. When using the AUX output use your TV remote to adjust the volume.