Operating Your Remote Mast

- <u>Initial Setup</u>: Using the controller, run the stand to lowest height. Then using the manual adjustments adjust microphone for your shortest speaker. This allows for 12" of vertical adjustment for taller speakers.
- Stands are built with 12" of motorized travel.
 Take care to let off the switch when limit is reached. (Continuing to push the switch when the stand is at its lowest or highest limit will eventually damage the inner flexible coupling.)
- When moving the stand, take care not to grip it by this portion. Lifting by this portion can damage the inner coupling. Please handle by the area indicated on the stand.
- To minimize noise, adjust height before you turn on the microphone.
- If using our battery pack, make sure to switch to the ON position while charging.
- Please visit our FAQ page for more information.

