

# EZT-POST OPERATOR'S MANUAL

The logo features a large, stylized orange letter 'T' positioned to the left of the words 'EZ' and 'POST' in a bold, black, sans-serif font.

**EZTPOST.COM**



- **Faster Installation**
- **Less Physical Labor**
- **No Special Attachments**
- **Consistent T-Post Height**
- **Eliminates T-Post Bending or Buckling**
- **Made in the U.S.A.**



**PATENT PENDING**

## **SAFETY**

Do not operate or use the EZ-T-Post Installation Tool or the equipment used to push the T-Post into the ground while under the influence of alcohol, medication, and/or other substances or while fatigued.

Read and follow the Manufacturer's Operator Manual for the equipment used to exert the downward force for EZ-T-Post Installation Tool.

Keep hands, feet, and all body parts clear of all pinch points. Avoid exposure to possible pinch point hazards that exists between the following:

- The Top Plate and the equipment, such as the tractor front end loader bucket, used to push the T-Post in the ground
- The Top Plate and the T-Post
- The Stationary Holding Device and the T-Post
- The Bottom Plate and the earth/ground

Wear all OSHA required Personal Protective Equipment (PPE)

## **Maintenance**

Routinely inspect the EZ-T-Post Installation Tool to ensure it is in good operating condition.

Lubricate with oil or grease between the rotating latch and the bolt, flat washer and lock washer, and the drilled and tapped round bar.

Adjust the bolts and the flange bolts as required for ease of operation. After adjusting, lock the bolts and flange bolts in place by tightening the set screws against the bolts.

**Note:** See Figure #1 for illustration.

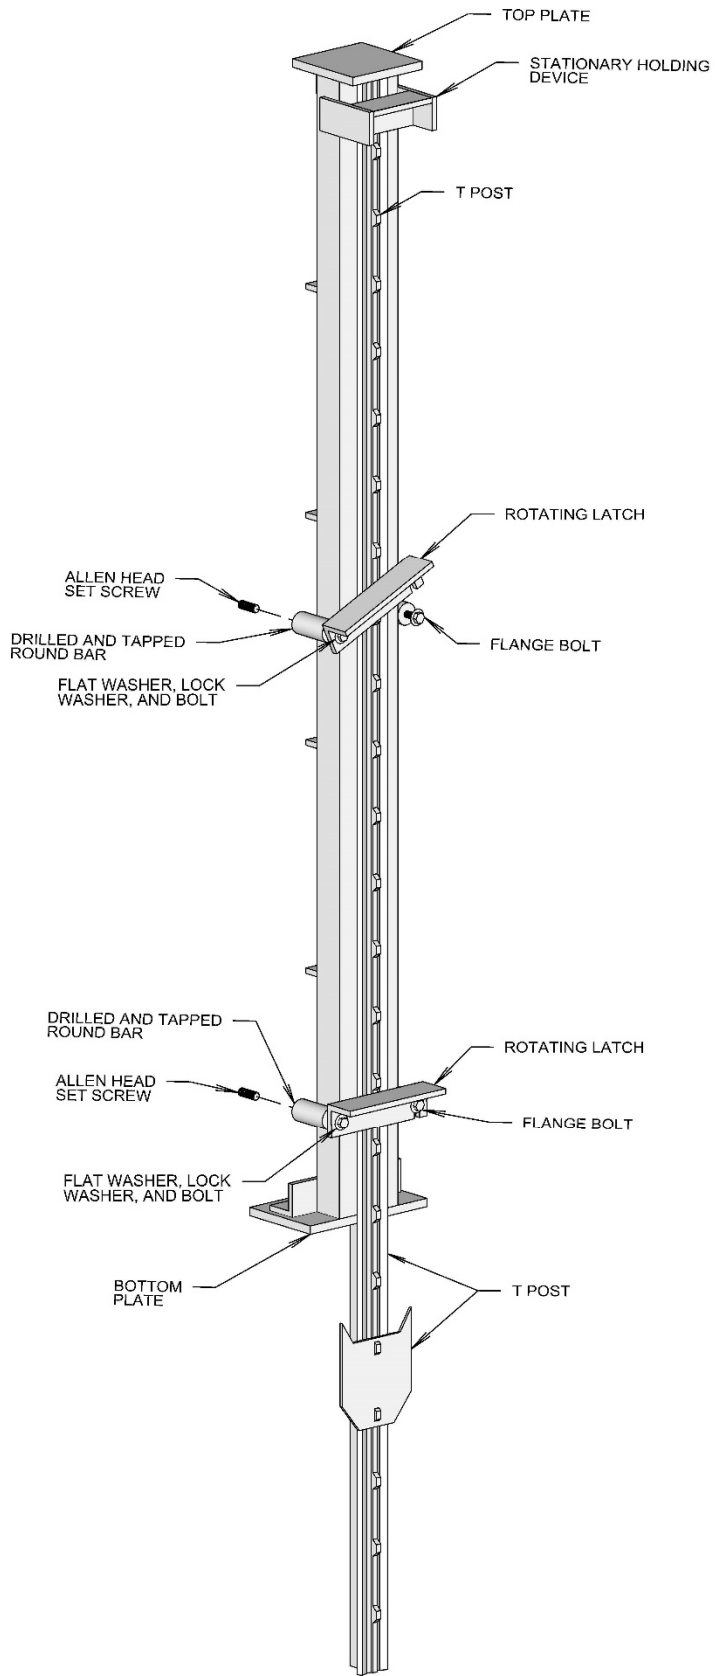


Figure 1

## OPERATING INSTRUCTIONS

### Step One



Place the T-Post in the EZ-T-Post Installation Tool just below the Stationary Holding Device. Slide the T-Post under the Stationary Holding Device until it comes in contact to the top plate as shown.

### Step Two



Close each rotating latch.

### Step 3



Place the EZ-T-Post Installation Tool and T-Post in the desired location with the bucket of the front-end loader resting on the top plate.

### Step 4



The tractor, with the front-end loader, begins pushing the EZ-T-Post Installation Tool, with the T-Post, in the ground.

### Step 5



The loader continues pushing the EZ-T-Post Installation Tool until the bottom plate comes in contact with the ground. The front-end loader is removed from contacting the top plate of the EZ-T-Post Installation Tool.

### Step 6



The tractor is backed away from the EZ-T-Post Installation Tool and the two rotating latches are opened. Lift the EZ-T-Post Installation Tool upward to clear the Stationary Holding Device and then separate the EZ-T-Post Installation Tool from the T-Post.