

TWO HANDED GREASE GUN

STEP 1:

Before removing cap on the cartridge, push the plunger on the underside of the cartridge until you feel resistance. Remove the cap and push again until ½” of grease exits the tip.

STEP 2:

Insert cartridge (with a ½” of grease still pushed up) and screw in to the grease gun. Push on the plunger again to ensure no air has escaped.

STEP 3:

Prime by completing 5-6 full pumps while still pressing the plunger, until a steady flow of grease exits the hose. The grease gun is now ready to use.

