

One Handed Grease Gun (Pistol Grip)

Step 1

Use new grease cartridge for priming. With the cap on, push up plunger until resistance is felt.




Step 2

Remove the cap.


Step 3

Push the plunger until 5-10ml of grease exits the cartridge.

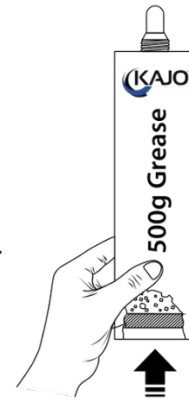

Step 4

Unscrew adapter half way (2-3 threads), but do not remove.

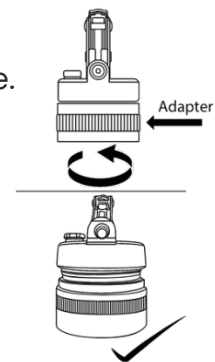


Step 5

While holding the adapter in this position, insert the cartridge with 5-10ml of grease exiting it and screw it in.




Step 6

Push the plunger with hand to fill internal adapter surface with grease.
(Plunger should move up 10–15ml)

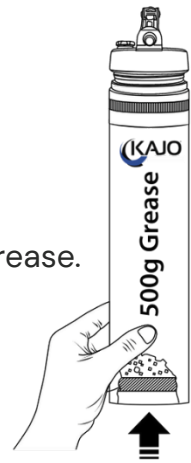

Step 7

Fully tighten the adapter to remove air.

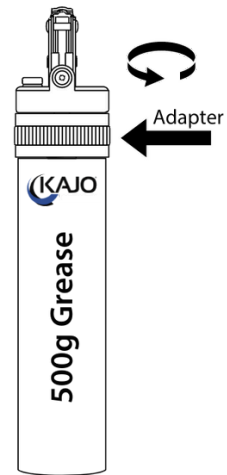

Step 8

Prime by completing 5–6 full pumps, while also pushing plunger. Gun is now ready for use. (Repeat steps 2–4 when changing cartridges.)

