



user manual

GENTOO

71-202 Cordless Sprayer

REV. 6/13/21

Warranty

StainOut System tools have been designed to give you years of superior performance. StainOut System warrants its tools to be free from defects in material or workmanship for one year from the original date of purchase.

During the one year warranty period, StainOut System will, at its discretion, repair or replace components which prove to be defective. The replacement of complete units due to defective components is not covered under this warranty. Costs for transportation or related service labor are not covered by this warranty. Parts and components which have been replaced are warranted only for the remainder of the original warranty period.

Defects resulting from misuse, abuse, lack of maintenance, unauthorized modification, chemical incompatibility, or exposure to freezing temperature conditions are not covered under this warranty. This warranty does not apply to wear parts and components which require replacement as a result of ordinary usage.

If you are in need of warranty service, contact your local distributor or StainOut System. If the tool must be returned to StainOut System or an authorized service center, the purchaser will be responsible for all shipping charges for the products returned for warranty service. No returned items will be accepted by StainOut System without prior authorization from StainOut System.

StainOut System makes no other warranty, either expressed or implied, with respect to this product. StainOut System is not liable for any direct, indirect, special, incidental or consequential damages. ■

Safety Information	4
Overview	5
Charging the Battery	7
Operation	8
Storage	9



Do not operate the Gentoo Cordless Sprayer if:

- You are not properly trained and authorized.
- If this unit is not in its proper operating condition.
- If you and the unit are in standing water.
- If you and the unit are in flammable or explosive areas.
- If the user's manual has not been read.

Before you operate the Gentoo Cordless Sprayer, check to see that all safety devices are in place and functioning properly.

While using the Gentoo Cordless Sprayer:

- Avoid handling the electrical plug with wet hands as stray electrocution may occur.
- Keep the electrical cord away from heated surfaces.
- Report machine damage or faulty operation immediately to your distributor.
- Follow mixing and handling instructions on chemical containers.
- Do not use flammable materials in this tank.
- Do not use solvent based chemicals in this tank.


There are no user serviceable parts in this unit.

Servicing of this machine should be performed by your local Distributor. ■

Please do not remove any of the labels on the back of the sprayer.

The labels contain important information including the serial number should servicing of the unit be required in the future.

Gentoo Sprayer Features

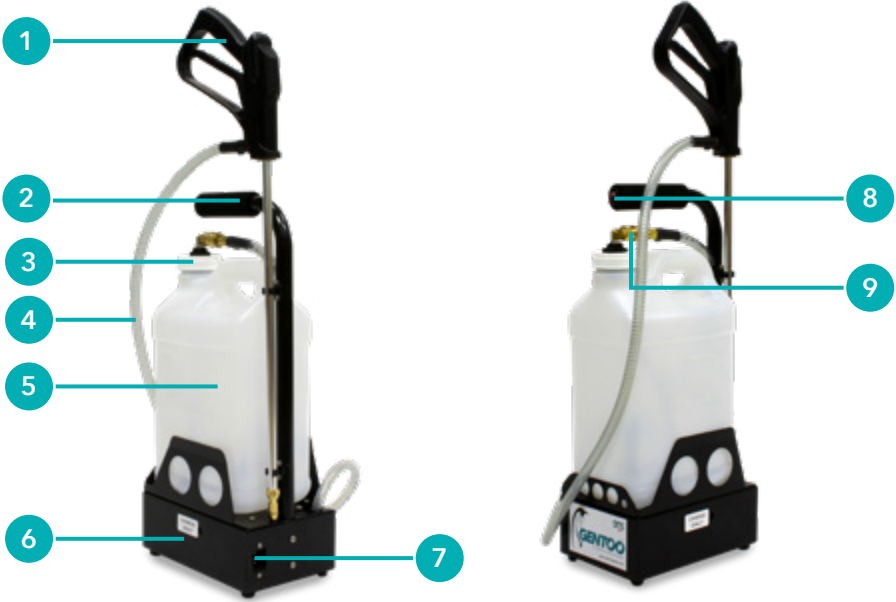

1. Spray Gun
2. Carrying Handle
3. Bottle Cap
4. Solution Hose
5. 2.5 Gallon Bottle

6. Base
7. Charging Cable Socket
8. Power Switch (on end of handle)
9. Bottle Connection Fitting

This Package Includes:



Gentoo Cordless Sprayer



Charging Cable

First time use - it is important to charge the Gentoo Cordless Sprayer prior to operating the unit.

The internal battery charger is a "SMART" charger. It will charge/recharge the battery without over-charging.

Plug in the electrical cord to a standard 120-VAC grounded outlet. Plug the other end of the cord to the charging cord socket at the side of the unit.



Red light means battery is charging.



Green light means battery is fully charged.



- For faster charging, make sure the power switch is in the OFF position.
- Charging may take up to 8 hours.
- It is OK to operate the unit while charging. Battery will charge while unit is in use.
- Please recharge the unit at the end of each day.

Before Operation

Fill The Bottle

Disconnect the bottle via the quick disconnect fitting. Lift the bottle up off of the base. Fill with water and/or cleaning/disinfecting solution.

Once filled, replace the cap with the quick disconnect fitting and return the bottle to the base. Re-connect the quick disconnect fitting.



Turn the power switch to the ON position.

You will hear the pump begin to run, as the pump pressure builds up and fills the hose, it will stop.

The pump will run when the trigger on the gun is pulled and stops when the trigger is released.



Turn the unit OFF when not in use to save the battery's charge for the next use.

Empty the unit at the end of each job, and make sure the bottle is cleaned out thoroughly.

Flush the unit with clean water. If mineral deposits are a problem, flush unit using Clear Lines weekly rinse by StainOut System.

It is important that the bottle and pump are clear of any chemical solution for any period of time that the Gentoo Cordless Sprayer is idle. This is necessary, since some solutions contain *d'Limonene* or a caustic material, which tends to deteriorate the pump.

In other cases, some diluted solutions tend to thicken when sitting for a period of time and may cause an obstruction.

If storing in freezing conditions, please make sure that the unit contains no water, including in the pump, internal lines, and re-coil hose.

Recharge the battery daily.



StainOut System

1611-A S. Melrose Dr. #207
Vista, CA 92081
(760) 224-9352