

INSTRUCTIONS

BALLCOCK REPAIR KITS

1. Before starting the repair, make sure you understand how to raise and lower water level in the tank.
2. Turn off water supply to toilet and then flush toilet.
3. Remove the top head assembly of the ballcock:
 - If it is a screw down head** – remove all screws, and lift off the head assembly
 - If it is a head with a retaining clip** – remove the clip, and twist off the head assembly.
 - If it is a head assembly only twists off** – push down and twist off the head assembly.
4. Clean the existing head assembly and reassemble with the new part in the kit.
5. Turn on water, allow the toilet to re-cycle and stop running. Adjust water level as needed.
6. **Note:** Often times you will have unneeded extra parts within the kit, do not be alarmed, they have been provided to repair look alike models that require slightly different parts.

*** REGISTERED/ NON REGISTERED TRADEMARK OR NAME OF THE MANUFACTURER WHICH ACCEPTS THIS PART. PLEASE DO NOT CONFUSE US WITH THEM**