

## NOTE:

This piston is assembled with 4 washers on it. If the piston assembly being replaced has 3 washers on it, please remove and discard the extra one.

INS-CST-8/8A