

INSTRUCTIONS

GENERAL INSTRUCTIONS FOR ALL MODELS

1. Turn off water supply to the faucet
2. Remove handle assembly by removing any caps, hold down screw and/or down bonnets, then slide out the retaining clip using a small screw driver and pliers.

 
FOR MODELS USING THIS INTERNAL CARTRIDGE:



SCREW PULLER TOOL INTO THE HANDLE SCREW HOLE - THEN:

- A. TURN HANDLE OF PULLER UNTIL THE TUBE TOUCHES THE FAUCET BODY. (DO NOT USE THE SEPARATE ADAPTER)
- B. APPLY PRESSURE BY TURNING THE PULLER HANDLE SLOWLY UNTIL THE CARTRIDGE BREAKS LOOSE FORM THE FAUCET BODY.
- C. TURN AND PULL TO REMOVE THE CARTRIDGE.

FOR TUB/SHOWER MODELS USING THIS INTERNAL CARTRIDGES



INSTALL THE BLACK BARBED ADAPTER BETWEEN THE BODY OF THE FAUCET AND THE PULLER, BARBED SIDE DOWN, AND SCREW PULLER TOOL INTO THE HANDLE SCREW HOLE- THEN:


- D. TURN HANDLE OF PULLER UNTIL THE TUBE TOUCHES THE FAUCET BODY. (DO NOT USE THE SEPARATE ADAPTER)
- E. APPLY PRESSURE BY TURNING THE PULLER HANDLE SLOWLY UNTIL THE CARTRIDGE BREAKS LOOSE FORM THE FAUCET BODY.
- F. TURN AND PULL TO REMOVE THE CARTRIDGE.

FOR MODELS USING THIS CARTRIDGE WHERE STEM AND CASING SEPARATE



1-4 AS BEFORE BUT ADD "DO NOT USE SEPARATE ADAPTER"

INS-TW-5-012606

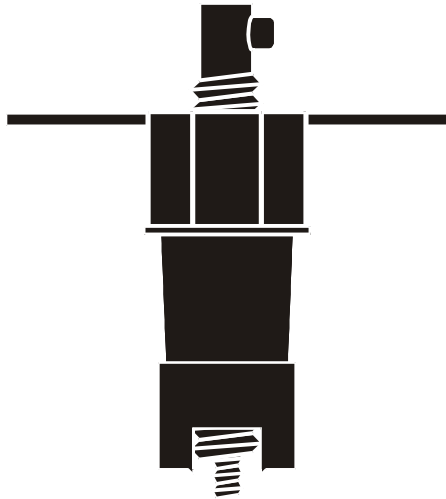

TW-5

INSTRUCTIONS

GENERAL INSTRUCTIONS FOR ALL MODELS

1. Turn off water supply to the faucet
2. Remove handle assembly by removing any caps, hold down screw and/or down bonnets, then slide out the retaining clip using a small screw driver and pliers.

 
FOR MODELS USING THIS INTERNAL CARTRIDGE:



SCREW PULLER TOOL INTO THE HANDLE SCREW HOLE - THEN:

- A. TURN HANDLE OF PULLER UNTIL THE TUBE TOUCHES THE FAUCET BODY. (DO NOT USE THE SEPARATE ADAPTER)
- B. APPLY PRESSURE BY TURNING THE PULLER HANDLE SLOWLY UNTIL THE CARTRIDGE BREAKS LOOSE FORM THE FAUCET BODY.
- C. TURN AND PULL TO REMOVE THE CARTRIDGE.


FOR TUB/SHOWER MODELS USING THIS INTERNAL CARTRIDGES



INSTALL THE BLACK BARBED ADAPTER BETWEEN THE BODY OF THE FAUCET AND THE PULLER, BARBED SIDE DOWN, AND SCREW PULLER TOOL INTO THE HANDLE SCREW HOLE- THEN:


- D. TURN HANDLE OF PULLER UNTIL THE TUBE TOUCHES THE FAUCET BODY. (DO NOT USE THE SEPARATE ADAPTER)
- E. APPLY PRESSURE BY TURNING THE PULLER HANDLE SLOWLY UNTIL THE CARTRIDGE BREAKS LOOSE FORM THE FAUCET BODY.
- F. TURN AND PULL TO REMOVE THE CARTRIDGE.

 FOR MODELS USING THIS CARTRIDGE WHERE STEM AND CASING SEPARATE



1-4 AS BEFORE BUT ADD "DO NOT USE SEPARATE ADAPTER"

INS-TW-5-012606

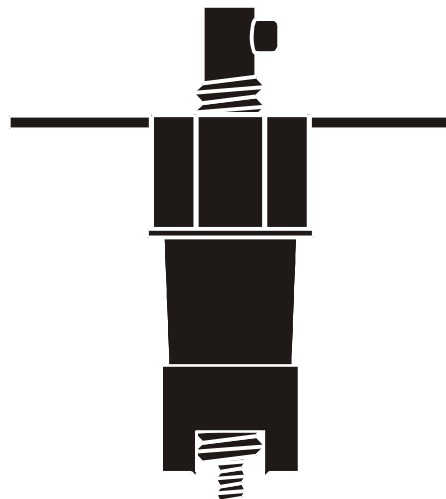

TW-5