

Part Number	NSN	Description
810		SC ELECTRONICS 28V POWER SUPPLY
7046		ACTUATOR ASSY
8118		ACTUATOR, MECHANICAL
8526		APU DOOR ACTUATOR
9813		BEARING-DISTANCE-HEADING INDICATOR
24454		FAN
30678		TORQUE ACTUATOR
106066		RADIO BEACON DISPENSER
159109		ALTIMETER -
180562		INDICATOR, BEARING-D
207285		VANEAXIAL FAN
331390	6130-01-216-0704	POWER SUPPLY, HIGH VOLTAGE
695225		ACTUATOR ASSY
695700		ROTARY ACTUATOR
700106	6130-01-431-9749	POWER SUPPLY, REV P
1009350		ROTARY ACTUATOR
1975052	6320-01-119-3935	INDICATOR, RUDDER ANGLE
1976181	6130-01-245-7588	POWER SUPPLY, SUBASSEMBLY, REV H
3158965	5841-00-900-8005	INDICATOR, HEIGHT
3503500		BODY, INDICATOR, LIGHT CAP
3515800	6625014613858	INDICATOR, DIGITAL DISPLAY
3561600		POWER MODULE - Replacement for 683R587G01
3563200		Lamp Assembly for 01-01050-005
3563235		LAMP ASSY
3577200		High Voltage Power Supply Assy (Replaces 331390)
3583700		Power Supply Assembly for Scalar RWR
3607900		Supply Unit
3611300		Isolation Test Box (ITB) for Raytheon Power Supply Unit
4011257	6220-14-376-0308	LIGHT, LANDING, AIRCRAFT
5053631		CENTRIFUGAL FAN
7900615	6625-01-461-3858	INDICATOR, DIGITAL DISPLAY
9698442		RETRACTABLE LANDING LIGHT
10244356		DIGITAL DISPLAY INDICATOR
11758500		FAN CENTRIFUGAL
13216043	1680-01-186-5061	POWER DIST PANEL ASSY
35124700		POWER SUPPLY SWITCHING 2.7 VOLT 500A
43323903		CONTROL PANEL
46984541		ALTIMETER

003400000/912974-001		POWER SUPPLY
01-01039-004	6130010224025	POWER SUPPLY SUBASSY
01-01048-006	6625-01-217-9664	CONTROL-INDICATOR
01-01557-003	5895-01-458-4177	RADIO CTRL FDDRC FD
01-01557-004	5895-01-458-4177	CONTROL INDICATOR
01-01557-006	5895-01-513-2041	FDDR/CONTROL-INDICATOR
01-P08002C001		CONTROL INDICATOR
01-P09283W003/LZS1500-3	6130-01-470-9835	POWER SUPPLY
01-P09986V004	5895-01-442-3737	AMPLIFIER-POWER SUPPLY AM7175
011-01020-00EX		AFCSP CONTROL PANEL
0158-457-50		CURRENT/LIGHT RE
02017004-3/11150	6220-01-589-9974	STROBE LIGHT ASSY
0207005-3		STROBE POWER UNIT
0283-2-2824-2		LENS LIGHT
03-04749-001	6130-01-319-3866	POWER SUPPLY AMP
030-0742-001		512 2 POWER BOARD
066-01171-3706	6610-01-527-2395	TCAS/VSI INDICATOR
07-342-4000	6130-01-303-0450	POWER SUPPLY
07-342-6000		POWER SUPPLY
07-342-6010	6130-01-265-8513	POWER SUPPLY
07-342-6030	6130-01-342-7707	POWER SUPPLY
07639/DSH1110-1	6120-01-440-5711	TRANSFORMER, POWER
07980-66505	5998-01-316-9978	CCA POWER CONTROL BOARD
08-00975-001	5950-01-045-6695	TRANSFORMER, POWER
080-20491-09		POWER SUPPLY ASSY
09004-125919-2	6130-01-516-8136	POWER SUPPLY
09004-128423/SPS-5312		POWER SUPPLY
09504/ON174124		LAMP
09855-67980		POWER SUPPLY ASSY
10-00933		ALTIMETER
10-01126-06	6130-01-207-2734	POWER SUPPLY
10-01126-07	6130-21-914-2914	POWER SUPPLY
10-0728-1	6220-01-020-6592	LIGHT,DOME
10-0728-3		LIGHT, DOME
10-0738-1		THRESHOLD LIGHT
10-0744-1		FIXTURE, LIGHTING
10-33420-03		POWER AMPLIFIER UNIT
10-4117-01		INDICATOR, TRIM
100 476688 001		INDICATOR (OPTG QTY 16)

1009350-2		ROTARY ACTUATOR
1015-2	6220-01-437-5659	CONTROL, LIGHT
10181-1140-02	6130-01-370-4150	POWER SUPPLY
10181-4000/RF-5022R/T	5820-01-370-6590	CONTROL, RADIO SET
103-384005-1		LIGHT ANNUNCIATOR PANEL
1033850-1/166190-5		INDICATOR PWR MODULAR
1034986-2/98124		POWER SUPPLY
1034986-2/981244-1		POWER SUPPLY
1035205-2		HV POWER SUPPLY
1035208-2		LV POWER SUPPLY
1035277-1/2		POWER SPLY, MTR
1036850-1/166190-5		POWER SUPPLY
104-384005-1		LIGHT ANNUNCIATOR PANEL
10450-3190		ALTIMETER, PRESSURE
10459800/PX7158		OPT POWER SUPPLY
107-103271-001		POWER SUPPLY
11-100-0134	6130-01-089-3565	POWER SUPPLY
11-16582		ALTIMETER-ENCODER -1000 to 20000
11-16583		ALTIMETER-ENCODER -1000 to 35000
11352-7040-01 (ALT PN: 9324341)	6130-01-077-8953	POWER SUPPLY
11352-7040-01/9324341	6130-01-077-8953	POWER SUPPLY
11472900(R)	5998-01-411-3054	SUPPLY
115000502P001/SPS-4066	6130-01-437-6509	POWER SUPPLY ASSEMBLY
11732-1/SP1503-50PI		AC TO DC POWER MODULE
11732-2		AC TO DC POWER MODULE
117B-1-S		POWER SUPPLY
122968-8	5841-01-063-8806	RADAR TARGET INDICATOR
124524-1	6130-01-007-0758	POWER SUPPLY E-3
124619-3	5895-01-211-3934	INDICATOR, PANORAMIC
124620-1		CONTROL, INDICATOR
126615-1	5826-01-194-2489	RADIO BEACON
129547-1		RADIO BEACON
129728-2-1	5930-01-254-6568	SENSOR, FAN TEMP
13075988-529		PANEL CONTROL, ELECTRICAL
13216043/99H360105-1	1680-01-186-5061	POWER DIST PANEL ASSY
134A689-5	6130-01-448-7523	POWER SUPPLY A5
136-065-001/H16FA	6130-01-235-4781	POWER SUPPLY
136832-1		RADIO BEACON DISPENSER

147B31		TEMPERATURE INDICATOR
147B31A		TEMPERATURE INDICATOR
147B31A3		TEMPERATURE INDICATOR
147B31B		TEMPERATURE INDICATOR
147B31C		TEMPERATURE INDICATOR
147B7		TEMPERATURE INDICATOR
147B7A		TEMPERATURE INDICATOR
147B8		TEMPERATURE INDICATOR
147BDL21		TEMPERATURE INDICATOR
152BL SERIES		TEMPERATURE INDICATOR
152BL702		TEMPERATURE INDICATOR
152CO71H01		LOW VOLTAGE POWER SUPPLY
152CO71H02		LOW VOLTAGE POWER SUPPLY
161126-01-01		POWER SUPPLY
162LDV4A	6685-01-037-0550	PRESSURE INDICATOR
1636-6A-B1	6610-00-190-1396	INDICATOR, VERTIC
1636-6M-B1	6610-00-190-1396	INDICATOR, VERTIC
164122-3/1035208-2		POWER SUPPLY LOW VOLT
16415-008	6220-01-417-1847	LIGHT, INDICATOR
16415-008	6220-01-417-1847	LIGHT, INDICATOR
166190-5/103685		POWER SUPPLY
166190-5/1036850-1		POWER SUPPLY
1669900-101		CONTROL INDICATOR
167097-3/135205-2		POWER SUPPLY LOW VOLT
167122-3/103520		LV POWER SUPPLY
167122-3/1035208-2		POWER SUPPLY LOW VOLT
16E1045-820	6110-01-072-2361	PANEL, POWER DISTRIBUTION
16E1046-807	6110-01-161-4580	POWER DISTRIBUTION PANEL
16E1046-815	6110-01-293-1555	POWER DISTRIBUTION PANEL
16E1081-803	6110-01-418-6589	PANEL, POWER DISTRIBUTION
16E1085-801	1680-01-051-0534	PANEL, POWER DI
16E1156-19	6110-01-074-9368	POWER DISTRIBUTION PANEL
16E1157-105		PANEL, POWER DISTRIBUTION
16E1363-747	6110-01-441-4110	PANEL, POWER, DISTRIBUTION
16E1363-755	6110-01-439-3125	PANEL, POWER DISTRIBUTION
16E2504-715		PANEL, POWER DISTRIBUTION
16E2504-869	6110-01-440-4999	POWER DISTRIBUTOR PANEL
16E2504-879	6110-01-222-3788	PANEL, POWER DISTRIBUTION
16E2505-813	6110-01-222-3789	PANEL, POWER DISTRIBUTION
16E2505-839	6110-01-440-4997	POWER PANEL DISTRIBUTION

16VE1066-1 (ALT PN:		
8ES455073-00)	6130-01-485-3871	POWER SUPPLY
16VH003003-4	1680-01-129-5207	POWER CONTROL ASSEMBLY
173885-01		COCKPIT CONTROL INDICATOR
173885-01 TO 173885-02		COCKPIT CONTROL INDICATOR
173885-01/-02	6610-01-447-2560	COCKPIT CONTROL INDICATOR
173885-02	6610-01-447-2560	INDICATOR, CONTROL G
17883-2/G292137-1		POWER SUPPLY ASSY
17885-1		POWER SUPPLY ASSEMBLY
17886-1		POWER SUPPLY ASSEMBLY
1903379-1		INDICATOR,FREEAIR
1955-1		HEIGHT INDICATOR
1976342/03956-1891082		CONTROL PANEL
1992545-4	6130-01-153-0555	POWER SUPPLY ASSEMBLY
1993100-3	6110-01-109-9026	PANEL, POWER DISTRIBUTION
1D18296G01		CONTROL PANEL
1D19218G01	5840-01-182-6451	CONTROL PANEL
1D26681G01		FAN ASSY
1D27004G01		POWER SPLITTER 1:12
1D27738G01	5998-01-326-8779	DELECTION/POWER CONTROL ASSY
200-1000-01	6130-01-360-4061	STROBE LIGHT POWER SUPPLY
200-1000-01		STROBE POWER UNIT
200-1001-01		POWER SUPPLY STROBE LIGHT
200-1002-01		NAVIGATION LIGHT
202-A2251-00		POWER SUPPLY
204-13479-5	5826-01-031-4978	CONTROL INDICATOR
204-14800-42	6130-01-169-6345	CONTROL, POWER SUPPLY
204-14820-11	6130-01-032-5339	POWER SUPPLY
13		POWER SUPPLY
204-17099-1	5895-01-219-1206	CONTROL-INDICATOR
204-17233-1	6625-01-246-5029	INDICATOR, FAULT LOCATING
204-18535-3	6130-01-006-2586	POWER SUPPLY
204-18993-4	5895-01-088-2319	PANEL, INDICATOR
204-40309-6		DOMELIGHT
204-52307-53	5995-01-025-3514	CABLE ASSEMBLY, RADIO FREQUENCY
207632-1		VANEAXIAL FAN
207727-1		VANEAXIAL FAN
2101272-4-2	1680-01-258-5608	POWER CONTROL ASSEMBLY, ELECTRICAL, AIRCRAFT
2101272-5-1	1680-01-213-0805	POWER CONTROL

2162515-001		CCA, LAMP
2170-4		INDICATOR VERTICAL
2211565-003	4920-01-250-5467	CONTROL PANEL
229-026255-10	1290-99-984-7192	PANEL, CONTROL
229-065322-100	5963-37-A27-5868	POWER SUPPLY MODULE
229A460-1		POWER CONTROL PANEL
229A460-1		POWER CONTROL PANEL
2311M-69-1		WIPER MOTOR
2311M-69-2		WIPER MOTOR
2311M-69-3		WIPER MOTOR
2311M-69-4		WIPER MOTOR
2311M-69-5		WIPER MOTOR
2311M-69-6		WIPER MOTOR
2312M30		WIPER MOTOR
2312M30-1		WIPER MOTOR
231364-202		LOW VOLTAGE POWER SUPPLY
180		POWER SUPPLY
244-420141-000		POWER SUPPLY
258-420211-000		ILLUMINATED INDICATOR ASSY
260257-1	6130-01-516-8146	A/D POWER SUPPLY
260920-1		CONTROL PANEL
268-086-002	6680-01-238-1174	INDICATOR
269-1000031-002		POWER SUPPLY
269-1000052-001		POWER SUPPLY
269-100024-001	6130-01-089-4959	POWER SUPPLY
269-100029-003		POWER SUPPLY
269-100029-004		POWER SUPPLY
269-100031-001	6130-01-095-1196	POWER SUPPLY
269-100031-002		POWER SUPPLY
269-100031/MM44-1331/115		150 AMP POWER SUPPLY
E0675/115		POWER SUPPLY
270-0287-040	6130-01-010-3982	POWER SUPPLY
270-0736-020	6130-01-345-9712	POWER SUPPLY
270-2695-020	5895-01-504-8373	AMPLIFIER-POWER SUPPLY
276-2323-003		INDICATOR LIGHT ASSY
276-5325-002		INDICATOR LIGHT ASSY
276-5326-002		INDICATOR LIGHT ASSY
28237-001		RIGHT GLARESHIELD WARN LIGHT
28D55-0-4		POWER SUPPLY, 28V/1500
29200-99	5841-01-096-3945	RADAR INDICATOR

30-1951-1		RECOGNITION LIGHT
30-231		SMOKE DETECTOR
30-231-3		SMOKE DETECTOR
30-23506-02		POWER SUPPLY
30-303-7		CONTROL AMPLIFIER
30-303-7A		CONTROL AMPLIFIER
30-326-13		CONTROL AMPLIFIER
30-38395-01		POWER SUPPLY
30-39860-02		POWER SUPPLY
30-50683-01	6130-01-232-9598	POWER SUPPLY
3000 / 9018869-1		POWER SUPPLY
305-0087-002/1900.1701		HPA, POWER SUPPLY SECTION
3061262-1		POWER SUPPLY SUB
30678-17		TORQUE ACTUATOR
30678-18		TORQUE ACTUATOR
3081355-2	6130-01-232-9115	POWER SUPPLY SUBASSEMBLY
31-054234-01	5895-01-049-1178	CONTROL, INDICATOR
310E112-5		POWER SUPPLY ASSEMBLY
32-054576-01	5865-01-059-1470	POWER SUPPLY
32-105111-01	6130-01-546-3814	POWER SUPPLY
32402/028021		CIRCUIT CARD ASSEMBLY / FAN
325-A/901100		POWER SUPPLY ASSY/REMOTE PROCESSOR CCA
325910-000	5865-01-289-9651	INDICATOR, AZIMUTH
32J1		INDICATOR
331391-1	6130-01-217-3178	POWER SUPPLY ASSY
3318488-1		WINDSHIELD HEAT CONTROL BOX
333009-001	5865-01-381-3278	CD RECEIVER - POWER
3387020-10		POWER SUPPLY ASSEMBLY
3397001-106	5831-01-090-7448	MULTIPLEXER-POWER SUPPLY
3397101-103	5895-01-090-7450	CONTROL-INDICATOR
3397371-101	1680-01-221-7007	RADIO ADS PANEL
3402292-1		CONTROL PANEL
34200782-004		DC POWER SUPPLY CCA
3450-650		INDICATOR, MULTLE, AIR NAVI
3494761-13		E-4 Autopilot Selector Switch Panel
35012-10-179-06		CONTROL INDICATOR (DISPLAY UNIT)
3515800 to 3515800		DIGITAL DISPLAY INDICATOR
3561600 (683R587G01)		Power Amp Module Design & Develop for barcode #40989
3562522-1		HUD LIGHT SENSOR HOUSING
3591600-200		NEMESIS II SOLID STATE POWER AMPLIFIER

381-100-118 (1)		POWER SUPPLY
381-100-152		POWER SUPPLY
381-101-036		POWER SUPPLY
381-101-060		POWER SUPPLY
381-101-115		POWER SUPPLY
381-101-143		POWER SUPPLY
381-101-144		POWER SUPPLY
381-101-150		POWER SUPPLY
381-101-152		POWER SUPPLY
381-101-157		POWER SUPPLY
381-101-181		POWER SUPPLY
381-101-205		POWER SUPPLY
381-101-225		POWER SUPPLY
381-101-235		POWER SUPPLY
381-101-237		POWER SUPPLY
381-101-256		POWER SUPPLY
381-101-263		POWER SUPPLY
381-102-005		POWER SUPPLY
38106-001		POWER SUPPLY
3811000G2		POWER DISTRIB UNIT
3812100G1		POWER SUPPLY
386-004-500		INDICATOR
388811-101	6130-01-470-1434	POWER SUPPLY, (REQ: DSRJE513478616)
3892-84010		POWER SUPPLY, HIGH VOLTAGE
3D1506H04		MULTI VOLT POWER SUPPLY MODULE
3D65003H01		MULTIVOLT POWER SUPPLY RACK
3D65003H02		MULTIVOLT POWER SUPPLY MODULE
3G7610V00852		ENGINE CONTROL PANEL
4-346-02		LOW VOLTAGE POWER SUPPLY
4-553-01	6130-01-380-4655	POWER SUPPLY
4-554-01	6130-01-380-5076	POWER SUPPLY
40-621		WHEEL SPEED TRANSDUCER
40-621-1		WHEEL SPEED TRANSDUCER
400071-001		TWR AC POWER SUPPLY
4007846-905		HV POWER SUPPLY
401-35187-01		POWER SUPPLY (5)
401-36436-01		POWER SUPPLY
401-36716-01		POWER SUPPLY
12Y2Y/115		POWER SUPPLY

4044032-903	6130-01-194-2266	POWER SUPPLY ASSY
406-075-802-103		INVERTER, POWER, STATIC
406966-01		C-130J ENC Headset and Adapter
4071142-001		LIGHT, CONTROL
4071142-1		LIGHT, CONTROL
4077156-0503	6110-01-522-5402	CONTROL PANEL LR
4085012-1		CONTROL PANEL ASSY
4087561-0502		DIGITAL CONTROL PANEL
429600-100	5895-01-530-1899	CONTROL-INDICATOR
429600-200	5895-01-580-3679	PANEL, INDICATOR (A05A0249-14 MCDONNELL DOUG)
4344EA-3		ACTUATOR, OUTBOARD WING FLAP
4344EA-4		ACTUATOR ASSY, INBOARD WING FLAP
4426-1 (1)		POWER SUPPLY
445-0325-1		Retractable Landing Light
445-0325-3		Retractable Landing Light
45-0325-1		LANDING LIGHT
45-0325-3		LANDING LIGHT
45-0356-1-3		LIGHT, LANDING
4517-7000-00		INTEGRATED CONTROL PANEL
453-9703		ELT CONTROL SWITCH
4679078A		RADAR ALTIMETER
483675-1		DC POWER SUPPLY
48456-101		SWITCH MODULE ALTIMETER
499-002-027		POWER SUPPLY
499-011-001		POWER SUPPLY
499-011-079		POWER SUPPLY
499-011-278		POWER SUPPLY
499-017-032		POWER SUPPLY
499-020-017		POWER SUPPLY
499-038-094		POWER SUPPLY
499-045-052		POWER SUPPLY
499-056-029		POWER SUPPLY
499-056-238		POWER SUPPLY
499-064-091		POWER SUPPLY
499-064-100		POWER CONTROL
499-074-016		CONTROL PANEL
499-075-050		POWER SUPPLY
499-075-052		POWER SUPPLY
499-096-050		POWER SUPPLY
499-097-030		POWER SUPPLY

500702-3021		AXIAL FLOW FAN
501-1533-51		INDICATOR, ATTITUDE
50466-200		MICROWAVE OVEN
5055139-2	6625-01-094-9456	INDICATOR, DIGITAL DISPLAY
5055601-1		CONTROL RADIO SET
5101124-19	5998-01-457-2339	A3 POWER SUPPLY
518-28007-204	6610-01-259-0251	ALTIMETER, ENCODING
5196100-001	5895-01-285-2482	CONTROL-INDICATOR
522-25B01CPD		LAMP
528-0598-004	6130-01-567-2383	POWER SUPPLY A6
53279-D2817-A727		POWER SUPPLY
53528 / 123SCAV5045-3	6130-00-784-3459	POWER SUPPLY
535493-1/538667-802	6130-00-576-4867	POWER SUPPLY
540906-2-2		ROTARY ACTUATOR
540906-2-4		ROTARY ACTUATOR
540906-2-5		ROTARY ACTUATOR
540906-2-6		ROTARY ACTUATOR
540906-3-1		ROTARY ACTUATOR
540906-3-3		ROTARY ACTUATOR
540906-3-4		ROTARY ACTUATOR
540906-3-5		ROTARY ACTUATOR
553-4624-005		POWER SUPPLY
565-1090-004		INDICATOR
5653-032-00	6130-01-327-8785	POWER SUPPLY
566-202000-181	6220-01-427-2333	LIGHT ASSEMBLY, INDICATOR
572-02744-1		CONTROL PANEL
5793313-1/PX7186		250VDC TO 28VDC 6KW CONVERTER POWER SUPPLY
58R045-203001-1		POWER SUPPLY
58R045-304001-1		POWER SUPPLY
59500000-3	6625-01-249-3202	INDICATOR DIGITAL
597-2091-501	5826-91-458-1986	CONTROL, RADIO SET
597-2091-502	5826-14-559-0565	CONTROL PANEL
60-2805-03	6130-01-149-8915	POWER SUPPLY LIGHT
60-2805-3	6130-01-149-8915	POWER SUPPLY
60-3281-1	6220-01-221-7099	POWER SUPPLY, STROBE LIGHT
60-4223-1		POWER SUPPLY
60-4223-1/6130-001-1		POWER SUPPLY
60-DC-P-50P / 60-DC		RADIO-DIGITAL CLOCK
600-420-705-001		POWER AMP
600420-705-001		POWER AMP

614L-6		ADF NO. 1 CONTROL PANEL
61710450-607A	5826-01-031-4978	CONTROL INDICATOR, C-9904/A
621-0451-001		POWER SUPPLY SUB
621-1628-001		INDICATOR
622-1400-001	7021-01-016-4162	CONTROL INDICATOR
622-1667-001	5895-01-034-0171	CONTROL-INDICATOR
622-1667-001/ C-9637/A	5895-01-034-0171	CONTROL-INDICATOR
622-1717-001	5821-01-007-7234	RADIO CONTROL PANEL
622-2551-002	5895-01-179-7731	COUPLER, POWER AMP
622-3702-015		INDICATOR DIG DST
622-3870-003	5895-01-258-6553	POWER SUPPLY, AMPLIFIER
622-3890-004	5826-01-124-7459	ELECTRONIC ALTIMETER
622-4093-003		CONTROL, RADIO SET
622-7801-001	5820-01-264-4796	CONTROL, RADIO SET
622-8666-031	5996-01-305-6508	AMPLIFIER, POWER
622-8761-007	5821-01-437-3106	CONTROL, RADIO SET
622-9353-003		Interchangeable w/-005
622-9353-005		Interchangeable w/-003
622-9353-011		replaced w/-113
		TVI-920, TCAS IND/VSI, No Button, Black, May be
622-9353-013		replaced w/-113, Inter. W/-015
622-9353-015		Interchangeable w/-013
622-9353-021		replaced w/-123
		TVI-920, TCAS IND/VSI, No Button, Gray, May be
622-9353-023		replaced w/-123, Inter. w/-025
622-9353-025		Interchangeable w/-023
622-9353-111		replaced w/-113
		TVI-920, TCAS IND/VSI, No Button, Black, Replacement
622-9353-113		for -011, -013, -111, Interchangeable w/-115
622-9353-115		Interchangeable w/-113
622-9353-121		replaced by -123
		TVI-920, TCAS IND/VSI, No Button, Gray, Replacement
622-9353-123		for -021, -023, -121, Interchangeable w/-125
622-9353-125		Interchangeable w/-123
		TVI-920, TCAS IND/VSI, Mode & Range Buttons, Black,
622-9353-211		May be replaced by -413
		TVI-920, TCAS IND/VSI, Mode & Range Buttons, Black,
622-9353-213		May be replaced by -413, Interchangeable w/-215
		TVI-920, TCAS IND/VSI, Mode & Range Buttons, Black,

622-9353-223		May be replaced by -423, Interchangeable w/-225
622-9353-225		TVI-920, TCAS IND/VSI, Mode & Range Buttons, Gray, Interchangeable w/-223
622-9353-311		TVI-920, TCAS IND/VSI, Above/Below & Range Buttons, Black, May be replaced by -313
622-9353-313		TVI-920, TCAS IND/VSI, Above/Below & Range Buttons, Black, Replacement for -311, Interchangeable w/315
622-9353-315		TVI-920, TCAS IND/VSI, Above/Below & Range Buttons, Black, Interchangeable w/-313
622-9353-321		TVI-920, TCAS IND/VSI, Above/Below & Range Buttons, Gray, May be replaced by -323
622-9353-323		TVI-920, TCAS IND/VSI, Above/Below & Range Buttons, Gray, Replacement for -321, Interchangeable w/-325
622-9353-325		TVI-920, TCAS IND/VSI, Above/Below & Range Buttons, Gray, Interchangeable w/-323
622-9353-403		TVI-920, TCAS IND/VSI, Mode & Range Buttons, Brown, Interchangeable w/-405
622-9353-405		TVI-920, TCAS IND/VSI, Mode & Range Buttons, Brown, Interchangeable w/-403
622-9353-411		TVI-920, TCAS IND/VSI, Mode & Range Buttons, Black, May be replaced by -413
622-9353-413		TVI-920, TCAS IND/VSI, Mode & Range Buttons, Black, Replacement for -211, -213, -411
622-9353-415		TVI-920, TCAS IND/VSI, Mode & Range Buttons, Black, Interchangeable w/-413
622-9353-421		TVI-920, TCAS IND/VSI, Mode & Range Buttons, Gray, May be replaced by -423
622-9353-423		Replacement for -221, -223, -421, Interchangeable w/-425
622-9353-425		TVI-920, TCAS IND/VSI, Mode & Range Buttons, Gray, Interchangeable w/-423
622-9353-623		TVI-920, TCAS IND/VSI, Mode & Range Buttons, Gray, Interchangeable w/-625
622-9353-625		TVI-920, TCAS IND/VSI, Mode & Range Buttons, Gray, Interchangeable w/-623
622-9353/9728		TVI920/920D VERT. SPEED TCASS INDICATOR
623-1355-002	5821-01-043-4054	POWER SUPPLY
623-7176-003		POWER SUPPLY, AMPLIFIER
6237760-1	5998-01-323-8292	POWER SUPPLY CCA
6240429/1976338-2	5998-01-246-2265	POWER SUPPLY, SUBASSEMBLY, REV F

634800-305	1270-01-073-3507XZ	RADAR INDICATOR
635-8800-001	5820-01-070-9932	POWER AMPLIFIER
635-8800-002	5820-01-070-9932	POWER AMPLIFIER
637-1296-001		POWER SUPPLY
641-105-45		AMPLIFIER POWER SUPPLY
642R928601	6130-01-038-2051	POWER SUPPLY, ALQ-131
645507-2		MIXED FLOW FAN
645507-2		MIXED FLOW FAN
649-559-400		POWER SUPPLY
649-559-900		POWER SUPPLY
65-0382-5		INSTRUMENT INDICATOR
65-0382-5-327		INSTRUMENT INDICATOR
65-0382-5-327 (REV R)	6610-37-A18-6026	INSTRUMENT INDICATOR
6520ACN004-501	6610-01-506-7020	INDICATOR ATTITUDE
654E4700-601		POWER SUPPLY SUBASSY
654E4700-801		POWER SUPPLY SUBASSY
659-2355-001		POWER AMP CCA
659-2355-01		POWER AMP CCA
659-9032-002	5895-01-450-2644	AMPLIFIER POWER SUPPLY
682R742601	1270-01-094-6872	RADAR CONTROL PANEL
684-002-003		POWER SUPPLY
684-003-002		POWER SUPPLY
692757-1	5841-01-252-3498	CONTROL, RADIO SET
692760-1	5841-00-252-3500	AZIMUTH RANGE INDICATOR
692762-1	5841-00-252-3501	RADAR TARGET INDICATOR
692762-4	5841-01-088-8142	INDICATOR, RADAR
695700-3		ELCTRO-MECHANICAL ACTUATOR
695719-1		AXIAL FLOW FAN
695775-1		LINEAR ACTUATOR
695838-3		ELECTRO-MECHANICAL ACTUATOR
697640-1		APU DOOR ACTUATOR
697906-13		CONTROL PANEL
697908-5	6110-01-472-3491	CONTROL PANEL, RADAR
698136-1	5826-01-554-4925	COM/NAV RADIO PANEL
700133-705-001 (TMP-1090)	5996-01-500-9841	LINEAR POWER AMPLIFIER
700135-705-001	6130-01-500-4020	POWER SUPPLY
700139-536-002	6130-01-500-4014	POWER SUPPLY
700139-705-002	6130-01-500-4021	POWER SUPPLY
7005-7849-800		POWER TERMINATION/ELEC TEST SET SUBASSY

707677-806		CONTROL, RADIO SET
708580-1		LIGHT ASSY(1)IND
70898-1189-360002-3	1680-01-186-5061	POWER DIST PANEL ASSY
70902-40000-041	6110-01-258-1290	PANEL, POWER DISTRIBUTION (BKSLE43196R012)
709070-2		LIGHT ASSY(1)IND
709238-801	5821-00-970-6115	CONTROL, RADIO SET
712860-1		MCDU MULTICHANNEL DIMMING UNIT
712860-2		MCDU MULTICHANNEL DIMMING UNIT
712935-1		PILOT LIGHTING CONTROL PANEL
712940-1		COPILOT LIGHTING CONTROL PANEL
712945-1		AERIAL DELIVERY CONTROL PANEL
712955-X		HEADING COURSE SELECT CONTROL PANEL
712960-2		AUTOFLIGHT CONTROL SYSTEM PANEL
712965-X		CURSOR CONTROL PANEL
712970-9		EXTERIOR LIGHTING CONTROL PANEL
712980-2		FADEC RESET /PROP CONTROL PANEL
712985-1		BOOST CONTROL PANEL
712990-3		ELECTRICAL CONTROL PANEL
712995-3		BLEED AIR CONTROL PANEL
713000-4		FIRE HANDLE / ENGINE START PANEL
713005-X		PRESSURIZATION CONTROL PANEL
713010-2		APU CONTROL PANEL
713015-3		ICE PROTECTION CONTROL PANEL
713020-1		OIL COOLER FLAPS CONTROL PANEL
713025-2		AIRCOND CONTROL PANEL
713030-4		REF SET / MODE CONTROL PANEL
713035-4		FLAP/TRIM INDICATOR PANEL
713040-1		LANDING LIGHT CONTROL PANEL
713045-3		HYDRAULIC / BRAKE CONTROL PANEL
713055-2	6110-01-475-5669	PANEL, CONTROL, EL
713123-1/DCM-1500		POWER AMP BD
713140-4		REF SET / MODE CONTROL PANEL
713150-1	6220-01-439-5661	CONTROL, ELECTRIC LIGHT
713275-2		MODE ANNUNCIATOR PANEL
71487-1		POWER SUPPLY INVERTER
714990-1		REFUELING CONTROL PANEL
715010-1		FUEL MANAGEMENT CONTROL PANEL
717531250-099	1290-01-359-4751	PANEL, INDICATOR
717769757-001	6130-01-421-6864	POWER SUPPLY ASSY
72450461-001		LED Retractable Landing Light
73-560-0443		POWER SUPPLY
7506-00125	6130-99-371-0166	SUPPLY, POWER HV/LV

77615000-1		POWER & SCALING AMP CC ASSY
77A573609P001		AC/DC POWER SUPPLY
77C951822G300R/301R		12V POWER SUPPLY
77C953022G300R/301		5V POWER SUPPLY
77C953022G300R/301R		5V POWER SUPPLY
77C953027G300/301R		28V POWER SUPPLY
77D612211G01		RELAY POWER & CONTROL ASSEMBLY
77D612211G1	5998-01-222-1931	RELAY POWER & CONTROL ASSEMBLY
2	6130-01-523-3840	POWER SUPPLY
785214-2	6130-01-224-2223	POWER SUPPLY SUBASSEMBLY
7900615 TO 3515800		DIGITAL DISPLAY INDICATOR
792-6305-001	6130-01-016-4167	POWER SUPPLY
792-6357-002		ATTITUDE DIRECTOR INDICATOR
796-13410		PANEL, CONTROL ASSY
7V01		0-7 VDC POWER SUPPLY
8001674-901	6130-01-165-6413	POWER SUPPLY CCA
8001904-904	5895-01-224-7827	CONTROL-INDICATOR
8002287-930	6130-01-234-8700	POWER SUPPLY, REV A
8008-2040-1	6130-01-246-0034	POWER SUPPLY
801410-1	6130-01-249-6212	POWER SUPPLY, MODEL EMPS487
802023-1	6130-01-249-6212	POWER SUPPLY ASSY
8037M1		ELECTRO-MECHANICAL ACTUATOR
8037M2		ELECTRO-MECHANICAL ACTUATOR
8054-200		INDICATOR,WIND SP
8067-3A		ACTUATOR, ELEVATOR TRIM (INBOARD)
8118A		ACTUATOR ASSEMBLY, RUDDER
82-052795-01	6130-01-058-5927	POWER SUPPLY -
82-201666-01		POWER SUPPLY ASY.
822-1207-001	5895-01-463-4214	PANEL, CONTROL
822-1673-001	5895-01-506-4735	CONTROL, RADIO
822-2080-001	5821-01-545-2953	RADIO CONTROL
824392-1-002		Press Select Panel
8282050-170/SPS2183		POWER SUPPLY
83-1550-1914		LAMP, INCANDESC.
83-3540-1405		TRANSFORMER,POWER
83-3550-2583		LIGHT ASSY
83-4930-3790		POWER SUPPLY ASSY
83-5920-0785		POWER SUPPLY (1)
83000-05601		WINDOW HEAT CTL

8500727-903/904		POWER SUPPLY
8518-5A		ELEVATOR TRIM TAB ACTUATOR SCREWJACK
8518-6A		ACTUATOR SCREW JACK, ELEVATOR TRIM
8521535-920	6130-01-447-2875	POWER SUPPLY CMFD SRU
8526M1		ACTUATOR, APU INLET DOOR
8555-101		RETRACTABLE LANDING LIGHT
8555-102		RETRACTABLE LANDING LIGHT
8555-103		RETRACTABLE LANDING LIGHT
8555-104		RETRACTABLE LANDING LIGHT
8555-105		RETRACTABLE LANDING LIGHT
8555-106		RETRACTABLE LANDING LIGHT
8555-107		RETRACTABLE LANDING LIGHT
85555M2		RETRACTABLE LANDING LIGHT
85555M3		RETRACTABLE LANDING LIGHT
85555M4		RETRACTABLE LANDING LIGHT
85555M5		RETRACTABLE LANDING LIGHT
85555M6		RETRACTABLE LANDING LIGHT
85555M7		RETRACTABLE LANDING LIGHT
8555M1		RETRACTABLE LANDING LIGHT
8555M1/65400-3		LIGHT, LANDING, AIRCRAFT
8555M10		LIGHT, LANDING
8555M2		RETRACTABLE LANDING LIGHT
8555M3		RETRACTABLE LANDING LIGHT
8555M4		RETRACTABLE LANDING LIGHT
8555M5		RETRACTABLE LANDING LIGHT
8555M6		LIGHT, LANDING
8555M7		LIGHT, LANDING
8555M8		LIGHT, LANDING
8555M9		LIGHT, LANDING
86001180-001		PANEL AUX CONTROL
8656M2		ACTUATOR, OIL COOLER DOOR
123)	6625-01-210-2982	INDICATOR, DIGITAL DISPLAY
123)	6625-01-210-2982	INDICATOR, DIGITAL DISPLAY
875550-1	1430-01-003-9871	INDICATOR, INTRA TARGET
880T100		ACTUATOR, LINEAR
880T100		ACTUATOR, LINEAR
89D0834-1		POWER SUPPLY CAGE, L1
8DJ179DDP3		INDICATOR, TEMPERATURE
8DJ496AN		ELEVATOR TAB POSITION INDICATOR
8ES-005-421-01		POWER SUPPLY
8ES-0050421-01		CONTROL NAV LIGHT
8ES455073-10		POWER SUPPLY-BEACON LIGHT
8ES455073-10		POWER SUPPLY-BEACON LIGHT

900-4300-2		DIGITAL DISPLAY INDICATOR
900072-803	5821-01-272-8011	CONTROL, RADIO SET
9004-712-02		HORIZONTAL INDICATOR
901358-809	5821-01-384-6152	CONTROL, RADIO SET
902048-802		REMOTE CONTROL RADIO SET, C-12319/ARC-222
902048-803	5821-01-558-6593	CONTROL, RADIO SET
902210-801		MXF-437 POWER AMPLIFIER
915-38106-001		POWER SUPPLY, REMOTE
915-38106-001		POWER SUPPLY
928-401002-507		POWER SUPPLY MOD
9324341/11352-70404-01		POWER SUPPLY
93A055-04		Capacitor Microphone
946F987-1	1680-01-037-2422	PANEL, INDICATOR
966544-841		PANEL INDICATOR
9698442		RETRACTABLE LANDING LIGHT
9698442-1		RETRACTABLE LANDING LIGHT
971982-101	6110-01-110-0669	DISTRIBUTION BOX, POWER
9800-08033-0000		ASSY, PCB, POWER
9860601-001		STORES CONTROL PANEL
987-2265-004		POWER AMPLIFIER
987-2265-007		POWER AMPLIFIER
98700000-02	6610-01-395-3510	INDICATOR, VV
989C520H02	4920-01-041-8568	ANGLE INDICATOR
9A3420		DUAL ANALOG INDICATOR
A05A0249-12		CONTROL-INDICATOR
A05A0249-7	5895-01-530-1899	CONTROL-INDICATOR
A241	1095-00-986-9291	CONTROL PANEL
A32241-00-008	6620-01-196-3548	INDICATOR, TORQUE
A489-3		ROTARY ACTUATOR
A489-3		ROTARY ACTUATOR
A489-4		ROTARY ACTUATOR
A489-4		ROTARY ACTUATOR
A489-5		ROTARY ACTUATOR
A489-5		ROTARY ACTUATOR
A490A-TS-DF-14/28	6130-01-415-1161	POWER SUPPLY
A490ATS-DF-14/28	6130-01-415-1161	POWER SUPPLY
AAAP2000	5895-01-424-0956	CONTROL-INDICATOR
AAAP2000-2	5895-01-464-4494	CONTROL-INDICATOR
AC-130-8		AIRSPED INDICATOR
ACU6100		COPILOT'S INTERCOMMUNICATION SYSTEM CONTROL

APTF12-5CF12-5CDAE		POWER SUPPLY
ASMA5-2-5AAE22-		POWER SUPPLY
ASR-9 97942		POWER SUPPLY MODULE
AT8A-05-01-01-01-2237	6130-01-459-8012	POWER SUPPLY AT8
B38352002-109		POWER PANEL ASSY
B38432025-105		RADIO SELECT PANEL
B4515210006		ENCODING ALTIMETER
BMR904003		REMOTE POWER FEEDING UNIT
C-11719/ARC-164(V)		CONTROL, RADIO SET
C-9682/ARC-164(V)	5821-00-607-8543	CONTROL PANEL, RADIO
C1614-AIC13		PA CONTROL PANEL
C16357EA01		ELECTRONIC ENGINEER INDICATOR
C3942PA1C18		PANEL CONTROL I/P
C3942PAIC18		PANEL INTERPHONE CONTROL
C7041-1		LINEAR ACTUATOR
C7041-2		ACTUATOR, RUDDER TRIM
CBD-517		POWER SUPPLY 3/3A
CYLZ4271		WINDSHIELD TEMP CONTROL
CYLZ4271-1		WINDSHIELD TEMP CONTROL
CYLZ4271-2		WINDSHIELD TEMP CONTROL
DSH1079-1		TRANSFORMER RECTIFIER
DST-29-2	6685-00-066-4581	INDICATOR, TEMPER
DULK02TF		LAMP OVERLAY/TEST
ESK-9-02243-501	1430-02-247-0274	POWER RELAY UNIT
F03-004409	5998-01-330-8954	POWER SUPPLY CCA
F03-004409/80010603	5998-01-330-8954	POWER SUPPLY CCA
FI-127		FORCE INDICATOR, PROGRAMMABLE
G000544-1		TRANSMITTER, POWER SUPPLY
G000544-1 / 12528-1		POWER SUPPLY
G000545-1		POWER SUPPLY, AC TO DC
G000545-1 / 12526-1		POWER SUPPLY
G254084-1V3	6130-01-411-4286	POWER SUPPLY ASSY
G443639-1/LR31466		POWER SUPPLY
G534398-1		FAN, AXIAL
G540-3		LANDING LIGHT
G5400		LANDING LIGHT
G5400-1		LANDING LIGHT
G5400-15		LANDING LIGHT
G5400-5		LANDING LIGHT
G5400-6		LANDING LIGHT

GDI-488		POWER SUPPLY ASSY
GE7381		LAMP
HC5-6/OVP-A9		POWER SUPPLY
HPD30-10MAA	6130-01-513-1759	PROGRAMMING
HY-4550-82		POWER SUPPLY
IP-1150A/APR-39(V)	5841-01-274-4939	RADAR SIGNAL INDICATOR
IP-1169/A	5841-01-063-8806	INDICATOR, RADAR TARGET
JG1209AC01	5841-01-245-9093	INDICATOR, HEIGHT
JG7196AA01		INDICATOR HEIGHT
K50741000-30	6130-01-262-8352	POWER SUPPLY
KW114G-DIP-X		DIGITAL DISPLAY INDICATOR
L16-107		ELECTRO-MECH ACTUATOR
L16-107		ELECTRO-MECH ACTUATOR
LA442098-1		LAMBDA POWER SUPPLY
LM101-984	6130-01-420-9487	POWER SUPPLY, MODEL 5016 PS-1
LRS-56-6-40476		POWER SUPPLY
LZS-1500-3	6130-01-392-2190	POWER SUPPLY, REV E
M161R-24-M33		INDICATOR
M38352004-103		POWER PANEL ASSY
MAT25-14-23923	6130-01-432-1586	POWER SUPPLY
MAT36-10-23922	6130-01-432-1588	POWER SUPPLY
MF-FJ45S-16-6X		POWER DISTRO PANE
MM43-12Y2Y/115		POWER SUPPLY
MM43-E1017/115		POWER SUPPLY
NMX-254-1224B	6130-01-492-8080	POWER SUPPLY SPS-73 VME CARD
NMX-754-1224B	6130-01-492-8080	POWER SUPPLY SPS-73 VME CARD
OAF43-265000-1	6130-01-089-3565	POWER SUPPLY
OL-301-3026R		POWER SUPPLY
ON023933		FAN
ON17232933		FAN
ON174114		SHIELD, LIGHT
ON174124		LAMPS
ON232933		FAN
ON411136-1		SUBSCR.B.LAMPNG CC
P09283W002	6130-01-392-2190	POWER SUPPLY, REV 1L
PR40-10A-06-SPB998	6130-00-415-0300	POWER SUPPLY
PS/EJ25N24.0K52		POWER SUPPLY RAYTHEON CFE
PS74028-1	6130-01-075-6724	POWER SUPPLY
PX1571 / D502-A		POWER SUPPLY

R5170M34-4		ELECTRO-MECHANICAL ACTUATOR
RC-60MS-XXX		INDICATOR
RS12N4-5-100		POWER SUPPLY
RYLC51047		ELECTRICAL DOOR ACTUATOR
S1500-3		ELECTRIC, LIGHT
S2320-101		LIGHT UNIT, EMERGENCY
S7060-01028-053		CONTROL PANEL
SLZ7669	6610-01-253-5112	INDICATOR, ANGLE
SLZ9675	6610-01-021-3670	ANGLE OF ATTACK INDICATOR
SLZ9992	6610-01-253-5111	INDICATOR, ANGLE OF ATTACK
SM-C-800908	6130-01-089-3565	POWER SUPPLY
SM-C-800908-1	6130-01-073-6126	POWER SUPPLY
SM11-E0710/115		POWER SUPPLY
SP 1522-28R		28V 1500 POWER SUPPLY
SP1503-50P1		3 PHASE, 50 V POWER SUPPLY
SP1522-28R		POWER SUPPLY, 28V/1500
SP1522-28R / 810		28V POWER SUPPLY
SP1522-28R/810		POWER SUPPLY
SP2503-035RN-B		POWER SUPPLY
SPS-3903		28V POWER SUPPLY
SPS-3903/SP-4154		12V POWER SUPPLY
SPS-514	6130-00-928-4873	POWER SUPPLY
SPXL-750Q-P	6130-01-492-8080	POWER SUPPLY SPS-73 VME CARD
ST-104A		OIL PRESSURE TRANSMITTER
TDR4-5-5.5-15 / SPS 3120	6130-01-283-7010	POWER SUPPLY
TRPI-10-G		POWER SUPPLY
WS1516A		INDICATOR,WIND SP
X93130187-001		CIRCUIT CARD ASSEMBLY, LAMP
6610-00-359-2226		TRANSMITTER/ANGLE OF ATTACK
2562A13M	6610 - FA0963242	TRANSMITTER/ANGLE OF ATTACK
1D8150G3		AUX COMM PANEL
3006T88G05	2915001436107	VALVE,FUEL PRESSURIZING AND DRAIN
690010-3	6605010444780	INERTIAL NAVIGATION UNIT
126460	6605010580975	INDICATOR, HORIZONTAL SITUATION
30G-1	6610003904495	INDICATOR, ANGLE
A4132210015	6610010161583	ALTIMETER
8DJ135LWB1	6680010613996	INDICATOR, RATE OF FLOW
51500-008	1680-00-181-4303	GENERATOR CONTROL PANEL
541604-3-1	1680-00-103-0029	ELECTROMECHANICAL LINEAR ACTUATOR
541604-4-1	1680-00-117-9484	ELECTROMECHANICAL LINEAR ACTUATOR

SYLC50480-60 (145SC100-7)	1680-01-118-5605	ACTUATOR, ELECTROMECHANICAL LINEAR,
406-076-102-103 (41005230	1680-01-173-8193	DIRECTIONAL ACTUATOR
41005210-105	1680-01-169-9293	CYCLIC ACTUATOR
NYLC9899 (114PS205-2)	2995-00-420-5226	ACTUATOR, ROTARY, ELECTRO-MECHANICAL
17067-1	4030-01-102-6063	CARGO HOOK ASSEMBLY
M5421E-1A	4140-00-613-6914	BLOWER ASSEMBLY
M5421E-1B	4140-01-032-3705	BLOWER ASSEMBLY
723092A (145HS202-4)	4140-01-115-3696	MIXED FLOW FAN
723094B (145HS202-5)	4140-01-115-3697	VANEAXIAL FAN ASSEMBLY (UTILITY HYDRAULIC SYS
41330-1 (145HS202-6)	4140-01-296-2979	VANEAXIAL FAN ASSEMBLY (FLIGHT BOOST)
41340-1 (145HS202-7)	4140-01-295-8143	VANEAXIAL FAN ASSEMBLY (UTILITY HYDRAULIC SYS
41350-1 (145DS210-4)	4140-01-287-2432	VANEAXIAL FAN ASSEMBLY (AFT TRANSMISSION)
41360-2 (145DS518-6)	4140-01-311-6901	VANEAXIAL FAN ASSEMBLY (COMBINER TRANSMISSI
9B40-1-C	5961-01-054-5221	TRANSFORMER - RECTIFIER POWER SUPPLY
28VS200Y-9	6130-00-059-3404	POWER SUPPLY
6250-4, NSN	6220-00-283-9767	LANDING LIGHT, AIRCRAFT
700248	6220-00-176-5675	LANDING LIGHT, CONTROLLABLE
700248-1	6220-00-475-9078	LANDING LIGHT, CONTROLLABLE
45-0128-3	6220-01-011-9981	LIGHT, LANDING - CONTROLLABLE
45-0202-1	6220-01-160-3527	LIGHT, LANDING - CONTROLLABLE
6340-UH1-017-1	6340-01-039-4164	RPM LIMIT WARNING DETECTOR
700348	6340-00-169-1598	RPM LIMIT WARNING DETECTOR
205-074-033-1-3	6340-01-153-8073	RPM LIMIT WARNING DETECTOR ASSEMBLY
14602-1 JB1	6610-00-388-0049	INDICATOR, ATTITUDE
14602-1 JC1	6610-00-390-8441	INDICATOR, ATTITUDE
14602-1 JD1	6610-00-663-8798	INDICATOR, ATTITUDE
14602-1 JE1	6610-00-526-4717	INDICATOR, ATTITUDE
14613-1 AKA4	6610-00-526-6765	INDICATOR, ATTITUDE
102550 (MODEL IND-A5-UH	6610-00-912-3613	REMOTE ATTITUDE INDICATOR
144700-01-01	6610-00-167-9699	REMOTE ATTITUDE INDICATOR
148110-01-01	6610-00-128-7614	INDICATOR, ATTITUDE, TYPE ARU13/A
SLZ9410	6610-00-935-4278	VERTICAL VELOCITY INDICATOR
148700-01-01	6610-00-179-9035	ATTITUDE INDICATOR
148700-03-01	6610-01-023-6073	ATTITUDE INDICATOR
B451521002	6610-00-134-5625	ALTIMETER-ENCODER, TYPE AAU-32/A
107500 TYPE ARU-12/A	6610-00-085-2739	REMOTE ATTITUDE INDICATOR
501-1195-01	6610-01-029-6702	ATTITUDE INDICATOR
501-1159-02	6610-01-163-7061	ATTITUDE INDICATOR
10450-31327	6610-01-091-3702	PRESSURE ALTIMETER TYPE AAU-31/A
20015-21122	6610-01-034-4765	AIRSPEED INDICATOR
102-0001-01	1610-00-150-6408	ATTITUDE INDICATOR
RC-30-VIL-4	6610-01-029-6703	VERTICAL VELOCITY INDICATOR
B4420210002	6610-01-091-3701	ALTIMETER, PRESSURE, TYPE AAU-31A
152BUA34-2 (114VS805-3)	6610-01-118-7577	CRUISE GUIDE INDICATOR

393004-01899	6680-00-888-9810	INDICATOR, LIQUID QUANTITY
393004-01970	6680-00-733-8432	INDICATOR, LIQUID QUANTITY
82600000-04 (114ES270-4)	6620-01-179-9737	DUAL TORQUE INDICATOR
8DJ135LAA1 (145ES025-1)	6620-01-120-7434	DUAL FUEL FLOW INDICATOR
9020-2012	6625-01-033-8745	VOLTMETER/AMMETER INDICATOR
8DJ67FBC-1	6680-00-907-8380	INDICATOR, TACHOMETER
3809314-4	6680-01-029-6704	DUAL TACHOMETER INDICATOR
3809314-5	6620-01-065-3742	DUAL TACHOMETER INDICATOR
SEDL-C329C	6680-01-081-9181	TACHOMETER INDICATOR
200-040-005 (209-060-602-1)	6680-01-028-8420	FUEL QUANTITY INDICATOR
218-008-001 (145ES004-1)	6680-01-123-7727	UTILITY HYDRAULIC RESERVOIR INDICATOR
218-008-002 (145ES004-2)	6680-01-123-7728	UTILITY HYDRAULIC RESERVOIR INDICATOR
301-004-002 (145ES008-2)	6680-01-127-2481	ROTOR TACHOMETER INDICATOR
3809357-2	6685-01-036-6894	TURBINE OUTLET TEMPERATURE INDICATOR
165ES100-4	6685-01-119-7402	INDICATOR, TEMPERATURE, THERMOCOUPLE
321001-03002	6695-00-955-9476	OIL TEMPERATURE INDICATOR
321001-03019	6695-00-923-9046	OIL TEMPERATURE INDICATOR
331002-06015	6685-00-941-4087	OIL PRESSURE INDICATOR
202-001-001	6695-00-045-4522	FUEL QUANTITY INDICATOR
9036-2006	6695-01-028-1092	OIL TEMPERATURE AND PRESSURE INDICATORS
9036-2007	6695-01-028-1091	OIL TEMPERATURE AND PRESSURE INDICATORS
70902-01099-041	1660-01-095-7314	BLADE DE-ICE CONTROL PANEL
70902-01099-045	1660-01-216-1936	BLADE DE-ICE CONTROL PANEL
70550-01124-102	1680-01-111-0187	ICING RATE METER PANEL
70550-01124-103	1680-01-236-9699	ICING RATE METER PANEL
70550-01124-105	1680-01-329-0761	ICING RATE METER PANEL
70550-01124-106	1680-01-460-9549	ICING RATE METER PANEL
45-0190-7	6220-01-105-6582	RETRACTABLE AIRCRAFT LANDING LIGHT
107)	6220-01-115-9237	STROBE LIGHT POWER SUPPLY
110)	6220-01-211-6790	STROBE LIGHT POWER SUPPLY
871FF2	6340-01-117-1222	ICE DETECTOR
871FF3	6340-01-212-2907	ICE DETECTOR
871FF4	6340-01-332-5782	ICE DETECTOR