

## U-Cup Replacement for AARC Bearing Cleaner



Item 79208 U-Cup for AARC Bearing Cleaner (2 Pack) \$14.00

PHONE 715.953.2416

E-MAIL [INFO@AARC-US.COM](mailto:INFO@AARC-US.COM)

### 1. Unscrew Piston & Remove From Sleeve / Cylinder



### 2. Remove the Two Worn Out U-Cups at the Bottom of the Piston.



### 3. Install the Two New U-Cups Back-to-Back with the U-Channels Facing Out.

*For Best Results, Lube the U-Cups with Vegetable Oil.*



Ensure U-Channels are Back-To-Back & Facing Out



Vegetable Oil

### 4. Insert Piston with New U-Cups into Sleeve / Cylinder and Tighten.

*For U-Cup Longevity, Wash with Soap & Water After Each Use & Lube with Vegetable Oil.*

