

Bearing Packer Instructions For Use



To use the AARC Bearing Packer

1. To load grease tube, open Bearing Packer at cone end and remove yellow tube adaptor. Slide yellow tube adaptor to end of grease tube.




2. Place grease tube in Bearing Packer and replace cone end making sure the black gasket is in place.



3. Cone Plug Option: Place bearing large end down in yellow cone. Insert blue cone plug inside bearing hub. Holding blue cone plug in place, press down on entire end to force grease through rollers.



4. Plate Plug Option: Select one of four blue plates to match outside diameter of inner race. Place blue plate with bearing, large end down, onto yellow cone. Apply pressure until plate floats and center bearing on plate. Apply pressure on inner bearing race to force grease through roller.

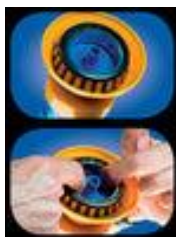

5. Remove blue cone plug and bearing, wiping excess grease back into yellow cone. Replace lid on cone to protect from dust and dirt.