

# Introduction

---

The T4300A and T4300A-V are simple to use transmitters that can control 2 trap machines with the push of a button. The T4300A-V has the added ability to launch targets using voice control. Both transmitters require a 9-volt battery and an antennae.



Press any button to power on the transmitter. Be aware the this first button press, even though the device is off, will fire the corresponding trap or traps. The **Red Power LED** will illuminate to let you know that the device is on and ready to launch the second target.

The T4300A-V has a microphone included. For best results, clip this microphone to the lapel of vest or shirt, about 6-9 inches from your mouth.

## Button Operation (T4300A & T4300A-V)

Press **Trap 1** or **Trap 2** to fire the corresponding trap. The **Green TX LED** will illuminate to indicate that a signal is being transmitted and the corresponding trap will fire. Press the **Doubles Button** to fire a True Pair, which will fire both traps simultaneously.

## Voice Operation (T4300A-V Only)

Be sure to have the supplied microphone plugged into the **Microphone Jack** on the top of the T4300A-V and clipped to the lapel of vest or shirt, about 6-9 inches from your mouth. The T4300A-V can be clipped to a belt or put in a pocket of a shooting vest.

Once the microphone is plugged into the **Microphone Jack**, the T4300A-V automatically enters voice activation mode. To fire a single target, press either **Trap 1** or **Trap 2**. This arms the device but does not fire the trap. The **Green Tx Light** will illuminate to indicate that the device is armed and is waiting for the voice command. When ready, call "Pull" in a normal tone of voice to fire the designated trap. The trap will fire and the **Green Tx Light** will go out until another button is pressed.

To fire both traps simultaneously, press the **Doubles** button. This arms the device but does not fire the traps. The **Green Tx Light** will illuminate to indicate that the device is armed and is waiting for the voice command. When ready, call "Pull" in a normal tone of voice to fire both trap 1 and trap 2. The traps will fire and the **Green Tx Light** will go out until another button is pressed.

## Lock On Mode (T4300A-V Only)

---

The **Lock On Mode** is a feature of the T4300A-V and is used in conjunction with voice operation. **Lock On Mode** allows **Trap 1**, **Trap 2**, or **Doubles** to be locked in and launched with a verbal command without pressing a button each time.

To lock in a trap or a true pair, press and hold either **Trap 1**, **Trap 2**, or **Doubles** until the **Green Tx LED** flashes (4 seconds). The selected trap(s) are now locked in. When ready, call "Pull" in a normal tone of voice to fire the designated trap(s). The Trap(s) will fire and the **Green Tx Light** will go out. After 4 seconds, the **Green Tx Light** will begin to flash again and the T4300A-V will be ready to fire the same trap(s). To exit **Lock On Mode**, press any button.

## Report Mode (T4300A-V Only)

---

**Report Mode** is a feature of the T4300A-V and is used in conjunction with voice operation. **Report Mode** allows shooter to call for one trap and have the other trap fire on the report of the gun.

To set up **Report Mode**, press the first trap that you would like to fire (**Trap 1** or **Trap 2**). The **Green Tx LED** will illuminate to indicate that the device is armed. Before calling for the target, press the other trap button. This will be the trap that fires on the report of the gun. When you are ready, call "Pull" in a normal tone of voice to fire the first designated trap. On the sound of the gun, the second trap will fire.