



User Guide: Mainsheet Hanger Clip


Purpose: Prevent mainsheet from tangling on crew during tacking and gybing.

Material: PETG, fabricated by 3D Printing. As with most plastics, these will degrade over time when exposed to UV and water. When not in use, best is to store parts in a dark, dry location. There is no need to remove from the sailboat's rig. Available in two sizes, 1.5" boom inner diameter (Sunfish and similar) and 2.0" (Laser and similar).

Installation:

1. Gently pull the two sides of the clip apart, just enough to allow the sheet line to enter the guide hole through the slotted opening.
2. Gently push the clip onto the boom. Best is to angle the clip so its rounded edges slip around the boom.
3. Ideally, three clips should be used between pairs of sail grommets.
4. Clips work with both types of sail attachment, through plastic sail rings or line.

Note: When the clip is pushed onto the boom, some cracking of the internal plastic structure may be heard. This is normally minor and does not affect performance. Excessive tension on the clip's sides however may lead to breakage. Attach & remove clip slowly to avoid breakage.

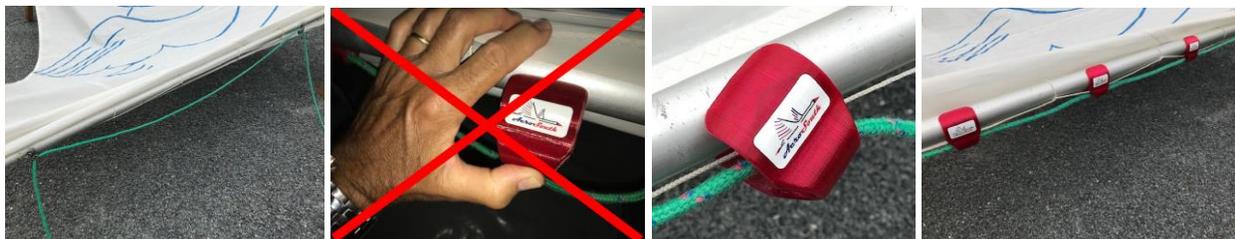

Have Questions or Comments?

Contact Kent Misegades, President and Owner, kent@aerosouth.net, 910-568-2580

ALL AEROSOUTH PRODUCTS ARE PROUDLY ENGINEERED & PRODUCED IN NORTH CAROLINA, USA!