



Feature	Button Sequence
Call Forward Any Call - Internal and Incoming Line Calls:	
Forwards any call, whether an internal call or incoming line call.	
All calls to an ext.	Press ext. button + #6011 (tone) + dial the dest. ext. no (tone)
All calls to outside telephone no.	Press ext. button + #6011 (tone) + outside line access code + dest. telephone no. + # (tone)
Busy to an ext.	Press ext. button + #6021 (tone) + dial the dest. ext. no. (tone)
Busy to outside telephone no.	Press ext. button + #6021 (tone) + outside line access code + dest. Telephone no. + # (tone)
No answer to an ext.	Press ext. button + #6031 (tone) + dial the dest. Ext. no. + timer (08-60) (tone)
Busy no answer to an ext.	Press ext. button + #6031 (tone) + dial line access code + dest. Telephone no. + #6031 + # + timer (08-60) (tone)
Busy no answer to outside telephone	Press ext. button + #6041 + dial the destination telephone no. + # (tone) + Timer (08-60) (tone)
Cancel	Press ext. button + #6051 (tone)