



## **Instructions for Resetting the DR 730 DRUM**

**Note: Your printer or fax machine must be reset after you install a new drum. Your printer or fax machine will not recognize that a new drum has been installed until it has been reset.**

### **Model HL-54XX Machines:**

- 1 - After replacing the drum unit, keep the front cover open (make sure the power is on).
  - 2 - Press and hold the "Go" button for about 4 seconds until all the LEDs light up.
  - 3 - Once all six LEDs are lit, release the "Go" button. Close the front cover.
- The counter is reset.

### **Model HL-6180 Machines:**

- 1 - After replacing the drum unit, keep the front cover open (make sure the power is on).
  - 2 - Press and hold the "Go" button until "Drum Clear" shows on the display. Close the front cover.
- The counter is reset.

### **Models MFC-XXXX and DCP-XXXX:**

- 1 - After replacing the drum unit, keep the front cover open (make sure the power is on).
  - 2 - Press "Clear". The display will show "Replace Drum?" Select "#1-Yes".
  - 3 - When the screen shows "Accepted", close the front cover.
- The counter is reset.