



Resetting the DR 820 DRUM Instructions

Note: Your printer or fax machine must be reset after you install a new drum. Your printer or fax

machine will not recognize that a new drum has been installed until it has been reset.

For HL-L5000 / 5100 / 5200 / 6200 / 6250 units:

- 1 - After replacing the drum unit, keep the front cover open (make sure the power on)**
- 2 - Press and hold "OK" for about two seconds to display "Drum"**
- 3 - Press "OK"**
- 4 - Press the up arrow to reset the printers drum counter**

Machine is reset, close the cover

For HL-L6300 / 6400 units

- 1 - After replacing the drum unit, close the front cover.**
- 2 - Press "X" to interrupt the error.**
- 3 - Press picture of tools (Settings), "Machine Information", "Parts Life".**
- 4 - Press "Drum Life" until the touchscreen message changes, and then press "Yes".**
- 5 - Press picture of home.**

Machine is reset.

For DCP and MFC models

- 1 - After replacing the drum unit, close the front cover.**
- 2 - Press "X" to interrupt the error.**
- 3 - Press picture of tools (Settings), "all settings", "Machine Information", "Parts Life".**
- 4 - Press "Drum" until the touchscreen message changes, and then press "Yes".**
- 5 - Press picture of home.**

Machine is reset.