

Maine Printer Supply (207) 810-2300 (207) 510-7048
183 US Route 1 STE D Scarborough, ME 04074



Resetting the DR 720 DRUM Instructions

Brother DR-720 Drum Reset Instructions

This article will help you reset your printer for the Brother DR-720 Drum. Please consider our professionally built drums and TN-750 toners that will perform equal to the original Brother cartridges.

How To Reset Your Brother DR 720 Drum Printer

Every time you install a new Brother DR-720 Drum you must manually reset the printer's **drum counter** using the following instructions.

For the HL Printers:

Brother HL-5440D

Brother HL-5450DN

Brother HL-5470DW

Brother HL-5470DWT


Brother HL-6180DW

Brother HL-6180DWT

Swap your toner cartridge into the new drum, install the new drum and toner into the printer, and leave the front door open

Press the green **[Go]** button until all the lights light up then release the button.

Close the door and your drum life counter is reset to 100%.

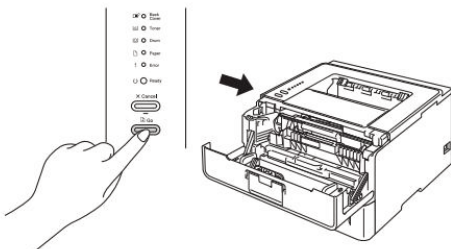

For The DCP and MFC Printers:

Brother DCP-8110DN

Brother DCP-8150DN

Brother DCP-8155DN

Brother DCP-8250DN

Brother MFC-8510DN

Brother MFC-8520DN

Brother MFC-8710DW

Brother MFC-8810DW

Brother MFC-8910DW


Brother MFC-8950DW

Brother MFC-8950DWT

Swap your toner cartridge into the new drum, install the new drum and toner into the printer, and leave the front door open

With the front cover open press the **[Clear]** button.

The LCD screen will show

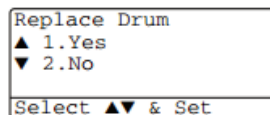

Press **[1]** to reset the drum counter

The LCD screen will show

"Accepted"

You may now close the printer door and your drum counter is set to 100%