



Resetting the DR 420 DRUM Instructions

Note: Your printer or fax machine must be reset after you install a new drum. Your printer or fax machine will not recognize that a new drum has been installed until it has been reset.

Models starting with HL-XXX

- 1 - After replacing the drum unit, with the power on, keep the front cover open.
 - 2 - Press and hold the "GO" button until all four LEDs are lit.
 - 3 - Once the four LEDs are lit, release the "GO" button and close the front cover.
 - 4 - Make sure the drum LED is off.
- The counter has been reset.

For Models starting with HL-228X, MFC-XXX, and DCP-XXXX

- 1 - Open the front cover and press the "CLEAR" button.
 - 2 - To confirm you are installing a new drum unit, press the "UP" arrow.
 - 3 - When the screen shows "ACCEPTED", close the front cover.
- The counter has been reset!