




Resetting the DR 400 DRUM Instructions

Brother DR-400 Drum Reset Instructions

These instructions will help you reset your printer to 100% life of your new Brother DR-400 drum

For HL Models:

- 1 - Open the front cover
- 2 - Locate the control panel [BUTTON] under the led lights

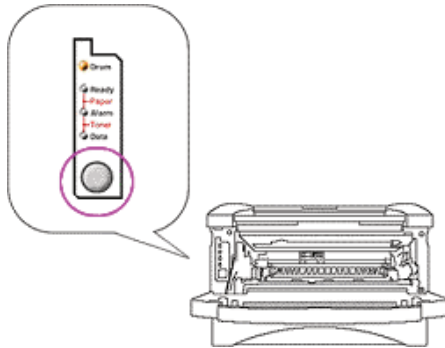

- 3 - Press the control panel button until all the lights are lit the release the button. The drum counter is now reset.
- 4 - Close the door. You are ready to print.

For MFC Models

- 1 - Open the front cover and press the [CLEAR] button.
- 2 - The screen will ask if a "New Drum Was Installed"
" 1 for Yes 2 for No"
- 3 - Press the [1] key to select yes.
- 4 - The scree should respond with "selection accepted"
- 5 - The drum counter is now reset. Close the door. You are ready to print