

PARTS LIST

A x 1 (ASSEMBLED)	B x 1 (ASSEMBLED)	C x 1	D x 1	H x 1
			E x 2	J x 1
			F x 1	TOOLS
			G x 2	V x 2
				W x 2

HARDWARE SET 1			HARDWARE SET 2		HARDWARE SET 3			HARDWARE SET 4		
K x 1	L x 2	M x 1	N x 1	O x 1	P x 2	Q x 2	R x 2	S x 2	T x 2	U x 2

ASSEMBLY

STEP 1

INSERT PART (C) THROUGH THE FOLLOWING PARTS IN THE ORDER SHOWN IN THE DIAGRAM TO THE RIGHT.

C → H (FACING DOWN) → A → INTO B

CONNECT PART (B) TO THE END OF PART (C).
INSERT HARDWARE SET 2 (PART N & O) AND SECURE TIGHTLY USING PART (W x 2)

STEP 2

NOW THAT PART (C) AND (B) ARE CONNECTED, PULL PART (C) UPWARD THROUGH PART (A) EXPOSING TWO HOLES (ON EITHER SIDE OF PART (C)).

INSERT HARDWARE SET 1 (PART K, L & M) AND SECURE TIGHTLY USING PART (V) & PART (W)

STEP 3

INSERT PART (F) THROUGH THE FOLLOWING PARTS IN THE ORDER SHOWN IN THE DIAGRAM ABOVE

F → G → A → G

STEP 4

POSITION PART (E x 2) ONTO EACH END OF PART (F).

USING HARDWARE SET 3 (P x 2, Q x 2, R x 2), SECURE PART (E) TO PART (F).
FASTEN HARDWARE SET 3 TIGHTLY USING PART (V).

STEP 5

POSITION PART (D) WITH 2 HEXAGONAL HOLES FACING UPWARDS ONTO PART (C) LINING UP WITH HOLES ON PART (C).

USING HARDWARE SET 4 (S x 2, T x 2, U x 2) INSERT PART (S x 2) INTO TOP HEXAGONAL HOLES PASSING THROUGH THE TOP OF PART (C).

SECURE PART (D) FOLLOWED BY PART (U) TO THE ENDS OF PART (S) LOCATED UNDERNEATH HANDLES. FASTEN TIGHTLY USING PART (V).

STEP 6

ATTACHED PART (J) TO PART (D)

WARNING!

NO MODIFICATIONS THAT COULD AFFECT OR LESSEN SAFETY SHOULD BE INTRODUCED. AN EXPIRY DATE IS UNDETERMINABLE FOR ALL COMPONENTS. RIDER MUST CHECK THE EFFICIENCY OF ALL COMPONENTS BEFORE RIDING. IF ANY COMPONENT IS LOOSE OR DAMAGED, IT MUST BE TIGHTENED OR REPLACED BEFORE RIDING.

- NOT SUITABLE FOR CHILDREN UNDER 36 MONTHS.
- CHOKING HAZARD DUE TO SMALL PARTS.
- USE ONLY UNDER CONSTANT ADULT SUPERVISION.
- SCOOTER MUST ONLY BE USED BY ONE RIDER AT A TIME.
- ALWAYS WEAR SAFETY EQUIPMENT SUCH AS CPSC APPROVED HELMET, KNEE PADS AND ELBOW PADS.
- ALWAYS WEAR FULLY ENCLOSED SHOES.
- DO NOT USE SCOOTER AT NIGHT.
- DO NOT USE ON WET SURFACES, UNEVEN OR UNPAVED ROAD.
- AVOID SHARP BUMPS, DRAINAGE GRATES AND SUDDEN SURFACE CHANGES.
- THIS SCOOTER IS NOT DESIGNED FOR OFF-ROAD USE.
- IT IS NOT RECOMMENDED THAT THE SCOOTER BE USED ON STEEP SLOPES OR AT HIGH SPEEDS.
- DO NOT USE THIS PRODUCT FOR JUMPING, STUNTS OR TRICKS.
- ALWAYS FOLLOW LOCAL TRAFFIC LAWS.
- ALWAYS WATCH SURROUNDINGS FOR PEDESTRIANS, OTHER RIDERS, AND AUTOMOBILES.
- ALWAYS CHECK THE BRAKES BEFORE RIDING.
- NEVER HAVE YOURSELF PULLED OR TOWED.
- BRAKE WILL GET HOT FROM CONTINUOUS USE, DO NOT TOUCH AFTER BRAKING.
- ALWAYS CHECK ALL CLAMPING DEVICES AND WHEELS FOR TIGHTNESS BEFORE RIDING.
- NEVER RIDE THE SCOOTER WITHOUT TIGHTENING THE FOLDING MECHANISM AND WHEELS.
- USE AT OWN RISK OF INJURY.

STOP!

DO NOT CONTACT RETAIL OUTLET, FOR ALL CUSTOMER SERVICE ISSUES, PARTS AND SERVICE, PLEASE CONTACT OUR CUSTOMER SERVICE OPERATORS AT

GILLYBOOCUSTOMERCARE@GMAIL.COM
GILLYBOOCORPORATION.COM /CONTACT-US

MAINTENANCE!

- DO NOT LEAVE THIS PRODUCT IN HIGH TEMPERATURES.
- DO NOT LEAVE THIS PRODUCT IN EXTREME LOW TEMPERATURES.
- DO NOT LEAVE THIS PRODUCT IN INTENSE SUNLIGHT OR DUSTY AREAS.
- STORE IN A DRY PLACE.