

RADIATOR OPERATION:

SELECTOR “O”, “P”, “I”

Position “O”:

The heater is switched off permanently. The display is switched off.

Position “P” (Programme Mode):

The heater is following a program. It will maintain the SUN, MOON or * temperatures as per the set program (which have already been pre-set). At this position if the display shows the time the heater is in frost protection mode.

Position “I” (Heating Mode On):

The heater is maintaining the SUN temperature and will be identified by both the SUN and MOON indicator being lit. This is useful when the SUN temperature is required, and we do not want to modify the program.

At this position, if the display shows the time the heater is in frost protection mode. Press the * key to shift from frost protection mode (time is shown in the display) to standard mode (temperature is shown in the display) and vice versa.

SUN, MOON AND * TEMPERATURES

The electronic programmer handles three temperature levels during a 24hr period.

Press the  key to set the SUN temperature. The display will show the SUN temperature. The display will show the SUN temperature value blinking. Set the SUN temperature value by means of the + and – keys and press the  key to store the value.

If the display shows the time, the heater is in frost protection mode. Press the key * shift from frost protection mode (time is shown in the display) to standard mode (temperature is shown in the display) and vice versa.

Repeat the above steps with the  key to set the MOON temperature.

The * temperature level is 3°C and it is a fixed value.

SUN, MOON or  temperatures can be allocated to any of the 48 intervals of 30 minutes throughout the day.

DAILY PROGRAMMES

It is best to visualise the day split in to 48 intervals of 30 minutes each. The SUN, MOON or * temperatures can be allocated to any of them.

The default settings include a daily mode so that the heater will repeat the program every day. If different programmes are required throughout the week, please see the next step ‘WEEKLY PROGRAMMES’.

WEEKLY PROGRAMMES

To check a programme or to make a new one, follow these steps:

Press the 'PRG' key and the display will show 00:00 intermittently.

Press one of the three keys –    to allocate SUN, MOON or OFF (frost protection) from 00:00h to 00:30h. If SUN or MOON temperatures are selected the relevant luminous indicator will be lit.

If OFF temperature  is selected, both luminous indicators will be off.

SETTING THE TIME

Turn the mode selector dial to P position then press and hold the  until the time flashes intermittently. Set the hours by pressing the + and – keys. Set the minutes the same way. Press the  key once more to store the time.

If at any point you should need to change the times that have been set, just press the  key and repeat the above process.

FROST PROTECTION MODE

With this mode on, if the room temperature drops below 3°C the heater will connect itself automatically.

If the display shows the time, the heater is in frost protection mode. Press the  key to shift from frost protection mode (time is shown in the display) to standard mode (temperature is shown in the display) and vice versa.

Please turn off all radiators before checkout. This will help save energy and help our commitment to minimising our environmental impact.