

WT-PA Announcer Operation Guide

To make an announcement from your Walkie-Talkie:

Select the channel on your radio that the WT-PA was programmed for and then press the PTT (Push To Talk) button. Say your message and then release the PTT button. The message will be rebroadcast shortly after.

For Walkie-Talkies that have no spare channels or need to use their Main Communication Channel to make Announcements, the following options are available:

A) Press the PTT button (3) times, then press and hold the PTT button, say your message and then release the PTT button.

B) Press the PTT button and hold, (this will send a Touch Tone Code to activate the WT-PA Announcer), say your message, then release the PTT button.

For Walkie-Talkies that have Touch Tone Key-Pads or Option Keys:

Press the PTT button, and hold, while you enter the code on the radio's keypad, then say your message. Release the PTT button. Alternatively, press the PTT button, and depress the Option key, then say your message. Release the PTT button.

To use the WT-PA Announcer to Control External Devices such as Strobe Lights, Sirens and Door Locks:

Press and hold the PTT button while you enter the numeric code (ex: 246), on the radio's keypad to activate the device you want to control, then release the PTT button. To stop/cancel, press and hold the PTT button while you enter in the stop/cancel code, (ex: 123), then release the PTT button. Alternatively, use the programmed Option key in place of entering the numeric code.

Front Panel LED Indicators:

RED – RECORD/PLAYBACK: The LED will turn solid red when a radio transmission is being recorded. It will blink when the message is being played back.

GREEN – AUDIO: The LED will flicker green on and off with any audio present on the radio input.

YELLOW – DTMF DATA VALID: The yellow LED will turn on with the presence of a DTMF signal.

RED – CARRIER DETECT: If a Carrier Detect signal is provided from a radio, the red LED will turn on when it is detected. The WT-PA assumes a high signal = no carrier and a low or ground = carrier present.

YELLOW – AUXILIARY: The yellow LED will turn on when the relay has been latched on.