


# Wireless Air Gyro Remote Manual

## Product Diagram (front & back)

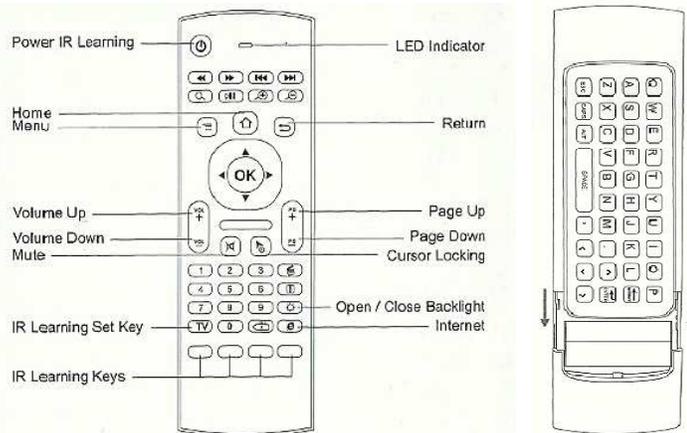

Wireless Air Gyro Remote is a multi-axis device which integrates the key functions of a keyboard, a mouse and a remote control. It supports Android Smart TV, IPTV, Networked set-top Box, Mini PC, Android TV Box, HTPC and PCTV. It's easy to use, just plug and play.

**Important Notice: This is a universal controller. It is normal that few keys might not be applicable to your device because of different codes by different manufactures.**

### Remote Function Keys:

- Home: Go back to the Android home menu;
- Return: Go back to previous screen;
- OK: Confirm action or insert cursor;
- Cursor Locking: Short press to lock the wireless mouse, another press to unlock it.

### Keyboard Function Keys:

- Backspace: Delete
- CAPS: Caps Lock (Switch Caps ON or Off)
- ENTER: Confirm the operation
- SPACE: Spacebar
- ALT: Press Alt, to switch to top right comer characters, and press Alt again, to switch back.

Function Keys (Note: different devices might use some specific codes, it is normal some keys do not function to your device.)

	Android	Windows
	Power Off	Power Off / Steep
	Rewind	Rewind
	Forward	Forward
	Previous	Previous
	Next	Next
	Play / Pause	Play / Pause
	Zoom in	Zoom in
	Zoom out	Zoom out
	Menu	Menu
	Back to Menu	IE
	Back	Mouse Right
	Up	Up
	Down	Down
	Left	Left
	Right	Right
	Mouse Left	Mouse Left
	Volume Up	Volume Up
	Volume Down	Volume Down
	Page Up	Page Up
	Page Down	Page Down
	Mute	Mute
	Mouse Lock	Mouse Lock
	Mediam Player Shortcut	Mediam Player Shortcu
	Email Shortcut	Email Shortcut
	Open / Close Backlight	Open / Close Backlight
	IE	N / A
	Backspace / Delete	Backspace / Delete
IR Remote Learning Keys		
	IR Learning	
	Learning 1	
	Learning 2	
	Learning 3	
	Learning 4	

## How to Use

Insert enclosed dongle into your device's USB port; pairing will be completed once you can see and move mouse cursor on the screen. If pairing was unsuccessful, press the OK button and TV button at the same time. Your device should now be connected.

## IR Learning

**There are five buttons which could be programmed to your TV remote keys: the top left Power button and the bottom four color buttons as showed in Product Diagram.  
Please be noted your TV remote has to support NEC protocol for learning.**

1. Pointing IR emitters of the TV remote and the air mouse to each other;
2. Press and hold the TV Button on the Air Remote for 2-3 seconds until LED lights;
3. Release the TV Button, now the LED will flash slow;
4. Now press the button on your TV remote that you wish to learn;
5. When the IR signal is received the LED light will turn solid;
6. Now press one of those 5 learning buttons on the Air Remote;
7. Press TV button to finish the learning.

**Start from step 1 to revise or start a new set up.**

## FAQs

### 1. How to adjust sensitivity of the mouse?

Home + Volume Up move faster

Home + Volume Down move slower

### 2. The air mouse doesn't work or cannot be recognized.

Firstly make sure that good batteries are inserted properly. Then plug the dongle to your device you want to pair with the air mouse, wait for 20 to 60s for the dongle driver to be installed.

Press [OK] and [TV] button at the same time.

### 3. Some function keys such as [Return] and [OK] button don't work.

This is a universal controller. It is normal that few keys might not be applicable to your device because of different codes by different manufacture.

If you see the red LED light on when you press a key, it proves that the key is working. You can try the Remote on a standard windows PC to test most functions.

### 4. My device always fails to learn from my TV remote.

Firstly please be noted your TV remote has to support NEC protocol for IR learning. Please check with your remote control manufacture to confirm this. If NEC protocol is supported, strictly follow IR Learning instructions session of this manual. Keep an mind that only the power key and the four bottom IR Learning keys can be programmed.

### 5. My air mouse moves very slow, or the mouse cursor disappears, or it returns wrong typing.

You're suggested to replace the batteries, re-plug the dongle, and then press [OK] and [TV] button at the same time for a new pairing.

### 6. The mouse cursor moves too fast. How to slow It down?

Firstly try to lower the mouse sensitivity by pressing [Home ] and [Volume Down], if no obvious changes, go to your PC's control panel or your Android box's cursor speed to change the mouse sensitivity.

### 7. How to wake up the air mouse while it goes to auto-sleep?

Press any key to wake up the air mouse.

### 8. How to type Caps or numbers?

Press CAPS to switch Caps on or off.

Press ALT to switch between the blue colored characters and the white ones.

### 9. How to restore to manufacture default settings?

Please press [TV]+[Del] buttons together for three seconds to restore to manufacture settings.

#### Specifications:

- (1) Transmission: 2.4G RF wireless
- (2) Sensor: 3-Gyro + 3-Gsensor
- (3) Number of keys: 81
- (4) Range: 10m
- (5) Battery Type: AAA\*2
- (6) Material: Plastic and silicone
- (7) Size: 172\*52\*19MM
- (8) Weight: 100g.